FOUNDATION REQUIREMENTS

ALL FOUNDATION SPECIFICATIONS SHALL BE CONSTRUED AS RECOMMENDATIONS ONLY. BECAUSE OF THE MANY VARIABLE CONDITIONS IN AN ACTUAL INSTALLATION, GRAIN SYSTEMS, INC. ASSUMES NO LIABILITY FOR RESULTS ARISING FROM THE USE OF SUCH RECOMMENDATIONS.

SITE PREPARATION

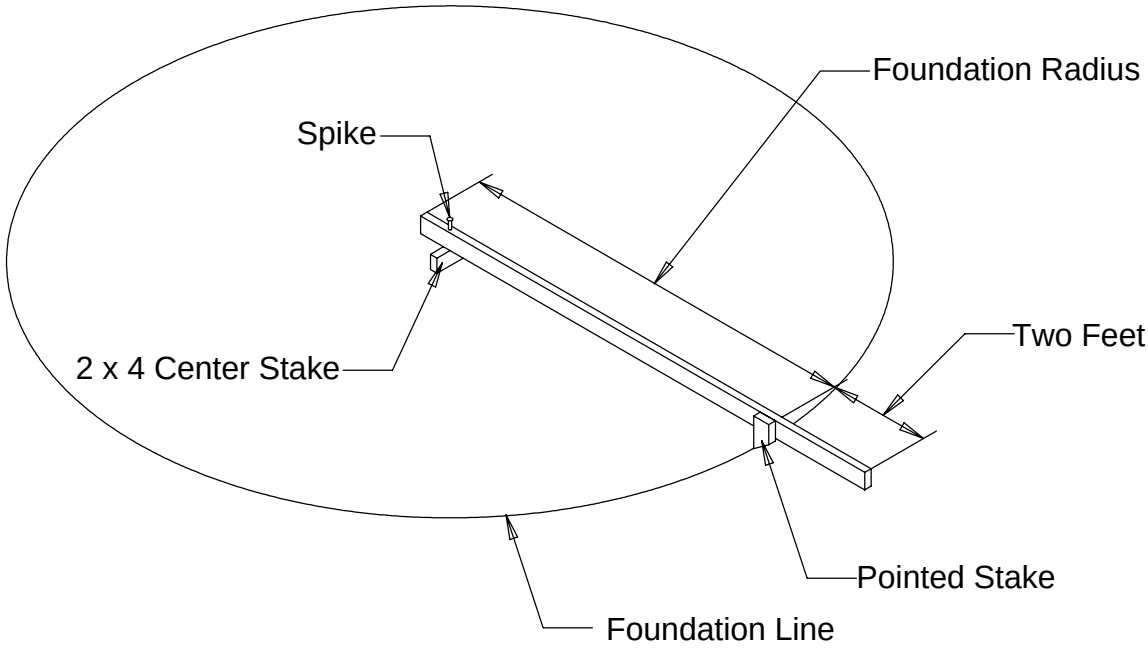

Figure #1

1. SELECTING THE PROPER SITE

The selected site should be level, firm, and free from underlying debris. The bin can be installed satisfactorily on slopes, but as the slope increases, additional labor and materials are required for the foundation. The concrete foundation surface must be level. If some fill is required, it should be watered and tamped thoroughly to prevent uneven settling from the weight of the bin. Naturally, the site must allow convenient access for easy loading and unloading, plus provide additional space for future units. Also, consider the positioning of handling equipment, availability of electricity, and the placement of fans, heaters, and gas tanks.

2. SCRIBE THE DIAMETER

Having determined the center of the site, drive a small 2 x 4 in the ground to mark the center point of the foundation. The top of the stake should be the same height as the finished foundation will be. Using one large spike, nail a straight 2 x 4 (approximately 2 feet longer than the radius of the bin) to the top of the center stake. This will enable it to swivel. Along the opposite end at a distance given in the foundation layout table, attach a sharply pointed stake. The swiveling 2 x 4 will act as a compass, enabling you to scribe the correct diameter of your foundation and later locate the anchor and stiffener bolt locations. (NOTE: Making the 2 x 4 two feet longer than the radius will allow the 2 x 4 to also be used as a leveling device and for pulling concrete.)

CIRCULAR FOUNDATION FORM

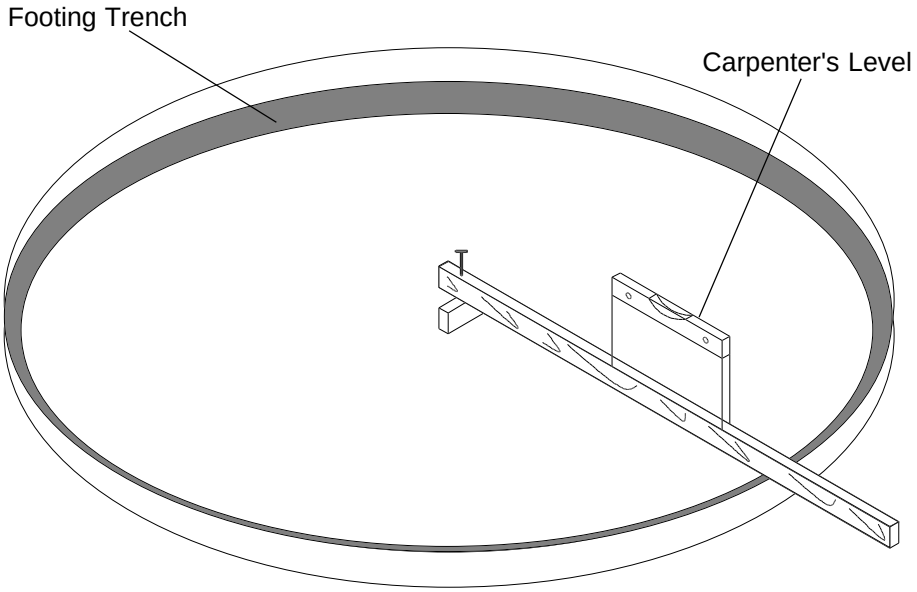

Figure #2

3. PREPARE THE FOUNDATION

Having scribed the diameter of your foundation, proceed by digging the footing of the foundation. This consists of a large circular trench dug just inside the foundation line. (Refer to foundation details for necessary information.) Once the footing has been dug, you are ready to build the forms. It is important that your form be rigid enough to hold its shape against the poured concrete. Also, the foundation must be flat. Sloped floors cannot be used in drying bins. A carpenter's level placed on top of your 2 x 4 will enable you to set the top of the forms to match the top of the center stake. Check the form work with a transit to ensure a uniform elevation for the entire foundation.

OCTAGONAL FOUNDATION FORM

There are two styles of foundation forms commonly used. The first is the circular form depicted in Figure #2. The second style can be made of 2" x 8" boards set into a square with corners blocked off to form an octagon. (See Figure #3 below.) This eight sided form will approximate a circle and can be constructed quite easily.

When the foundation form is completed install reinforcement rods by either welding or wiring in place. Place 2" of compacted sand on the inside level of the foundation. The sand is then covered with a 4 mil plastic moisture barrier. 6" x 6" wire mesh (2 mats), covering the entire area of the foundation, completes your preparation of the bin's foundation. You are now ready to begin pouring concrete.

NOTE: ALL CONCRETE IS TO HAVE A MINIMUM COMPRESSIVE STRENGTH OF 3,000 PSI @ 28 DAYS.

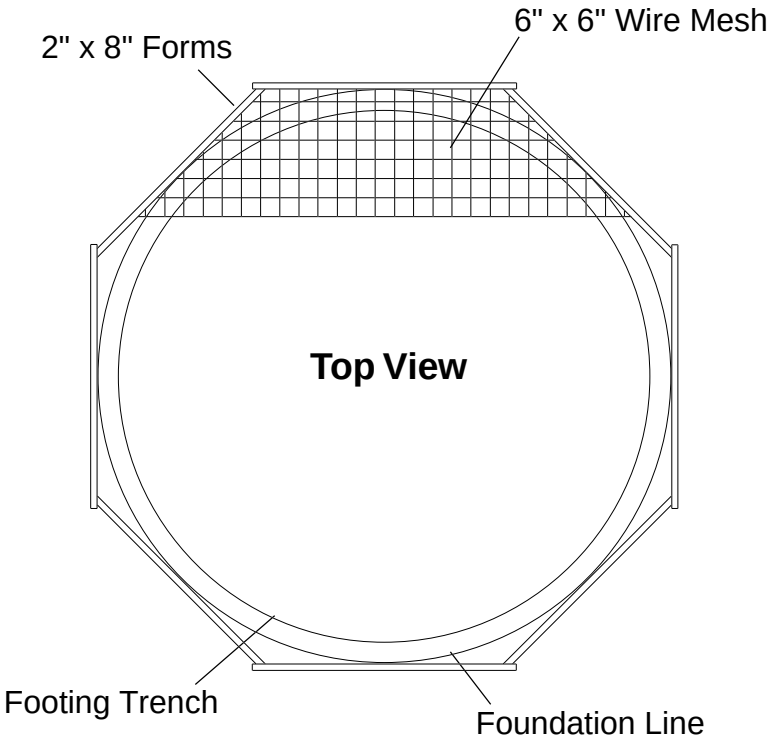

Figure #3

FROST FREE PAD

NOTES:

- Foundation site should be well drained and free of vegetation or debris.
- Foundation design is based on a minimum soil bearing capacity of 3,000 lb/ft^2. If soil bearing capacity is in doubt, contact a local soil testing engineer.
- Concrete shall have a minimum compressive strength of 3,000 PSI at 28 days.
- Requirements for reinforcement do not include overlap.
- Lap all circumferential bars 35 bar diameters and stagger all laps in plan 3'-0".
- All material used for back fill inside the ring wall should be a clean, well graded, crushed stone or sand-gravel mixture. Back fill should be placed in 6" lifts and well compacted.

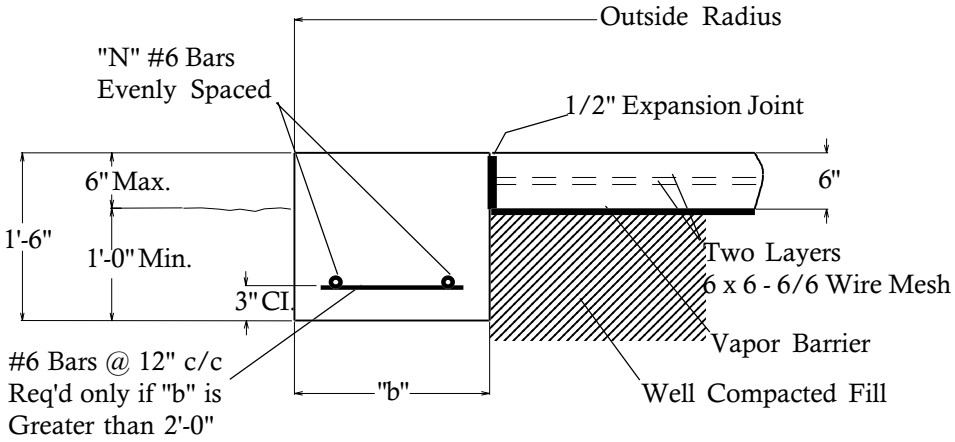

Figure #4

27' Diameter Bin

Ring Number	5	6	7	8
b	1'-2"	1'-2"	1'-10"	1'-10"
N	2	2	2	2
Outside Radius	14'-3"	14'-3"	14'-4"	14'-4"
Sq. Ft. Mesh 6 x 6 - 6/6	1100	1100	1100	1100
Length of #6 Bars	200	200	200	200
Total Cubic Yd. Concrete	16	16	18	18

ANCHOR BOLT LAYOUT

Refer to following diagram for proper bolt layout.

Having poured and leveled the concrete, use the center stake and straight 2" x 4" again to find bolt circle radius for the outside stiffener bolts. Select a starting point and stretch a pre-measured chord along the imaginary circle formed by the bolt circle radius. Consider the placement of these bolts so as not to interfere with the positions of bin doors and transitions.

Work both directions from first anchor bolt location, this will help eliminate possible error in laying out anchor bolts. On larger bins sight across starting anchor bolt and center pin and place anchor bolt on opposite side of anchor bolt radius. From this point you can work both directions from both anchor bolts.

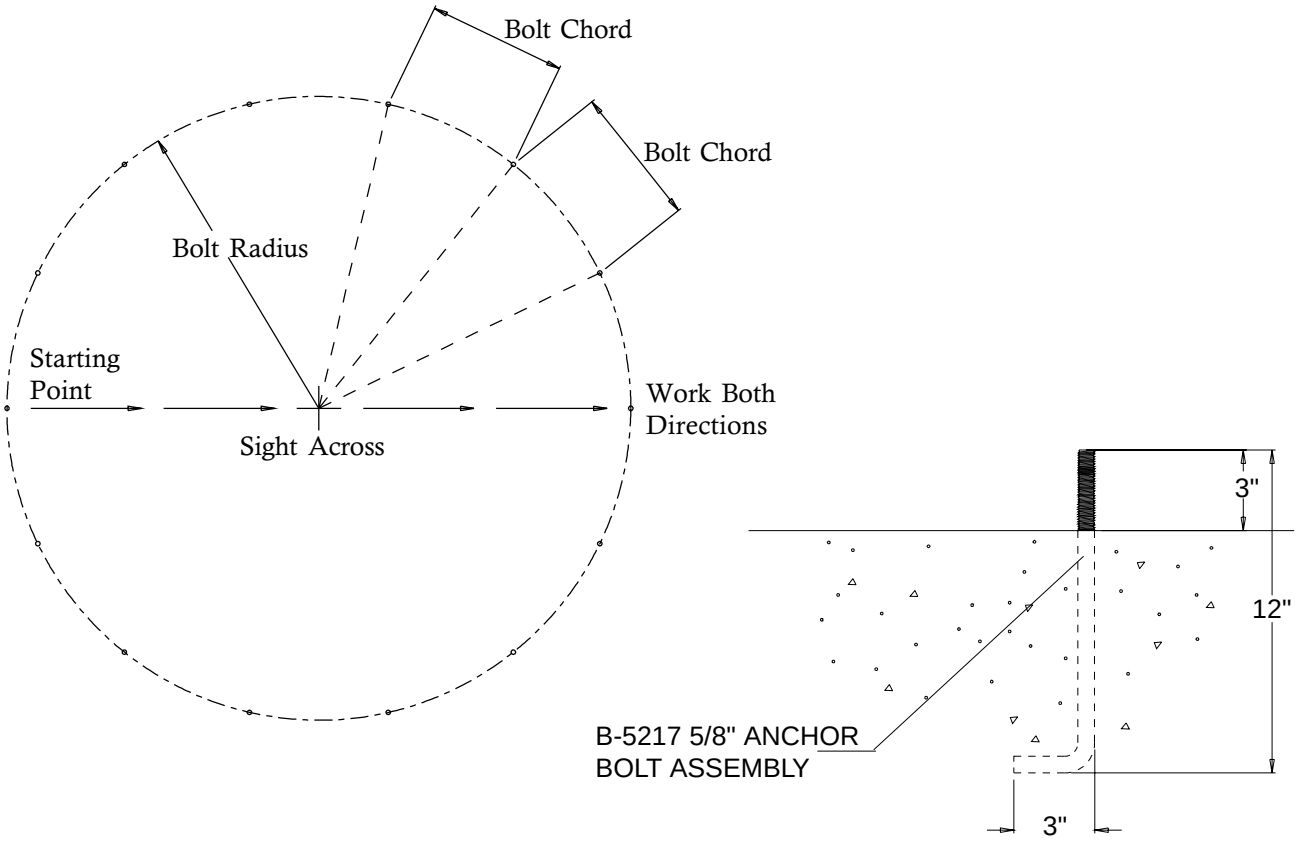

Figure #5

Bin Diameter	Bolt Circle Radius	Number of Anchors	Bolt Chord Distance
27'	13'-8.1/2"	18	4'-9.1/8"

HARDWARE

Note: Grade 8 bolts are designated by six (6) slash marks on the head.



Note: Grade 5 (hardened) bolts are designated by three (3) slash marks on the head.

Important: Do not tighten bolts to exceed the torque specifications listed below:

	TORQUE (ft. lb.)	
BOLT SIZE	MINIMUM	MAXIMUM
5/16"-18	15	20
3/8"-16	35	42
7/16" - 14	65	72
1/2" - 13	95	105

Caution: Under no circumstances shall any other bolts be substituted for those supplied by GRAIN SYSTEMS, INC.

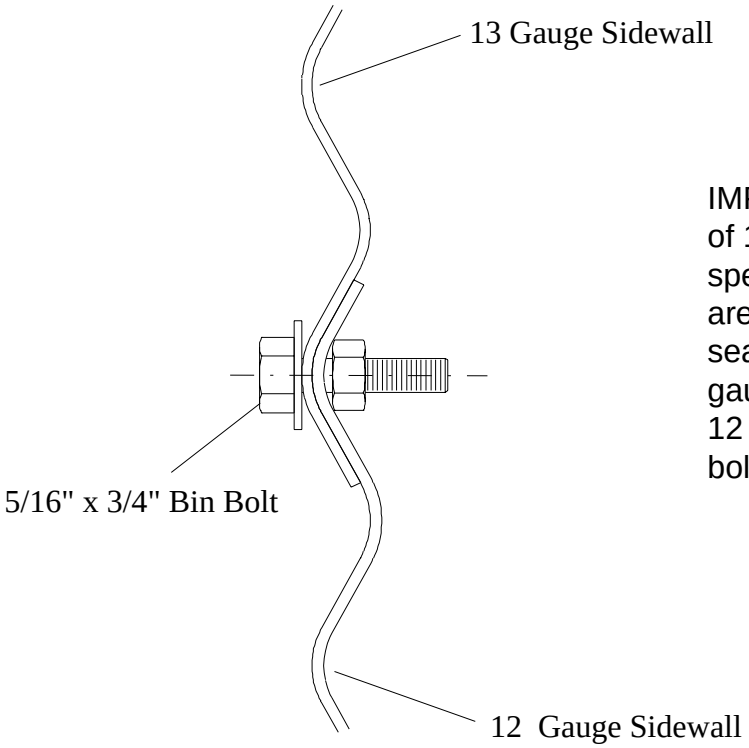

IMPORTANT: All bins using sidewall sheets of 12 gauge and heavier are furnished with special 3/8"-16 x 1" bin bolts. These bolts are to be used on all horizontal and vertical seams of the sidewall sheets which are 12 gauge or heavier. When joining 13 gauge to 12 gauge, horizontal seams only, use 5/16" bolts.

Figure #6

LOCATION OF ACCESSORIES

Below is a typical Top Dry bin layout showing suggested locations of Top Dry Accessories. When locating the manway be sure the outside ladder will not interfere with other accessories below. Roof vents should be spaced evenly around the roof. (Quantity will vary with individual systems.)

NOTE: The Top Dry system should be provided with a dependable equipment ground.

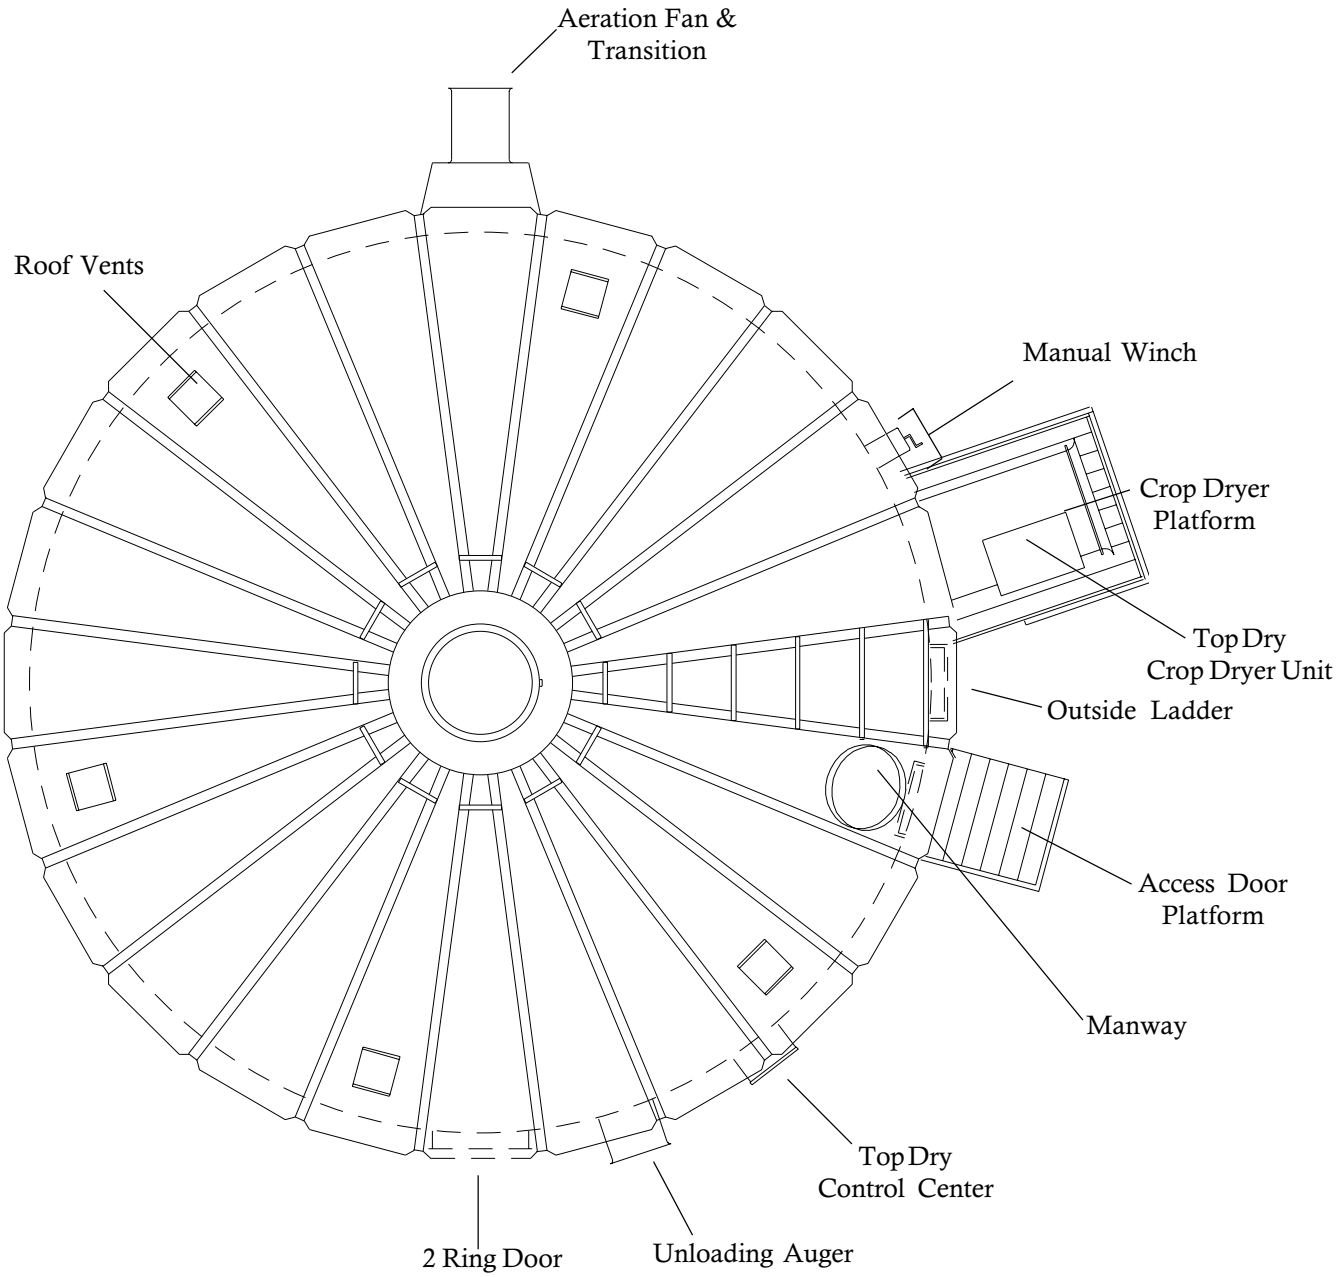

Figure #7

VERY IMPORTANT!

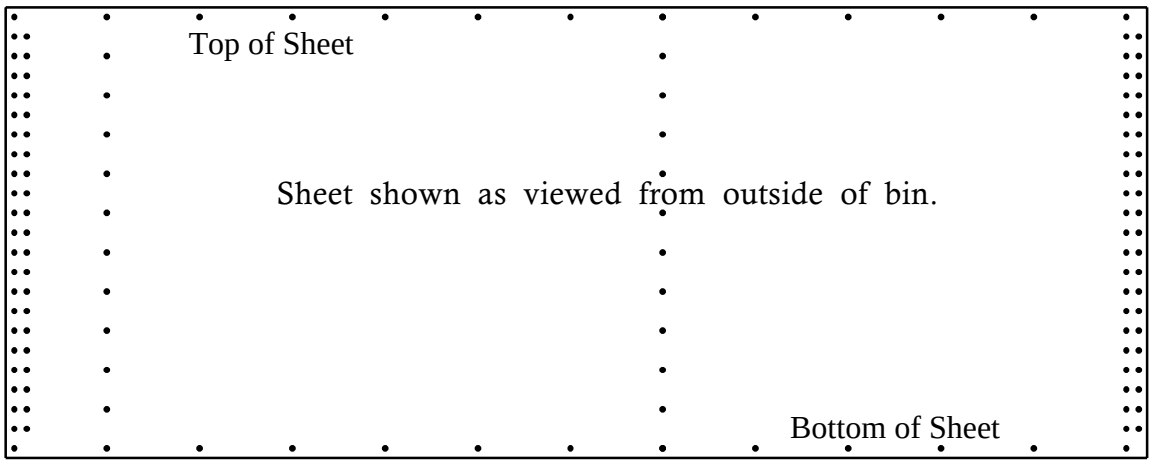

<u>All</u> sidewall sheets have a <u>top and bottom</u>!

<u>All</u> wide corrugated sidewall sheets must be placed correctly.

Failure to observe this will not allow the door to fit properly.

Carefully review the construction manual and place sidewall sheets as shown.

SIDEWALL & STIFFENER GAUGES

Door locations are shown by the underlined sidewall gauges. Actual gauge of the access door sheet located just below the Top Dry floor is in parentheses.

Top Dry Bin	Sidewall Gauges
TDM27-5	18 <u>18</u> 18 <u>20</u> 20 (16)
TDM27-6	1<u>8</u> <u>18</u> 18 18 <u>20</u> 20 (16)
TDM27-7	1<u>8</u> <u>18</u> 18 18 18 <u>20</u> 20 (16)
TDM27-8	1<u>7</u> <u>18</u> 18 18 18 20 <u>20</u> 20 (16)

27' Stiffener Layout

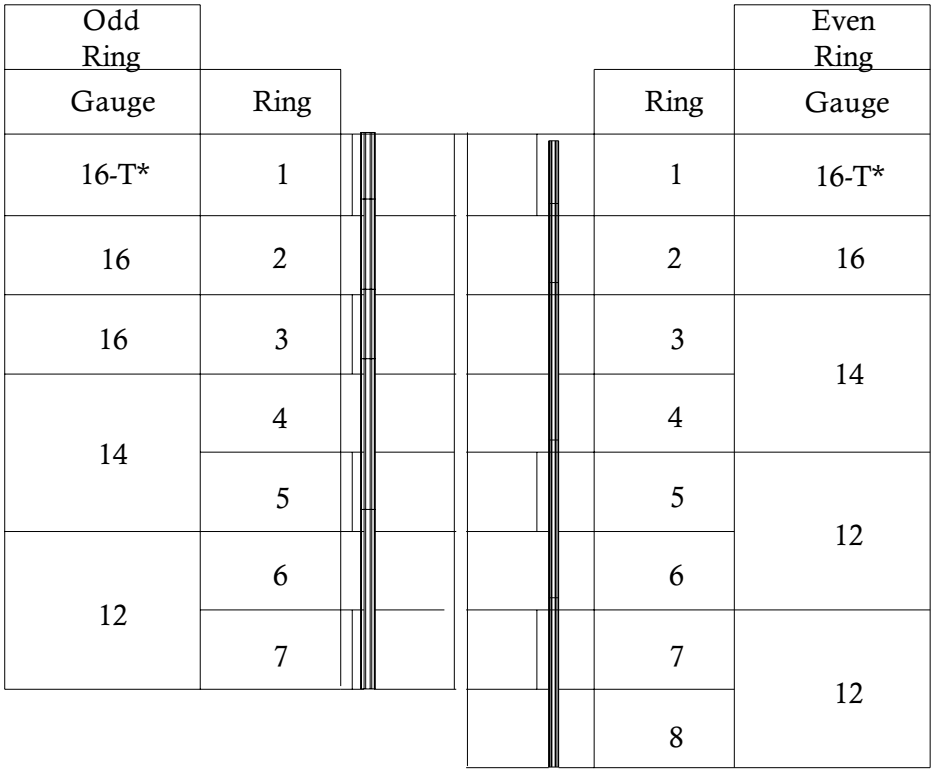

* - Top Stiffener

All Top Dry bin stiffeners are mounted on the outside of the bin. See stiffener instructions for stiffener joint details and stiffener to sidewall attachment.

Figure #8

OUTSIDE STIFFENERS

• The XX in the part numbers at the bottom will identify the Stiffener's gauge.
Example: FC-4205714 is a 2-Ring Standard Stiffener 14 Gauge.

Stiffener Description	Part No.	Overall Length	Color Code
2-Ring 10 Ga. (Base)	FC-4207210	94 27/32"	White
2-Ring 12 Ga. (Base)	FC-4207212	94 27/32"	Black
2-Ring 14 Ga. (Base)	FC-4207214	94 27/32"	Green
2-Ring 16 Ga. (Base)	FC-4207216	93 13/16"	Blue
2-Ring 8 Ga. (Base)	FC-4207308	88 3/16"	Yellow
2-Ring 8 Ga.	FC-4206308	87 15/16"	Yellow
2-Ring 10 Ga. Trans.	FC-42062	94 19/32"	Purple
2-Ring 12 Ga.	FC-4205712	94 19/32"	Black
2-Ring 14 Ga.	FC-4205714	94 19/32"	Green
2-Ring 16 Ga.	FC-4207516	93 9/16"	Blue
2-Ring 18 Ga.	FC-4207518	93 9/16"	Orange
2-Ring 16 Ga. Top	FC-4206516	85 9/16"	Blue
2-Ring 18 Ga. Top	FC-4206518	85 9/16"	Orange
1-Ring 12 Ga.	FC-4205912	50 19/32"	Black
1-Ring 14 Ga.	FC-4205914	50 19/32"	Green
1-Ring 16 Ga.	FC-4207416	49 9/16"	Blue
1-Ring 18 Ga.	FC-4207418	49 9/16"	Orange
1-Ring Top 16 Ga.	FC-4206616	41 7/16"	Blue
1-Ring Top 18 Ga.	FC-4206618	41 7/16"	Orange
Splice	FC-42076	10 11/16"	---

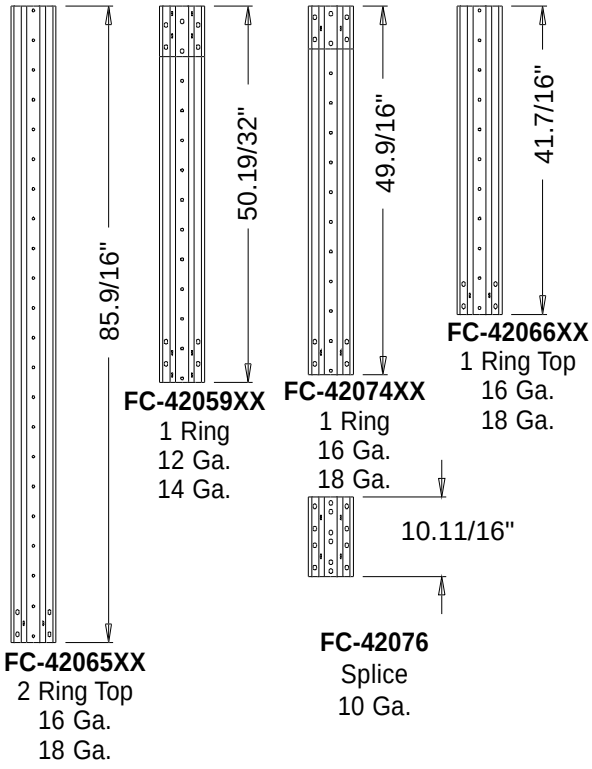

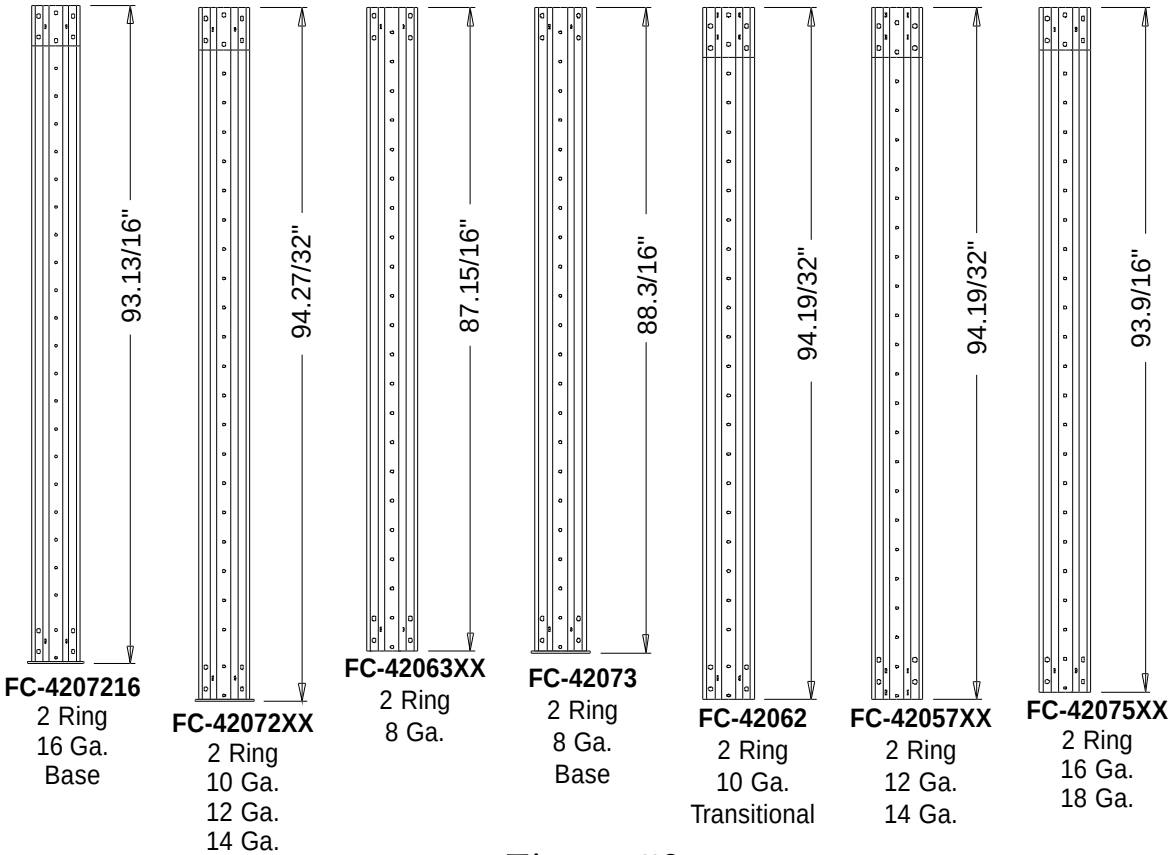

Figure #9

REV. 3-15-96

TOP STIFFENER STARTING LOCATION

Refer to Figure #10, for proper location of top stiffeners. On the overlap of the stiffeners, and on the splice, use 3/8" x 1" hex bolts, a washer on thee nut side connection. Refer to the stiffener layout, Figure #8, for stiffener usage.

All stiffeners are outside the bin wall. Use 5/16" x 3/4" Grade 5 bin bolts with head and neoprene washer to the inside of the bin wall. Refer to proper charts and illustrations on the previous two pages for proper location of stiffeners and sidewall sheets.

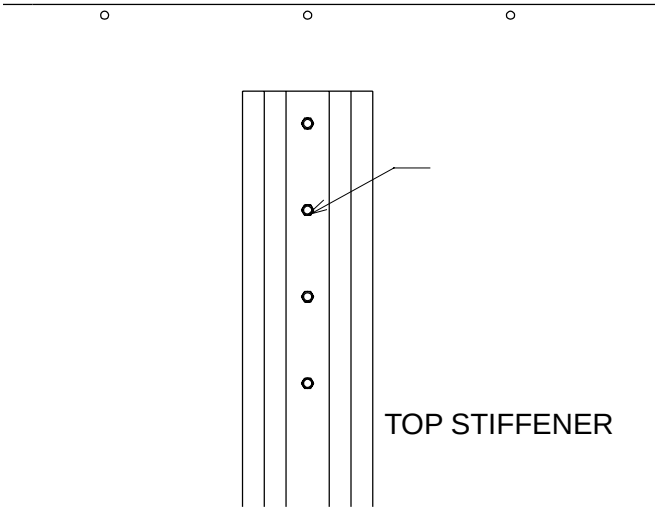

FRONT VIEW

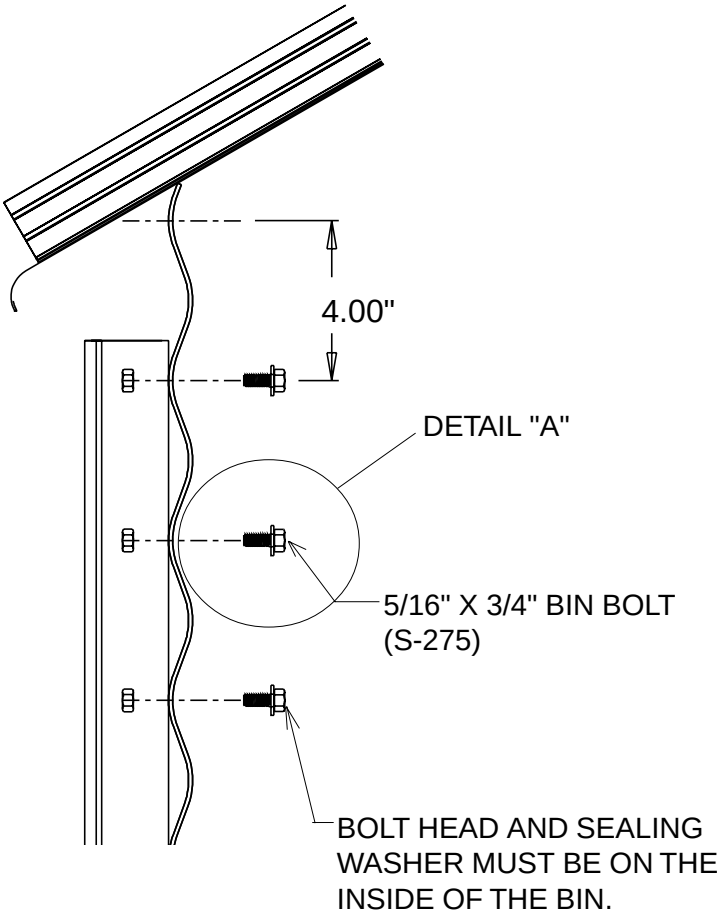

SIDE VIEW

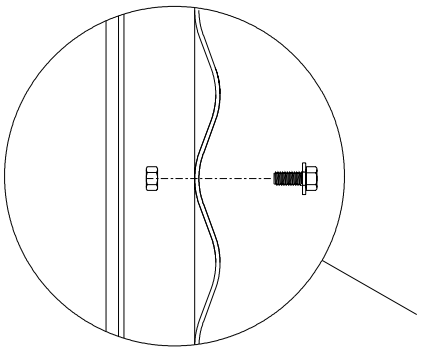

DETAIL "A"

Figure #10

STIFFENER INSTALLATION & LOCATION

When installing bottom stiffeners, you may find that in some cases the stiffener with base plate attached will not rest on the foundation (due to unlevel concrete, etc.) Shim plates have been furnished and should be used to fill opening between base plate and concrete.

IMPORTANT: If shim plates are not used where required, the downward pressure of the stiffeners will not be transferred directly to the foundation, and bin failure could result.

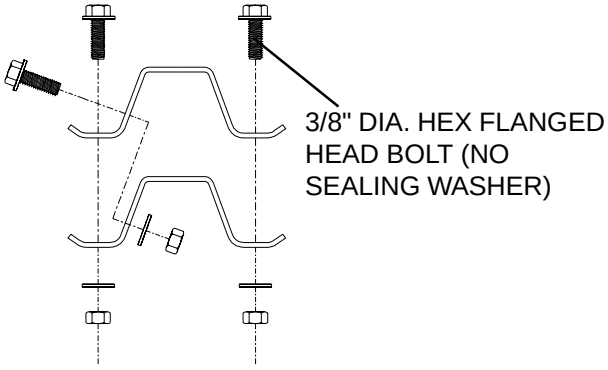

SPLICE PLATE JOINT (TOP VIEW)

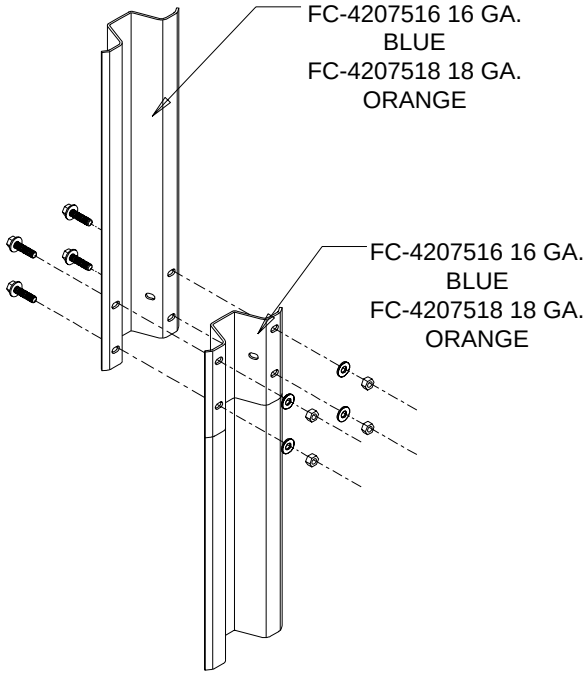

OFFSET JOINT CONNECTION DETAIL

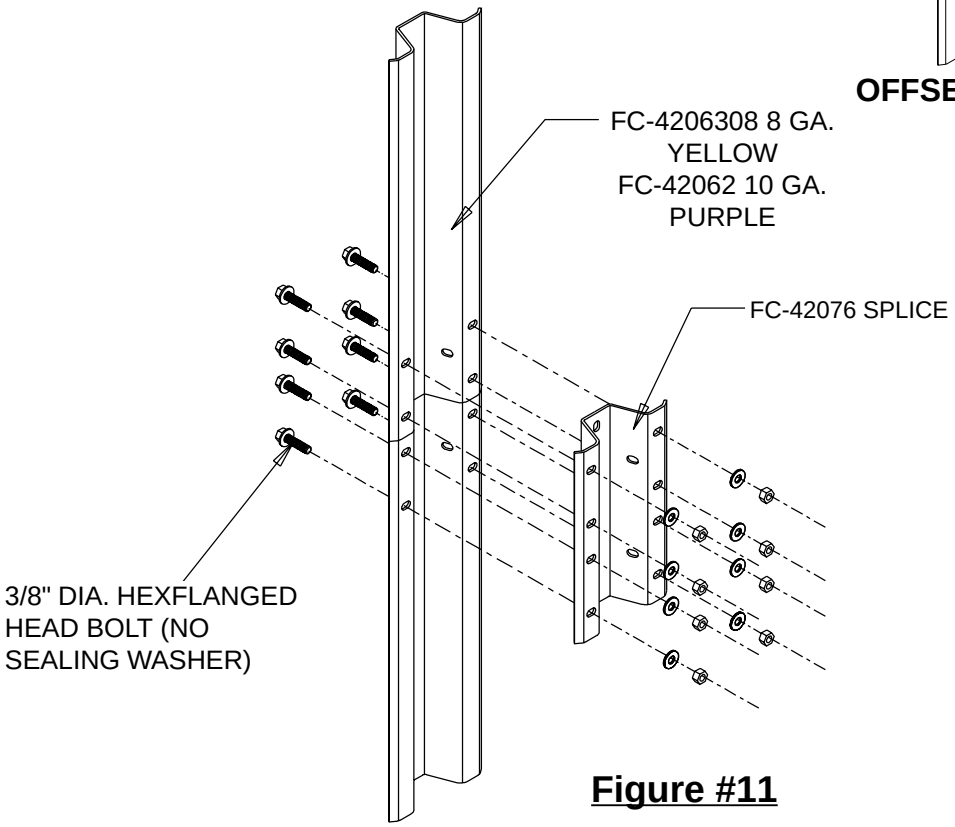

Figure #11

BOLTING REQUIREMENTS

•

2 STIFFENERS PER SIDEWALL SHEET

Sidewall Gauge	Horizontal Seam	Vertical Seam	Stiffener To Sidewall	Overlap Seam
17 Thru 20	5/16" x 3/4" [10]	5/16" x 3/4" [42]	5/16" x 3/4" [20]	5/16" x 3/4" [2]

All bolts are standard bin bolts with neoprene washers. For horizontal and vertical seam bolts, the bolt head and neoprene washers are on the outside of the bin.

Note: For the splice plates FC-42076 use 5/16" x 1.1/4" bolts for the stiffener to sidewall connections.

Standard (17 Gauge Thru 20 Gauge) Sheet Bolting Detail
(Viewed from outside of the bin)

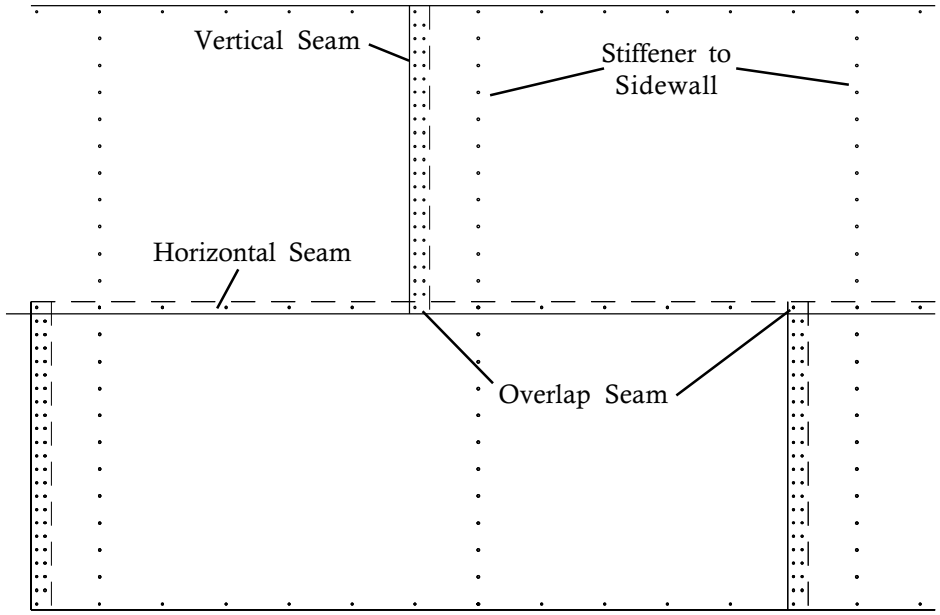

Figure #12

STIFFENER & SEAM LOCATIONS

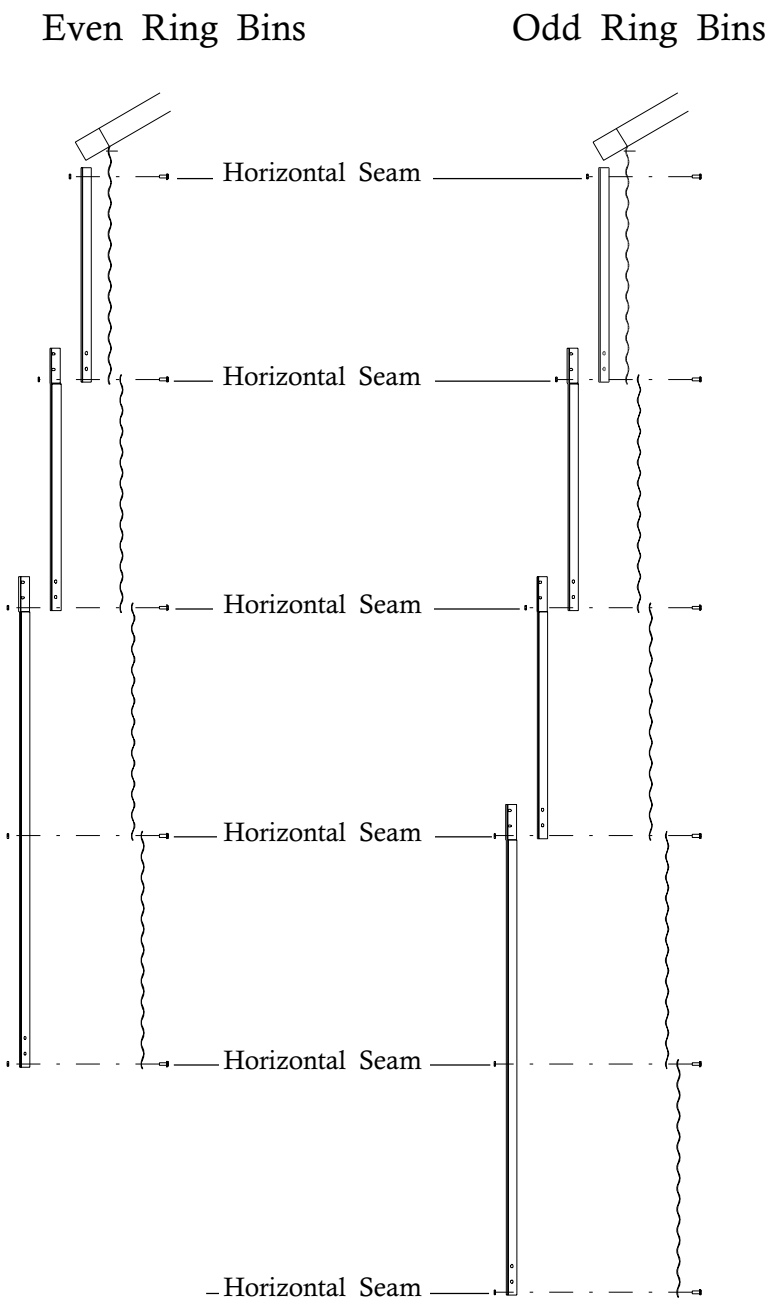

2 stiffeners per sidewall sheet
Top Dry stiffener starting location -18' to 36'
4" corrugation stiffener only

Figure #13

GAUGE	COLOR CODE
22	White
20	Red
19	Black/Yellow
18	Orange
17	Pink/Light Blue
16	Blue
15	Brown/Red
14	Green
13	Yellow/Blue
12	Black
11	Pink
10	Light Blue
9	Blue/Orange
8	Yellow

Note: The rope caulking is installed before each sheet is assembled. Apply rope caulking between the last vertical row of bolts and edge of outside sheet. There is sufficient caulking for all vertical seams on storage and drying bins. Wipe sheet clean where caulking is to be applied.

Before bolting the sidewall sheets together, check that you have the proper gauge steel for the first ring. The higher gauge numbers denote the thinner materials. (For example: 20 gauge material is thinner than 14 gauge.) In erecting Top Dry grain bins the thinnest material always goes on top. The first sidewall ring you assemble will be the second ring from the top of your bin. Check the various gauges of your bin with the Color Code Chart and begin building accordingly.

Once you have selected the proper gauge material, begin assembling the sidewall sheets according to the instructions on the following page.

- For bolting specifications on stiffeners, see Figure #10.

CAULKINGDETAIL

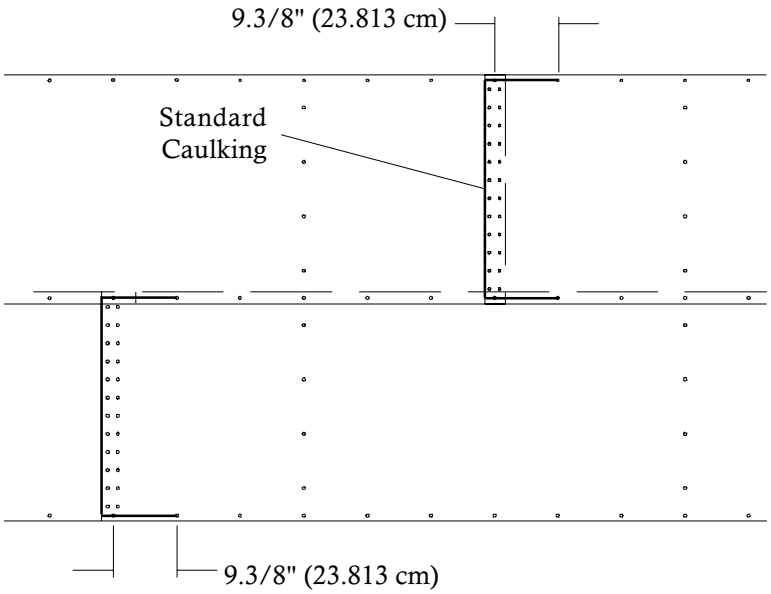

Standard Sidewall Sheets
As Viewed From Outside

Figure #14

SIDEWALL CONSTRUCTION INSTRUCTIONS

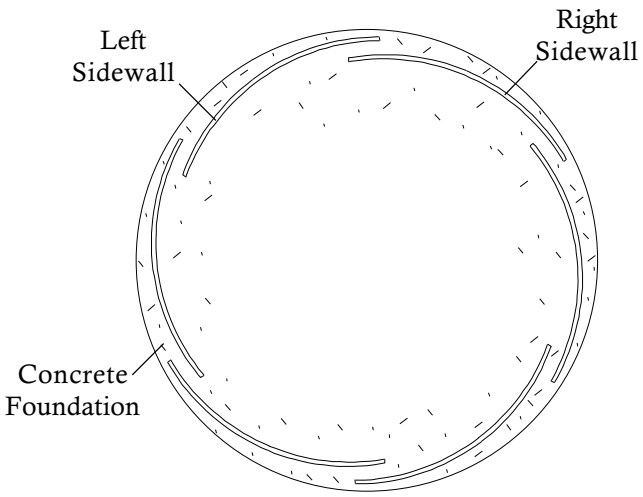

Figure #15

Using correct size bin bolts throughout, begin assembling sidewall sheets end to end (overlapping the same way throughout) until the ring is complete. All body sheet bolts are to be installed with the bolt head and its neoprene washer to the outside and the nut on the inside. Do not tighten bolts until all sheets are assembled and form a complete ring. Tighten the bolts in sequence, starting from the center and work to the edge in both directions. This permits the sidewall sheets to draw-up evenly.

After assembling the second ring, lift the top ring sheets in place, add top stiffeners, build the Top Dry floor, then the roof.

Note: The sidewall sheets used for the top ring are punched to accommodate the eave flashing bolts.

Note: The fan entrance sheet and access door are located in the second ring. Attach the top stiffeners, leaving out the (7) bolts indicated in Figure #15 at each stiffener location. Install the flashing bolts from the outside.

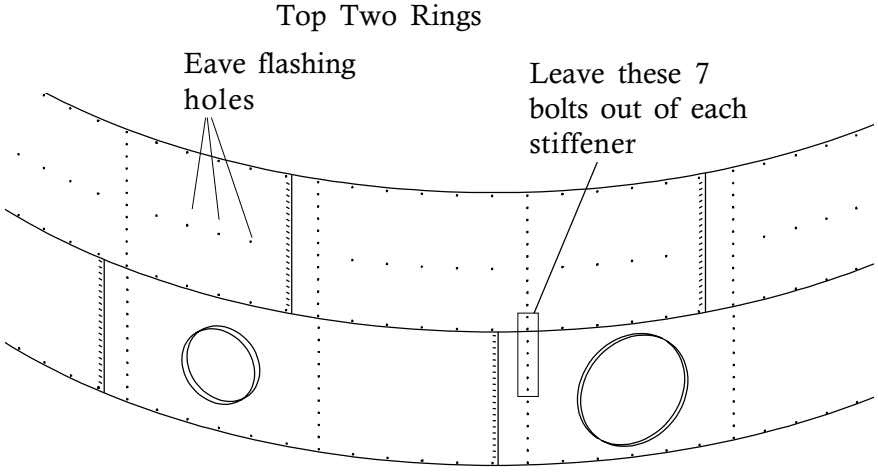

Figure #16

STIFFENER AND BRACKET INSTALLATION

Install the stiffeners on the outside of the bin (as shown in Figure #12) and the wall brackets on the inside of the bin. The wall brackets are to be positioned with the bracket's top hole matching the first hole up from the horizontal seam (not counting the horizontal seam). Bracket to sidewall connection using a 3/8" x 1.1/2" bolt (S-2086), head outside, with a neoprene washer (S-3558) against the wall on the inside, and a corrugation spacer (S-7041).

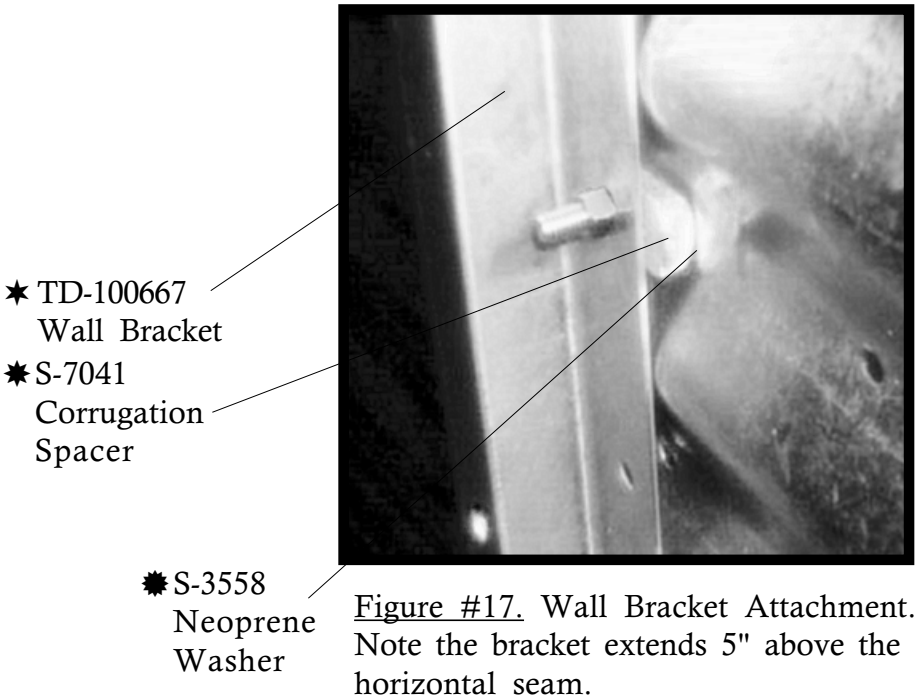

Figure #17. Wall Bracket Attachment. Note the bracket extends 5" above the horizontal seam.

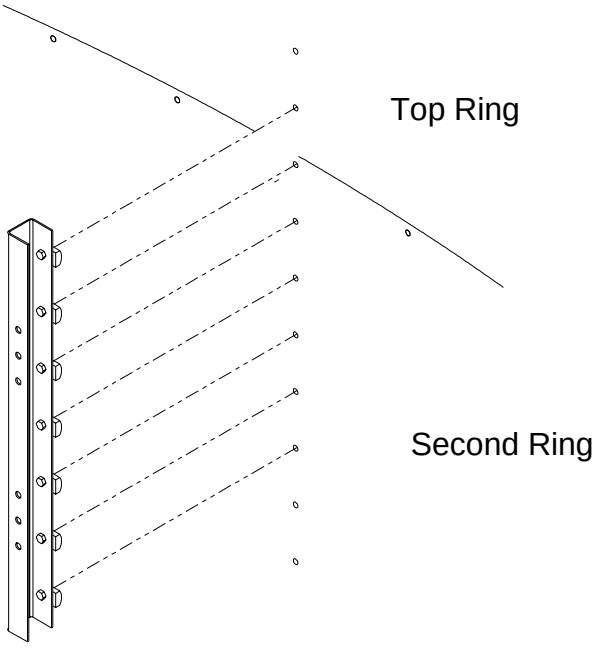

Figure #18 - Wall Bracket Attachment. Note the bracket extends 5" above the horizontal seam with the top bolt hole facing out.

"C" CHANNEL INSTALLATION

Fasten the rolled "C" eave members to the wall brackets in the upper 2 holes of the top set of three (3) holes leaving the bolts loose.

Install the splice plates at the rolled "C" eave member seams using 3/8" x 1" hex bolts and nuts. Tighten all bolts.



Figure #19. "C" Channel Attachment. Do not tighten bolts until all of the channel members are on and splice plates are attached.

Figure #20

CENTER COLLAR ASSEMBLY

Add channel braces and brace plates to center collar as shown using 3/8" x 1" bolts and nuts. (Do not attach cross channel until floor is done.)

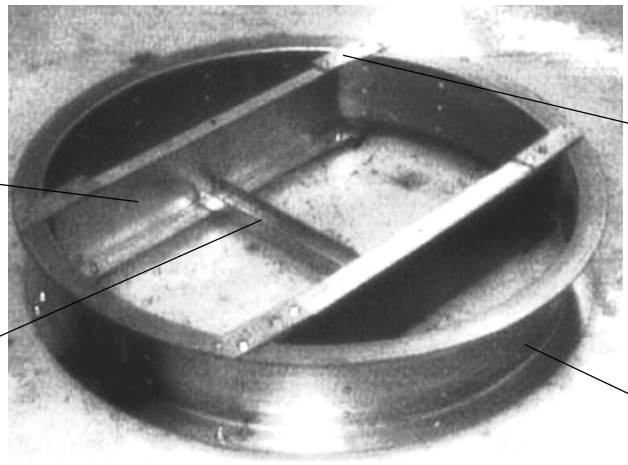

Figure #21

Position the center collar at the center of the bin and raise it to 9'-1.5/8" measuring from the bottom edge of the collar to the concrete.

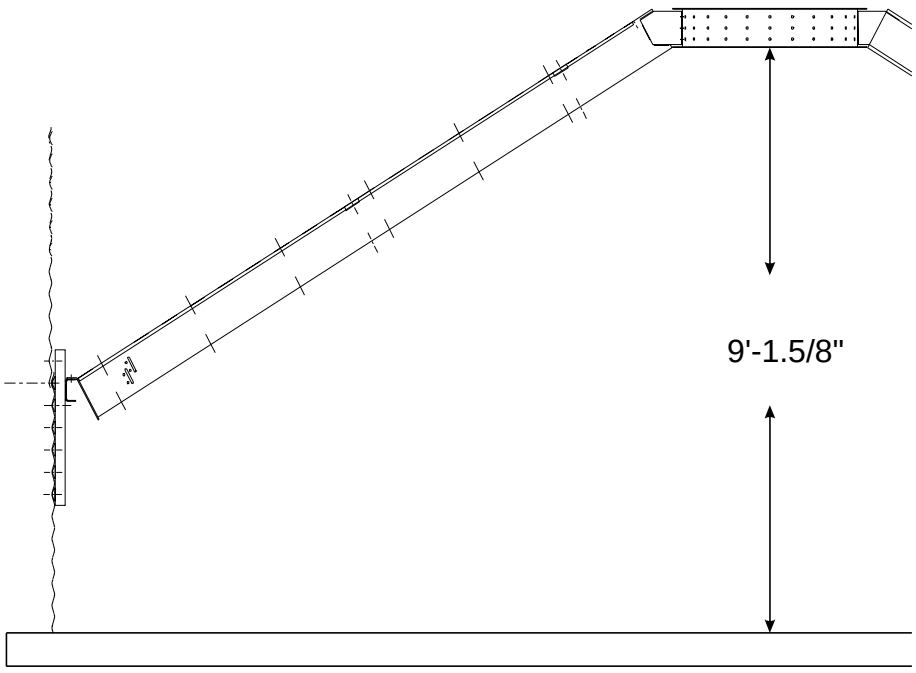

Figure #22

RAFTER INSTALLATION & FLOOR SUPPORT ANGLE ATTACHMENT

When installing the rafters, set the lower clip end on the "C" eave member. Leave the bolts to the center collar and the eave member loose until all rafters are in place. Use 3/8" x 1" hex bolts and nuts to connect the center collar and eave member to three (3) rafters at 90 degrees to each other. These first three (3) rafters should all face the same direction. Once the first three rafters are installed and aligned, tighten their bolts. Every other rafter should alternate direction. Tighten all bolts after installing all the rafters. IMPORTANT: There are left & right rafters. Be sure to alternate left, right, left, right, etc..

The floor sheet support purlins can now be installed using 5/16" x 3/4" bin bolts. There are three (3) different lengths of purlins to fit between the rafters. Insert the straight tab of the purlin through the upper slot in the left hand rafter when looking toward the bottom of the rafters. Bolt the bent end of the purlin to the right hand rafter in the upper two (2) holes. After inserting the next purlin tab, bolt the first purlin tab to the second purlin. Continue around the bin alternating lengths as the rafter facings did. Tighten all bolts.

Standing inside of bin slide left end of angle support through upper-most slot on rafter. Attach right end to rafter with two bolts.

Repeat this procedure between each rafter, alternating short and long angles.

Floor Support Angle Assembly
TD-100812 Long (13)
TD-100813 Short (13)

Figure #23

SPECIAL ANGLE PURLIN ASSEMBLY

Where two rafters face the same direction use 5/16" x 3/4" bin bolts and nuts with the three bent edges facing toward the sidewall, the longest edge on top.

TD-100782
Special Bay Purlin

Figure #24

The upper purlins are bolted using 5/16" x 1.1/4" bolts in the 6th hole counting up from the sidewall.
The middle purlins are bolted in the 3rd hole counting up from the sidewall.
Bolt purlins to rafters (as shown in the photo) with interim angle facing the center of the bin.

TD-100782
Special Bay Purlin

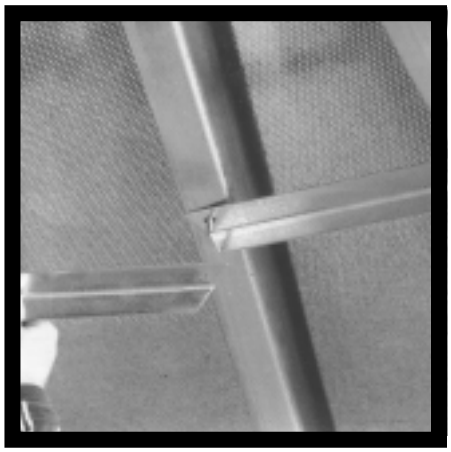

TD-100779
Intermediate Purlin

Figure #25

42" FAN DIFFUSER INSTRUCTIONS & INSTALLATION

Bolt the long side of the hangers to the endmost slots of the top plate (TD-100665) as shown below.

Hold the top plate up under the bottom flange of the "C" channel in front of the fan opening. Mark and drill four 3/8" holes into bottom flange using diffuser hangers as a guide. Using 5/16" x 3/8" bolts and nuts bolt the top plate to the "C" channel.

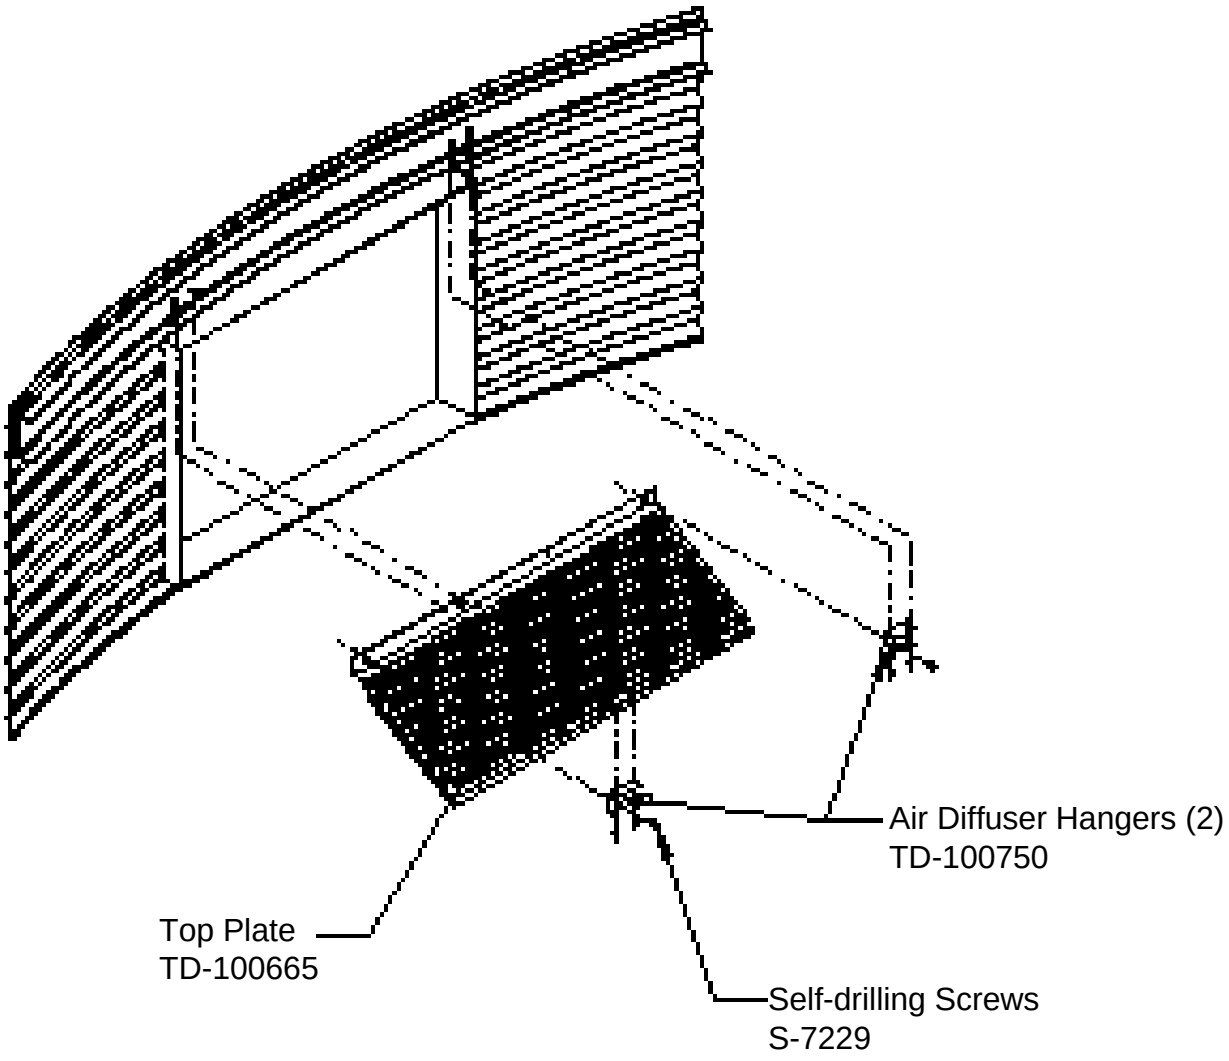

Figure #26

42" FAN DIFFUSER (CONT.)

Attach front plate to the top plate with four (4) 1/4" x 1" self-drilling screws.

Bolt the side brackets to the front plate slot with the angle outward. field drill two (2) holes (on inside corrugation hills) through the sidewall and install 5/16" x 3/4" bin bolts and nuts.

Position the side plates on each side with the angle outward and fasten in place using six (6) 1/4" x 1" self-drilling screws.

NOTE: The corner bolt will need to be removed through the side plate, side bracket and front plate.

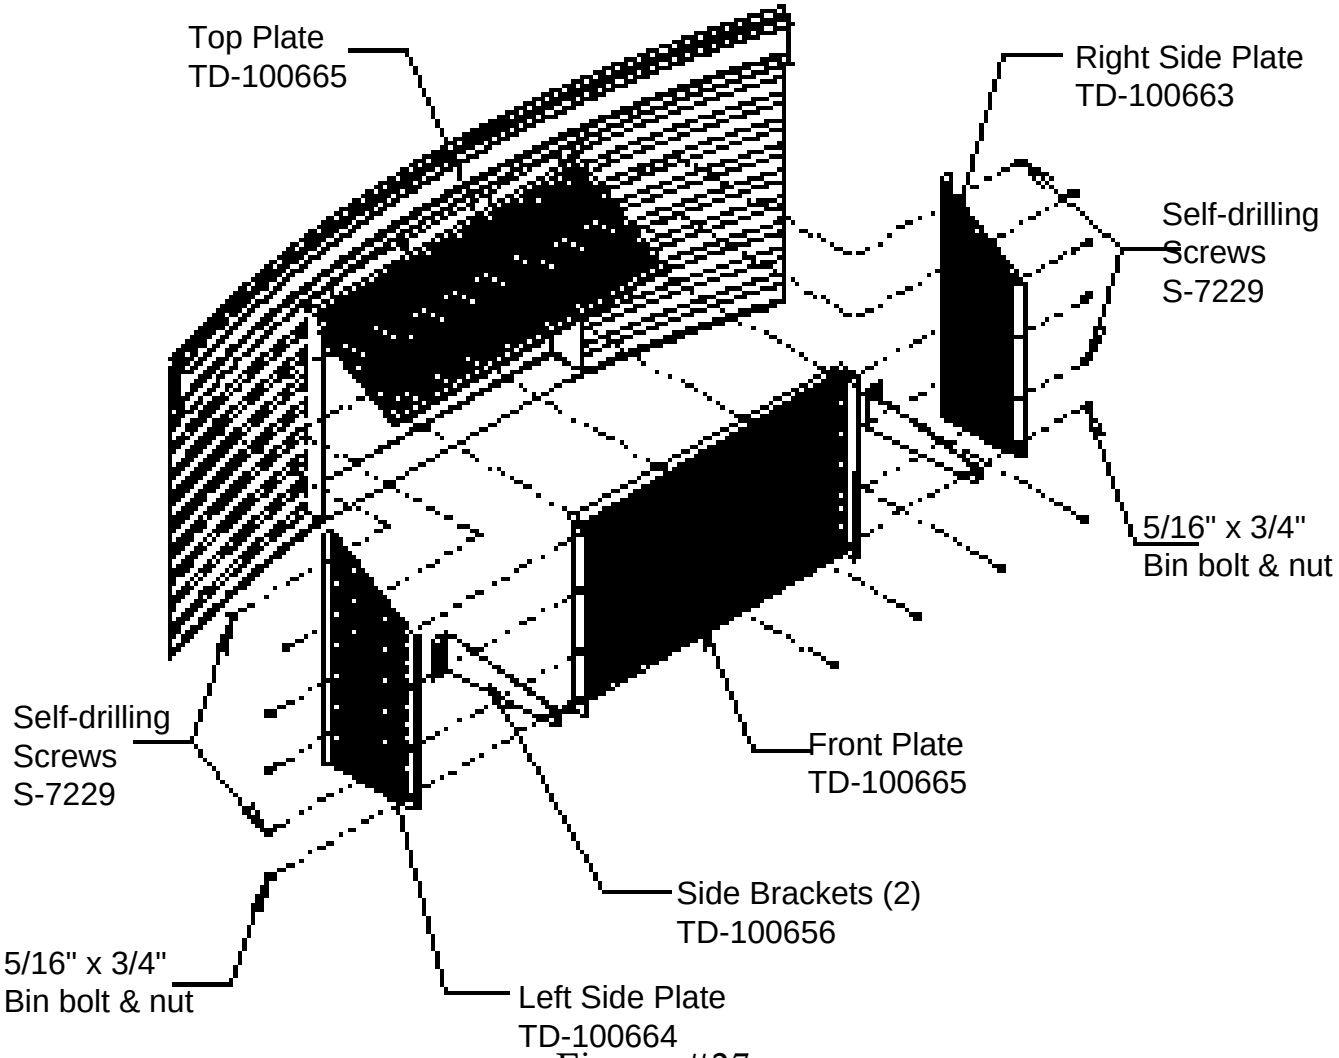

Figure #27

DUMP HOPPER INSTALLATION

Pre-assemble the dump hoppers, dump brackets, and flashing angles to the floor sheets. Place a dump hopper under the floor sheet and align it with the pre-punched large hole. Place a flashing angle on top of the sheet across the outer edge of the hopper entrance with the interior of the angle facing the sidewall. Screw down through the angle, sheet, and hopper with 5/16" x 3/4" self-tapping screws.

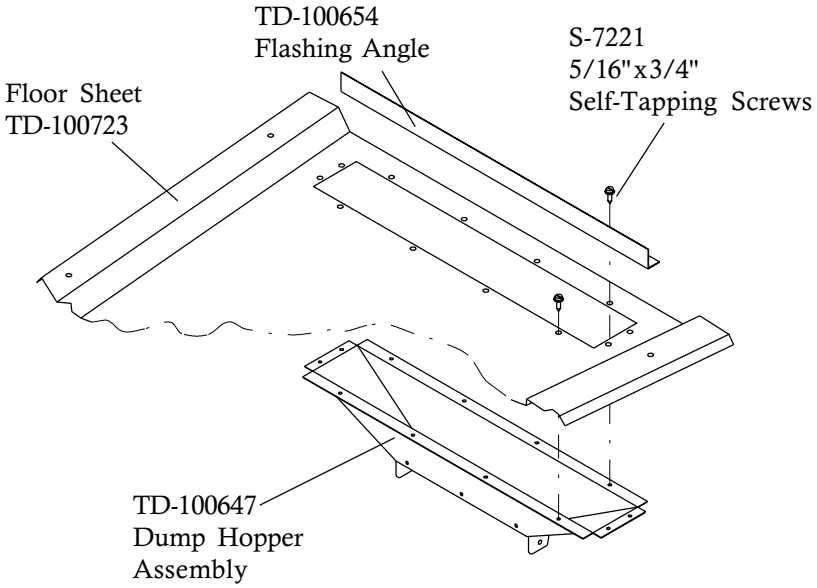

Figure #28

Place an intermediate discharge cover plate over the intermediate dump opening and screw down.

Figure #29

FLOOR SHEET INSTALLATION

Now the assembled sheets can be placed over the rafter framework. As the sheets are placed and overlapped they are to be screwed down to the rafters using 5/16" x 3/4" self-tapping screws, leaving the third and eighth holes empty.

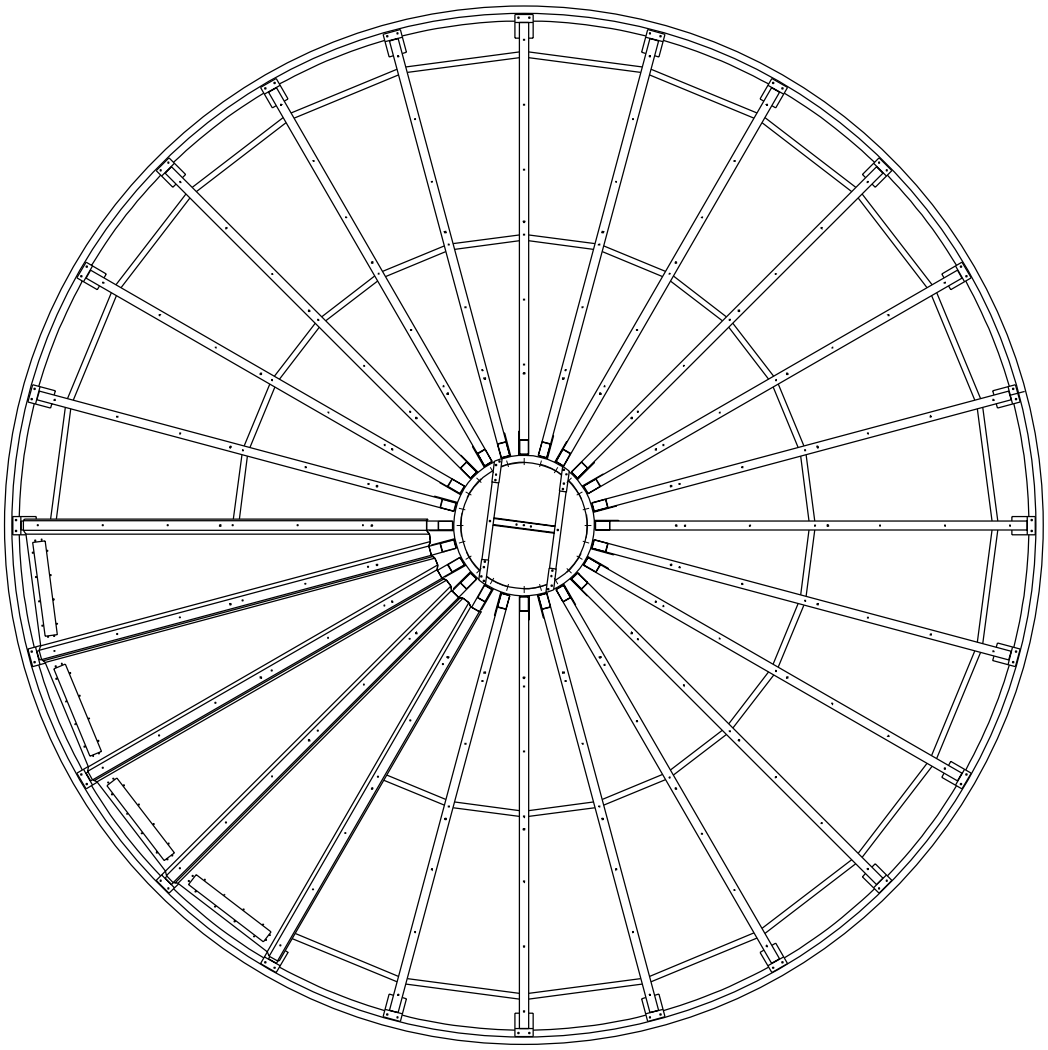

Figure #30

LEVELING BAND POST INSTALLATION

Finish assembling the center collar by adding the cross channels (TD-100004), pulley assembly, cable and lift plate.

Install the leveling band posts on the floor as shown.

The third and eighth holes in the floor sheet indicate the location of the leveling band posts. Attach posts with 5/16" x 1.1/4" bin bolts (S-277). The third hole from the bottom of the sheet, there will be 7 posts (1 every third sheet, except the last bay will cover five sheets). In the eighth hole there will be 5 posts (1 every fourth sheet). After all of the posts have been installed fill the unused holes with 5/16" x 1.1/4" bin bolts.

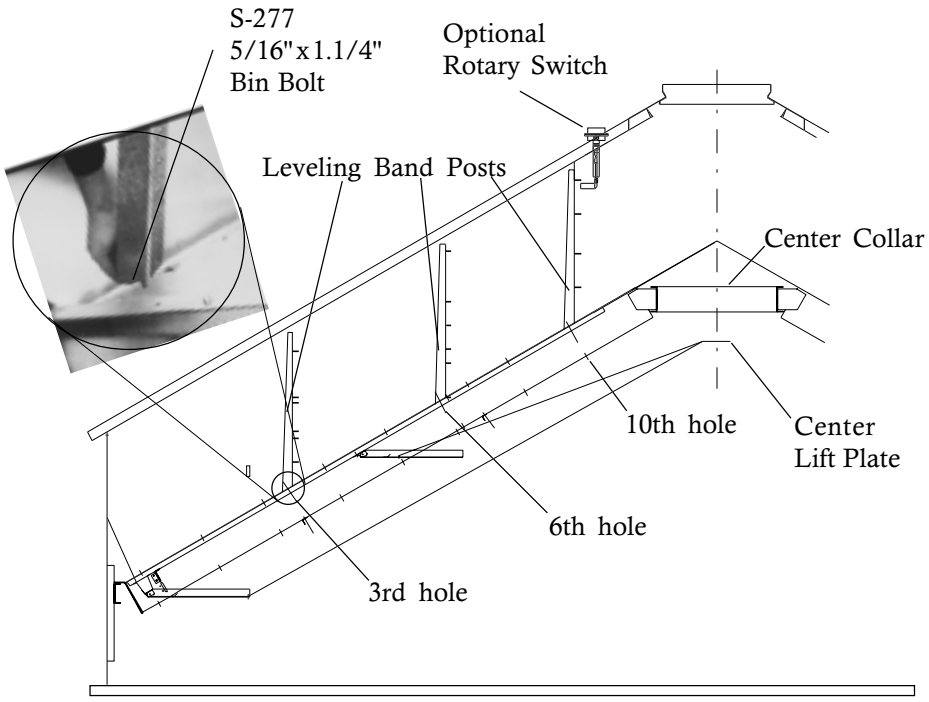

Figure #31

FLASHING BOLT INSTALLATION

Install the eave flashing bolts (5/16" x 1.1/4") through the sidewall and tighten first nut. Note at the vertical sidewall seams, one bolt is turned around to avoid interference with eave flashing (refer to photo).

Left bolt on the each vertical sidewall seam level with the eave flashing bolts (as viewed from inside the bin) is to be installed bolt in, nut out, as shown in the photo to the right.

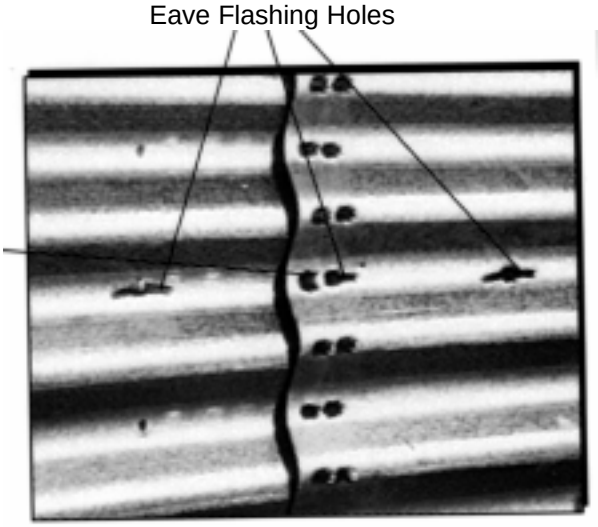

Figure #32

EAVE FLASHING INSTALLATION

Install the eave flashing centered on the floor sheet (1 per) with the bent edge towards the sidewall install a fender washer (S-3671) and nut. Screw the flashing to the flashing angle at the dump hopper opening and screw the flashing pieces together where they overlap with #10 self drilling (S-280) screws.

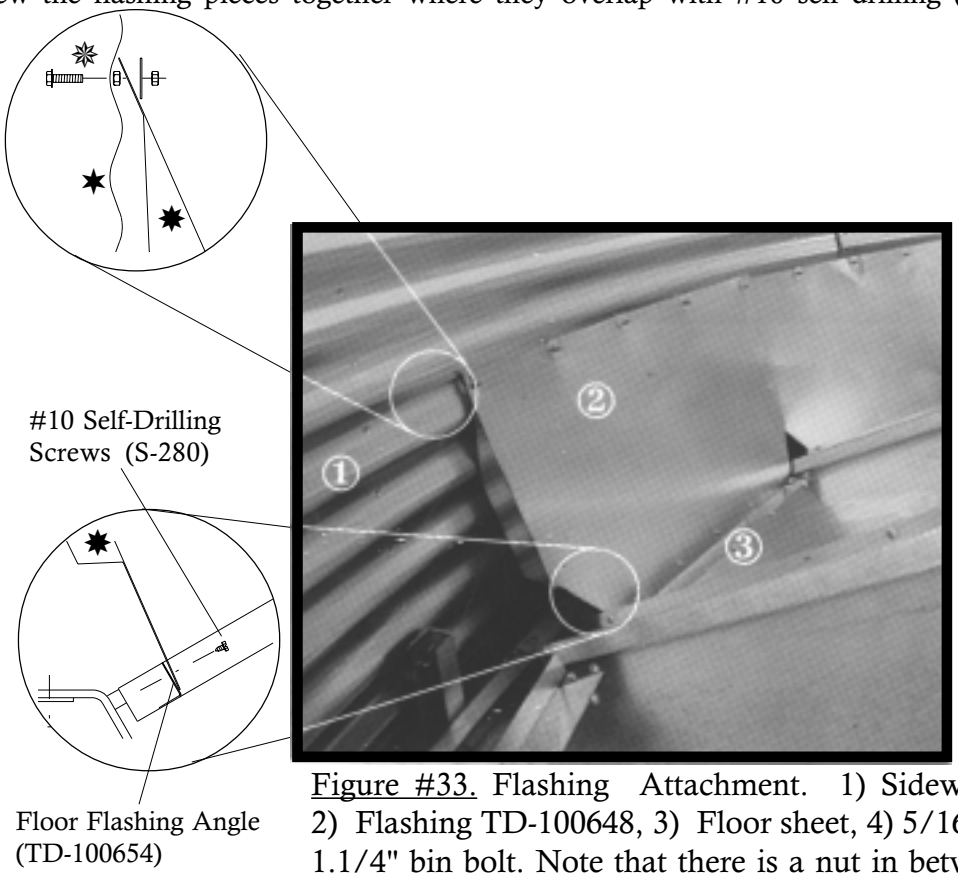

Figure #33. Flashing Attachment. 1) Sidewall, 2) Flashing TD-100648, 3) Floor sheet, 4) 5/16" x 1.1/4" bin bolt. Note that there is a nut in between the sidewall sheet and the flashing sheet.

DISCHARGE PLATE INSTALLATION

Install the discharge plate assemblies over the flashing with a fender washer and nuts letting the bottom bracket rest against the flashing. Screw the discharge plate together where they overlap with #10 self-drilling screws (S-280).

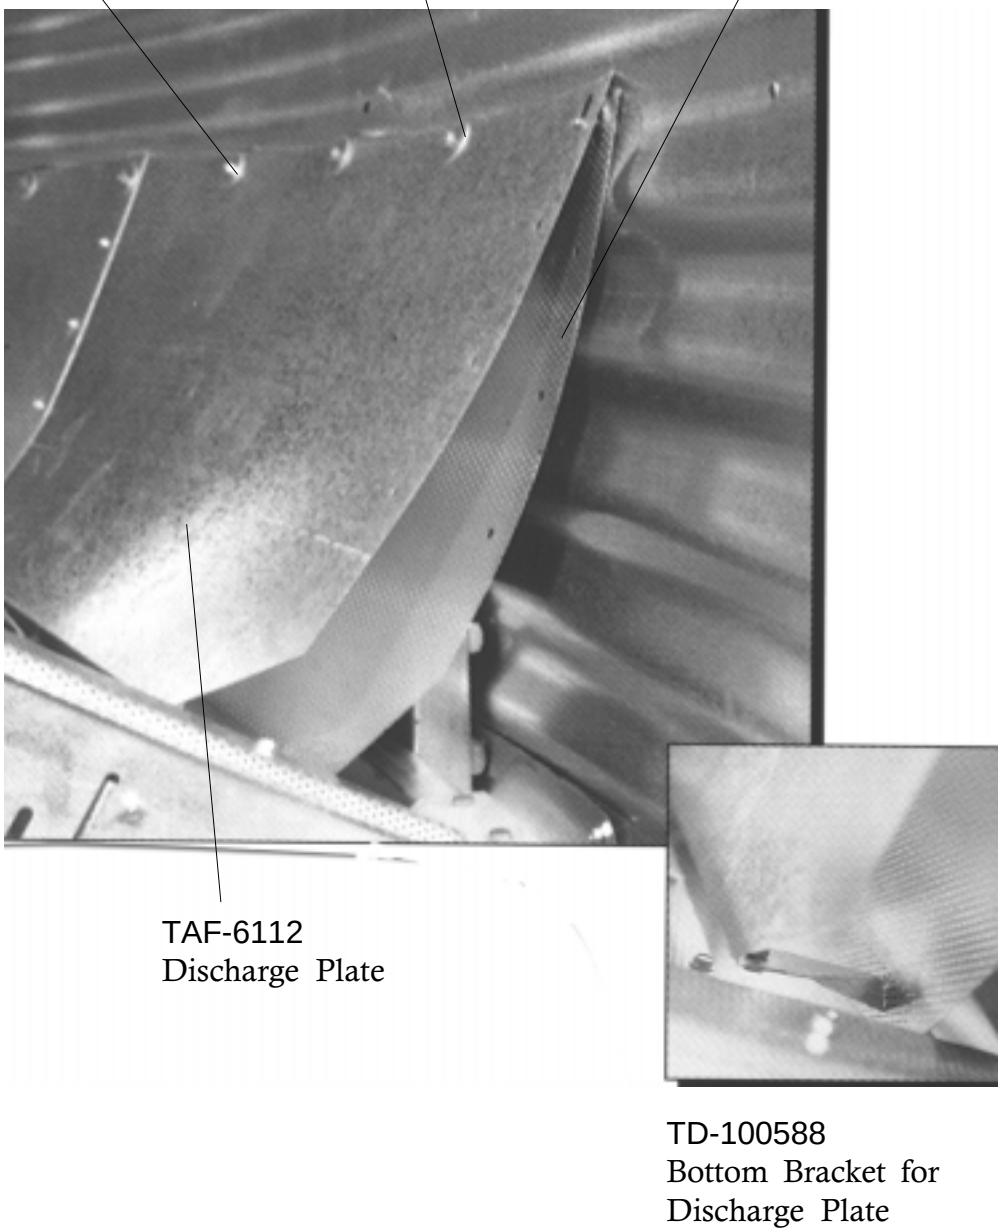

Figure #34

FLASHING SPLICE INSTALLATION

The flashing splice pieces can now be attached to the eave flashing to seal around the rib of the floor sheet as shown with (S-280) #10 self-drilling screws.

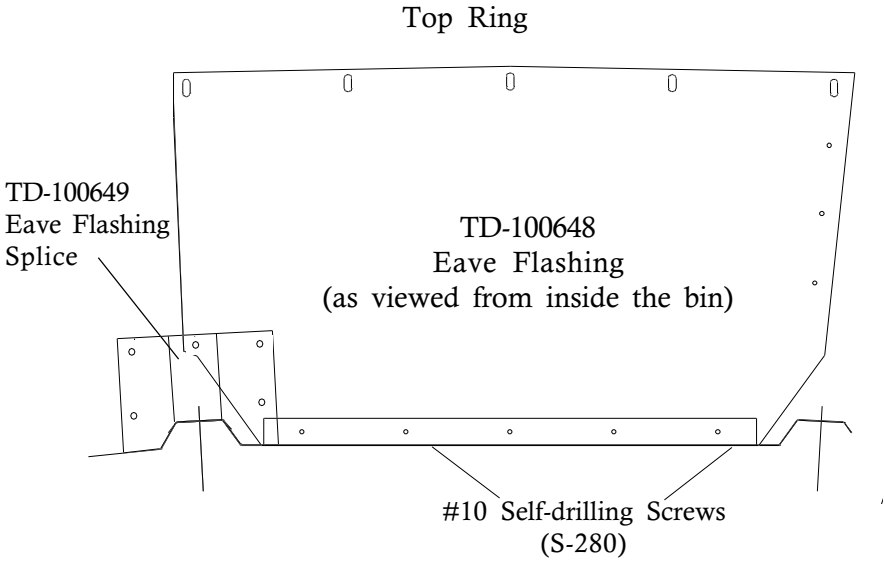

Figure #35

OUTER DUMP CHUTES

Bolt a TD-100598 angle dam to each dump chute using (3)1/4" x 5/8" bolts and nuts, as shown below. Use 1/4" x 5/8" bolts and double nuts to fasten dump chutes to hopper. Do not tighten first nut down. Lock second nut to first nut and make sure chutes raise and lower freely.

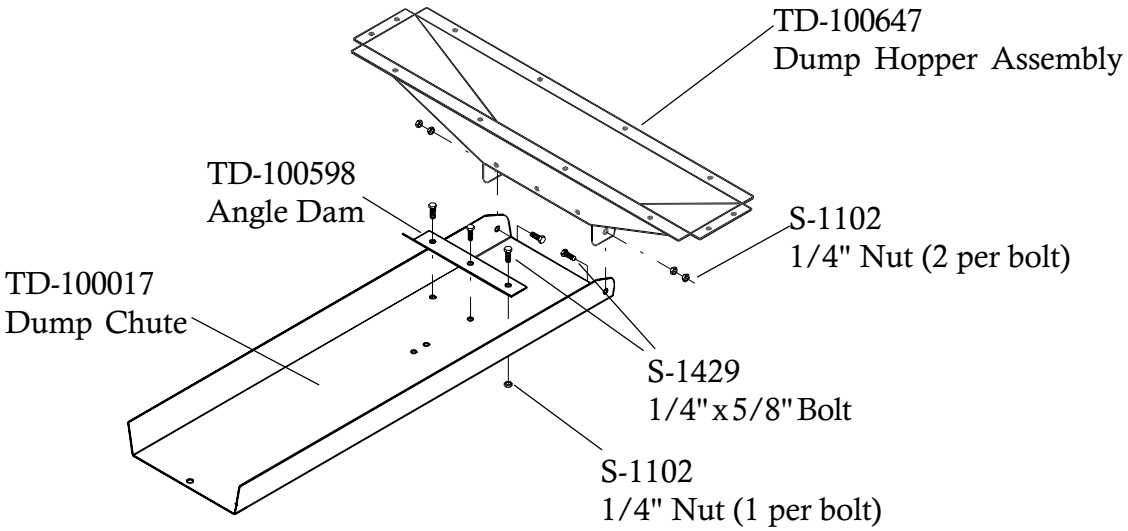

Figure #36

PULLEY ASSEMBLY

Position the pulley assembly to the cross angle in the middle of the center collar assembly. Use a 3/8" x 1" hex head cap bolt to fasten assembly to the cross angle. Position the pulley in the direction of the desired winch location on the sidewall.

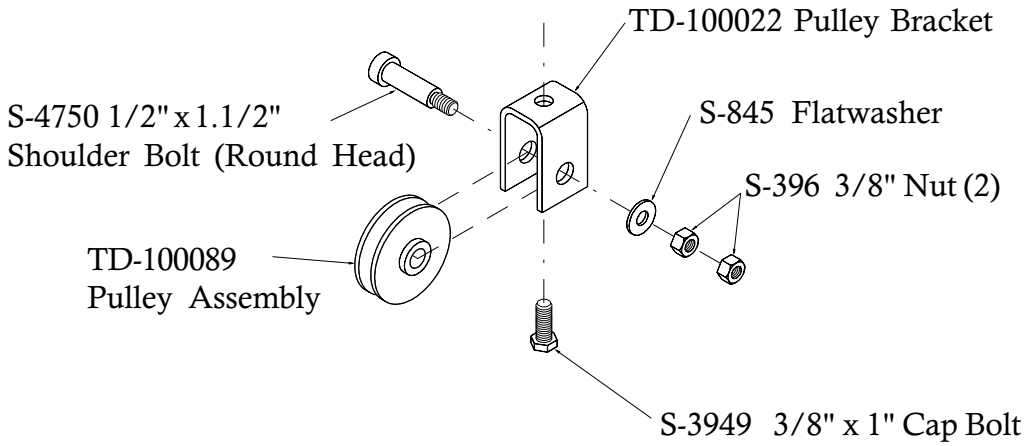

Figure #37

Field drill (5) 3/8" diameter holes as shown at left. Attach the pulley assembly with 5/16" x 3/4" bolts with the neoprene on the inside of the bin.

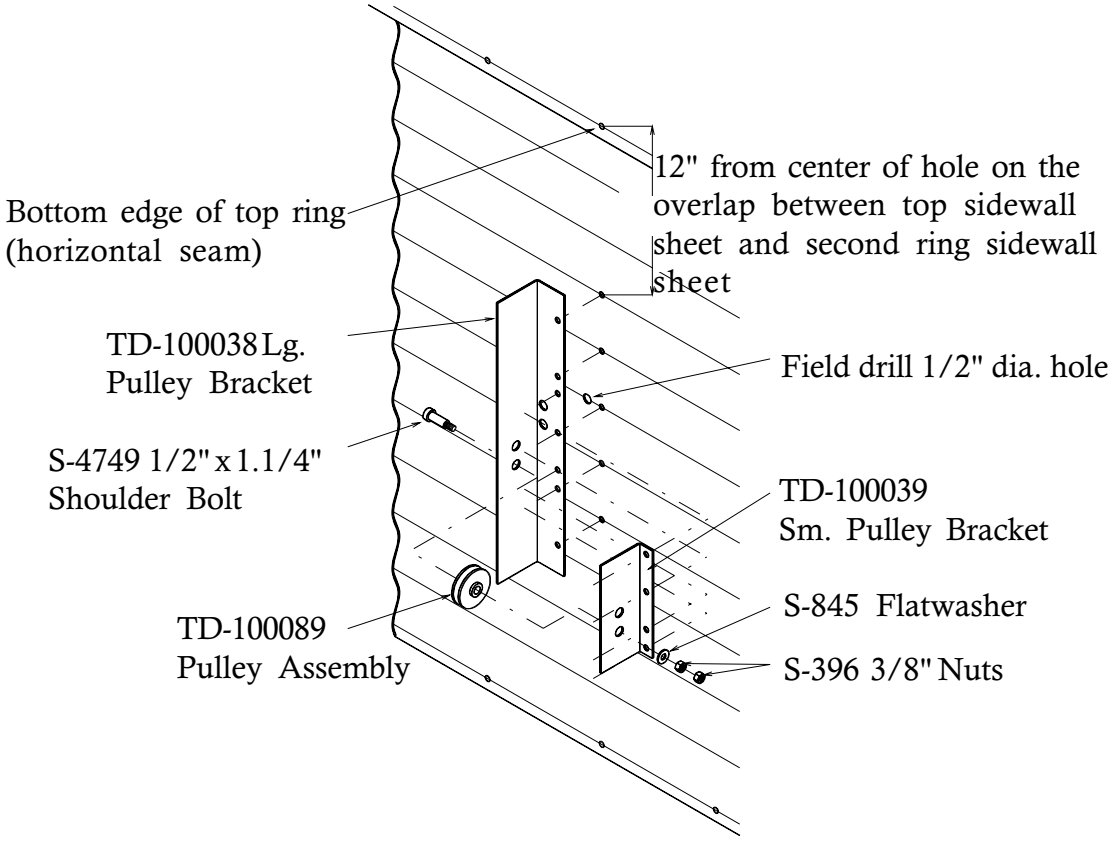

Figure #38

DUMP CHUTE CHAIN ASSEMBLY

Attach all 27 dump chute chains directly to the lift plate as shown in diagram below.

Install all chains using "S" hooks (S-4692) to attach the chains to the dump chutes and lift plates. Keep excess chain at the lift plate. Adjust the chains until the chutes are approximately level when the lift plate is in the closed (up) position. Once the chains are uniformly adjusted, crimp the "S" hooks closed. Check when attaching the "S" hook to the end link on a chain that the end has not been cut open. If this is found remove the end link or shift up and use the next link in chain.

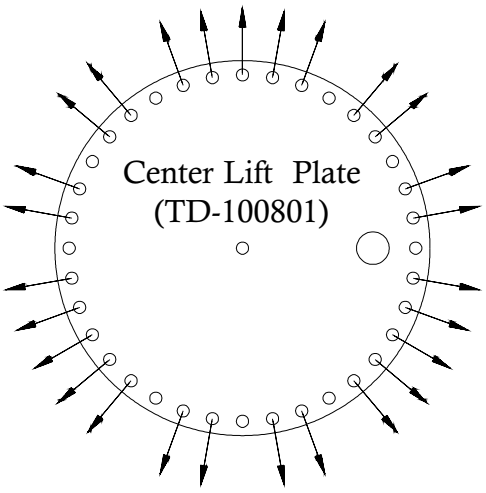

Chain leading to outer chutes (140")
TD-100508

Chutes in closed position

Crimp "S" hooks after final chute adjustment

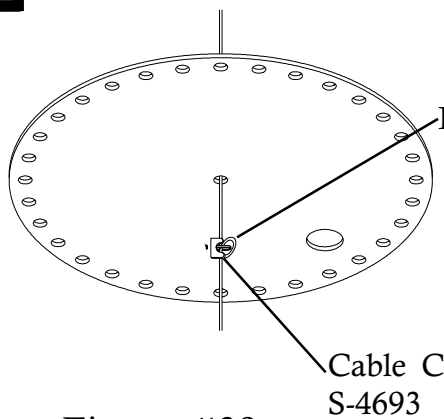

Figure #39

CENTER CONE ASSEMBLY

Bolt the sections together to form perforated cone as shown below. Use 1/4" x 5/8" bolts and nuts to attach sections together.

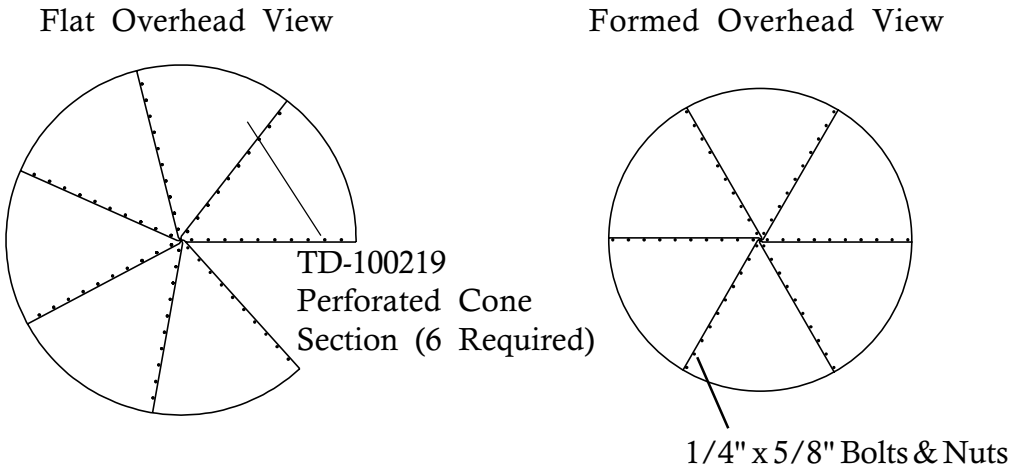

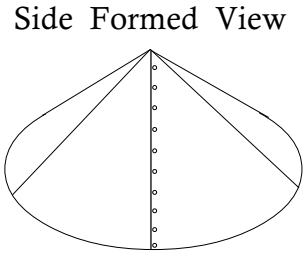

CENTER CONE INSTALLATION

After chains have been adjusted, install cone over the center collar. Fasten Cone Assembly with (12) #10 x 3/4" self-drilling screws (S-280).

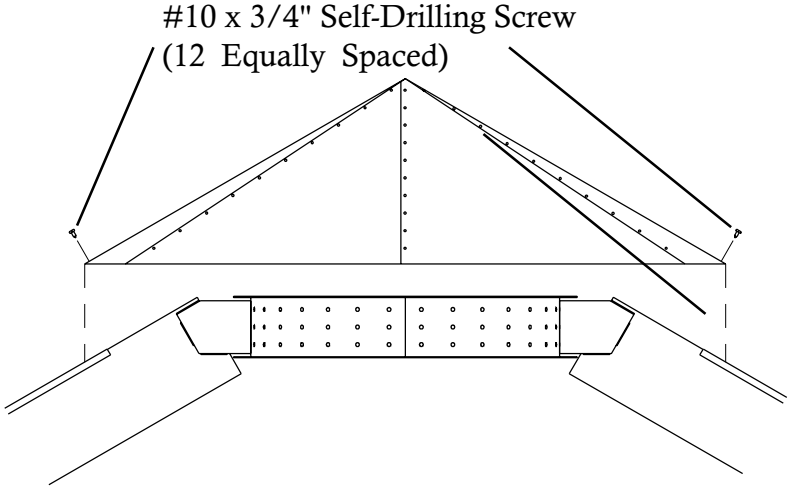

Figure #40

LEVELING BAND LOCATION

Position leveling bands as shown in the drawings below.
Use (2) 5/16" x 3/4" bin bolts to attach bands to posts. Also use 5/16" x 3/4" bin bolts to to join band sections. Note that band sections connect to each other only at endmost holes. Due to the odd number of rafters leveling band posts spacing is not equal on the inner and outer Leveling Bands.

Middle Leveling Bands

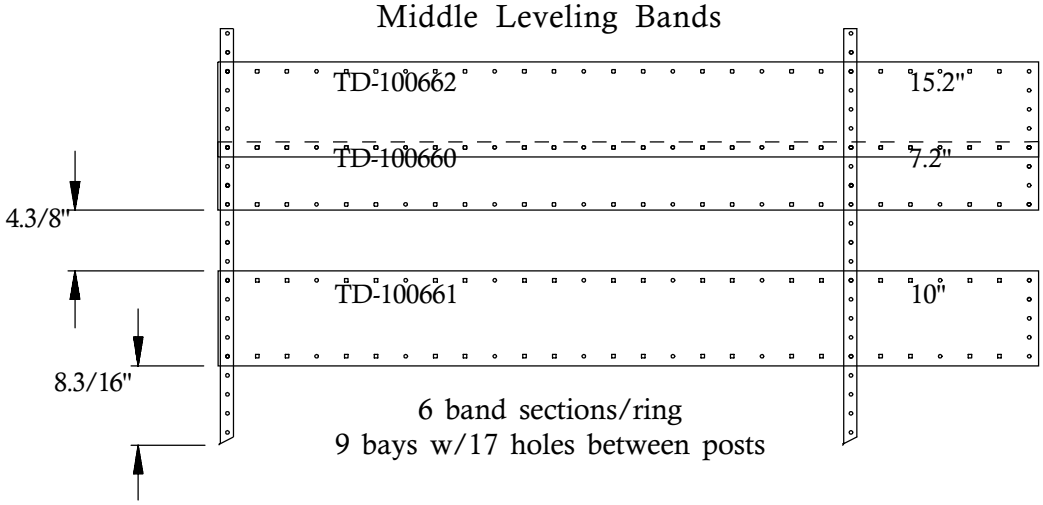

6 band sections/ring
9 bays w/17 holes between posts

Outer Leveling Bands

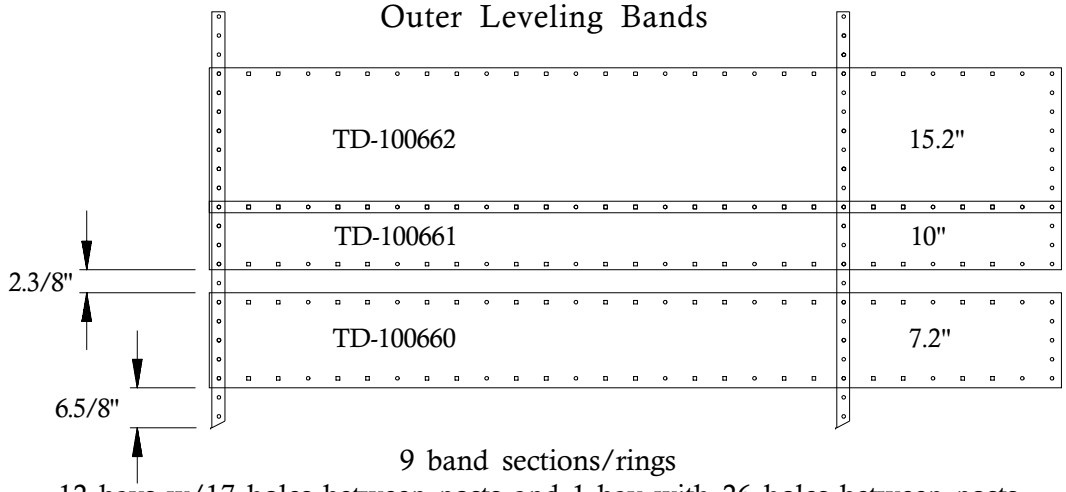

9 band sections/rings
12 bays w/17 holes between posts and 1 bay with 26 holes between posts

Inner Leveling Bands

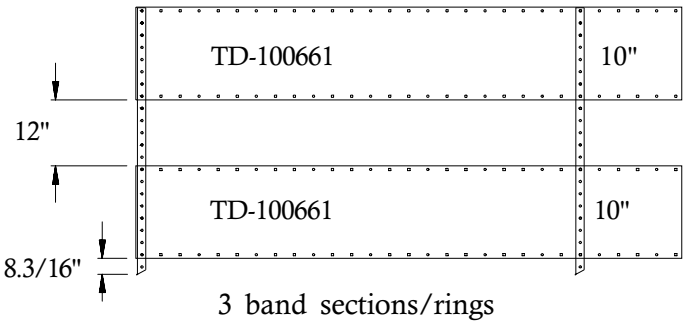

3 band sections/rings
3 bays w/14 holes between posts and 2 bays with 17 holes between posts

Figure #41

REV. 3-15-96

ROOF ASSEMBLY
SPECIAL INSTRUCTIONS

It is now time to assemble the roof. The roof is assembled according to the instructions in the roof hardware box, WITH THE FOLLOWING EXCEPTIONS:

1. Locate eave clips so that a roof sheet will be centered over sidewall ladder.
2. Four eave clip shims per eave clip must be installed.
3. Use TD-100274 Roof Brackets shipped in the Top Dry hardware rather than the brackets shipped in the roof hardware.

Eave Clip Assembly

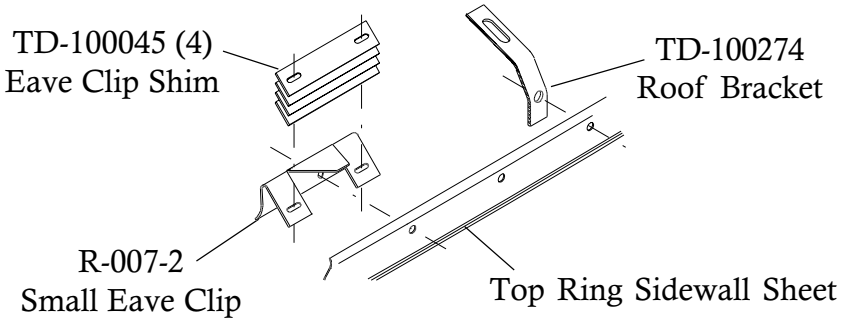

Figure #42

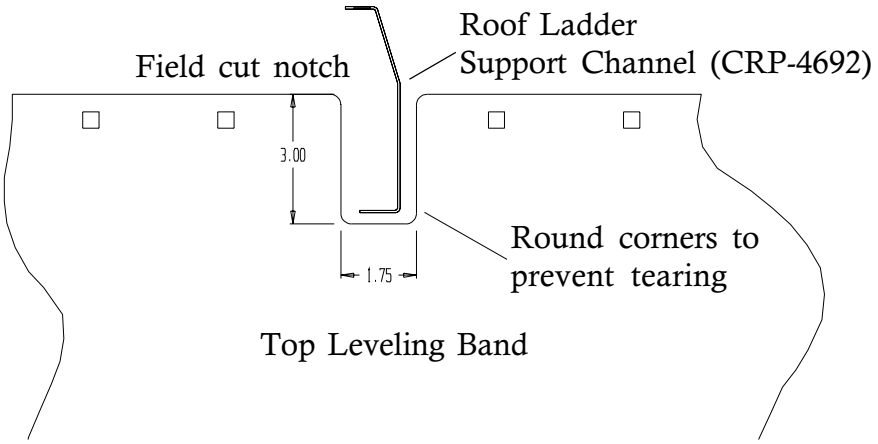

Note: Field cut rounded notches in the outer leveling band(s) where the two roof support channels (CRP-4692) hang from the roof ribs.

Figure #43

FAN ENTRANCE SHEETS

24" thru 36" Fans

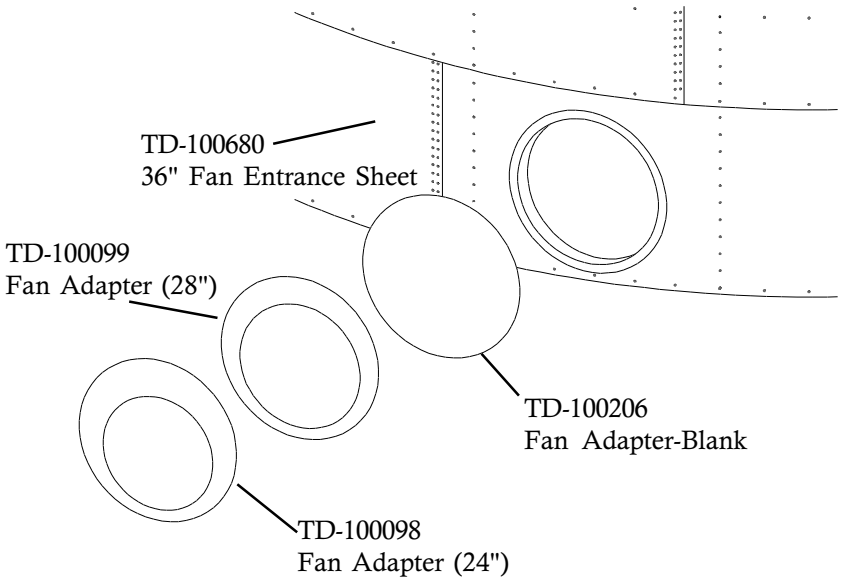

Figure #44

42" Fans

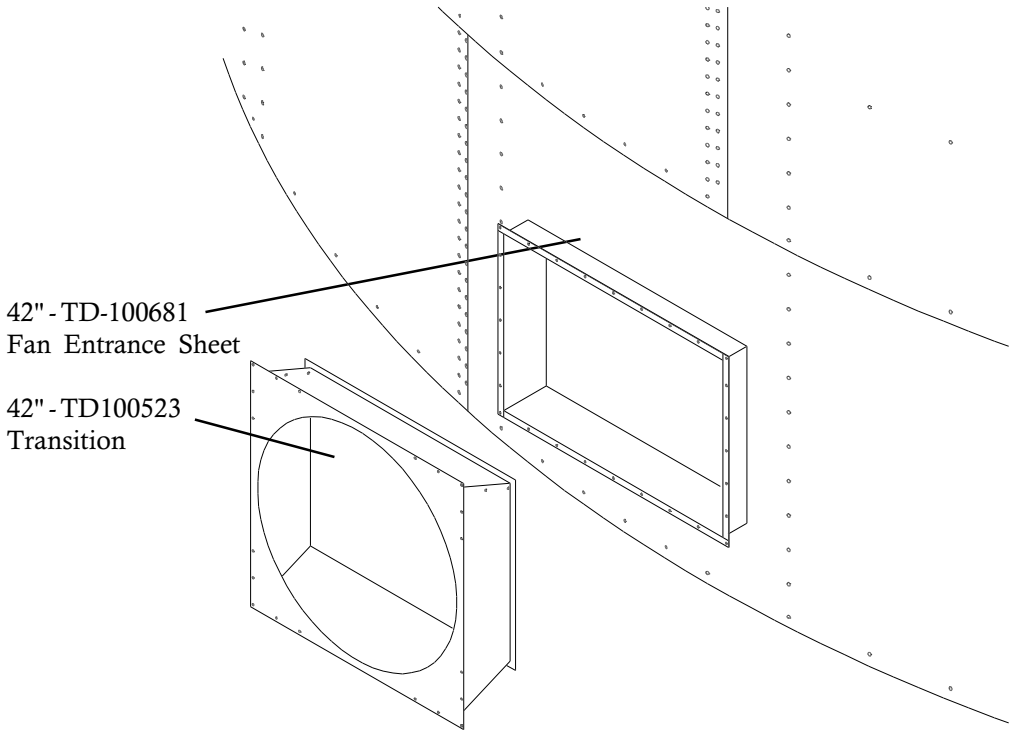

Figure #45

ACCESS DOOR WELDMENT ASSEMBLY

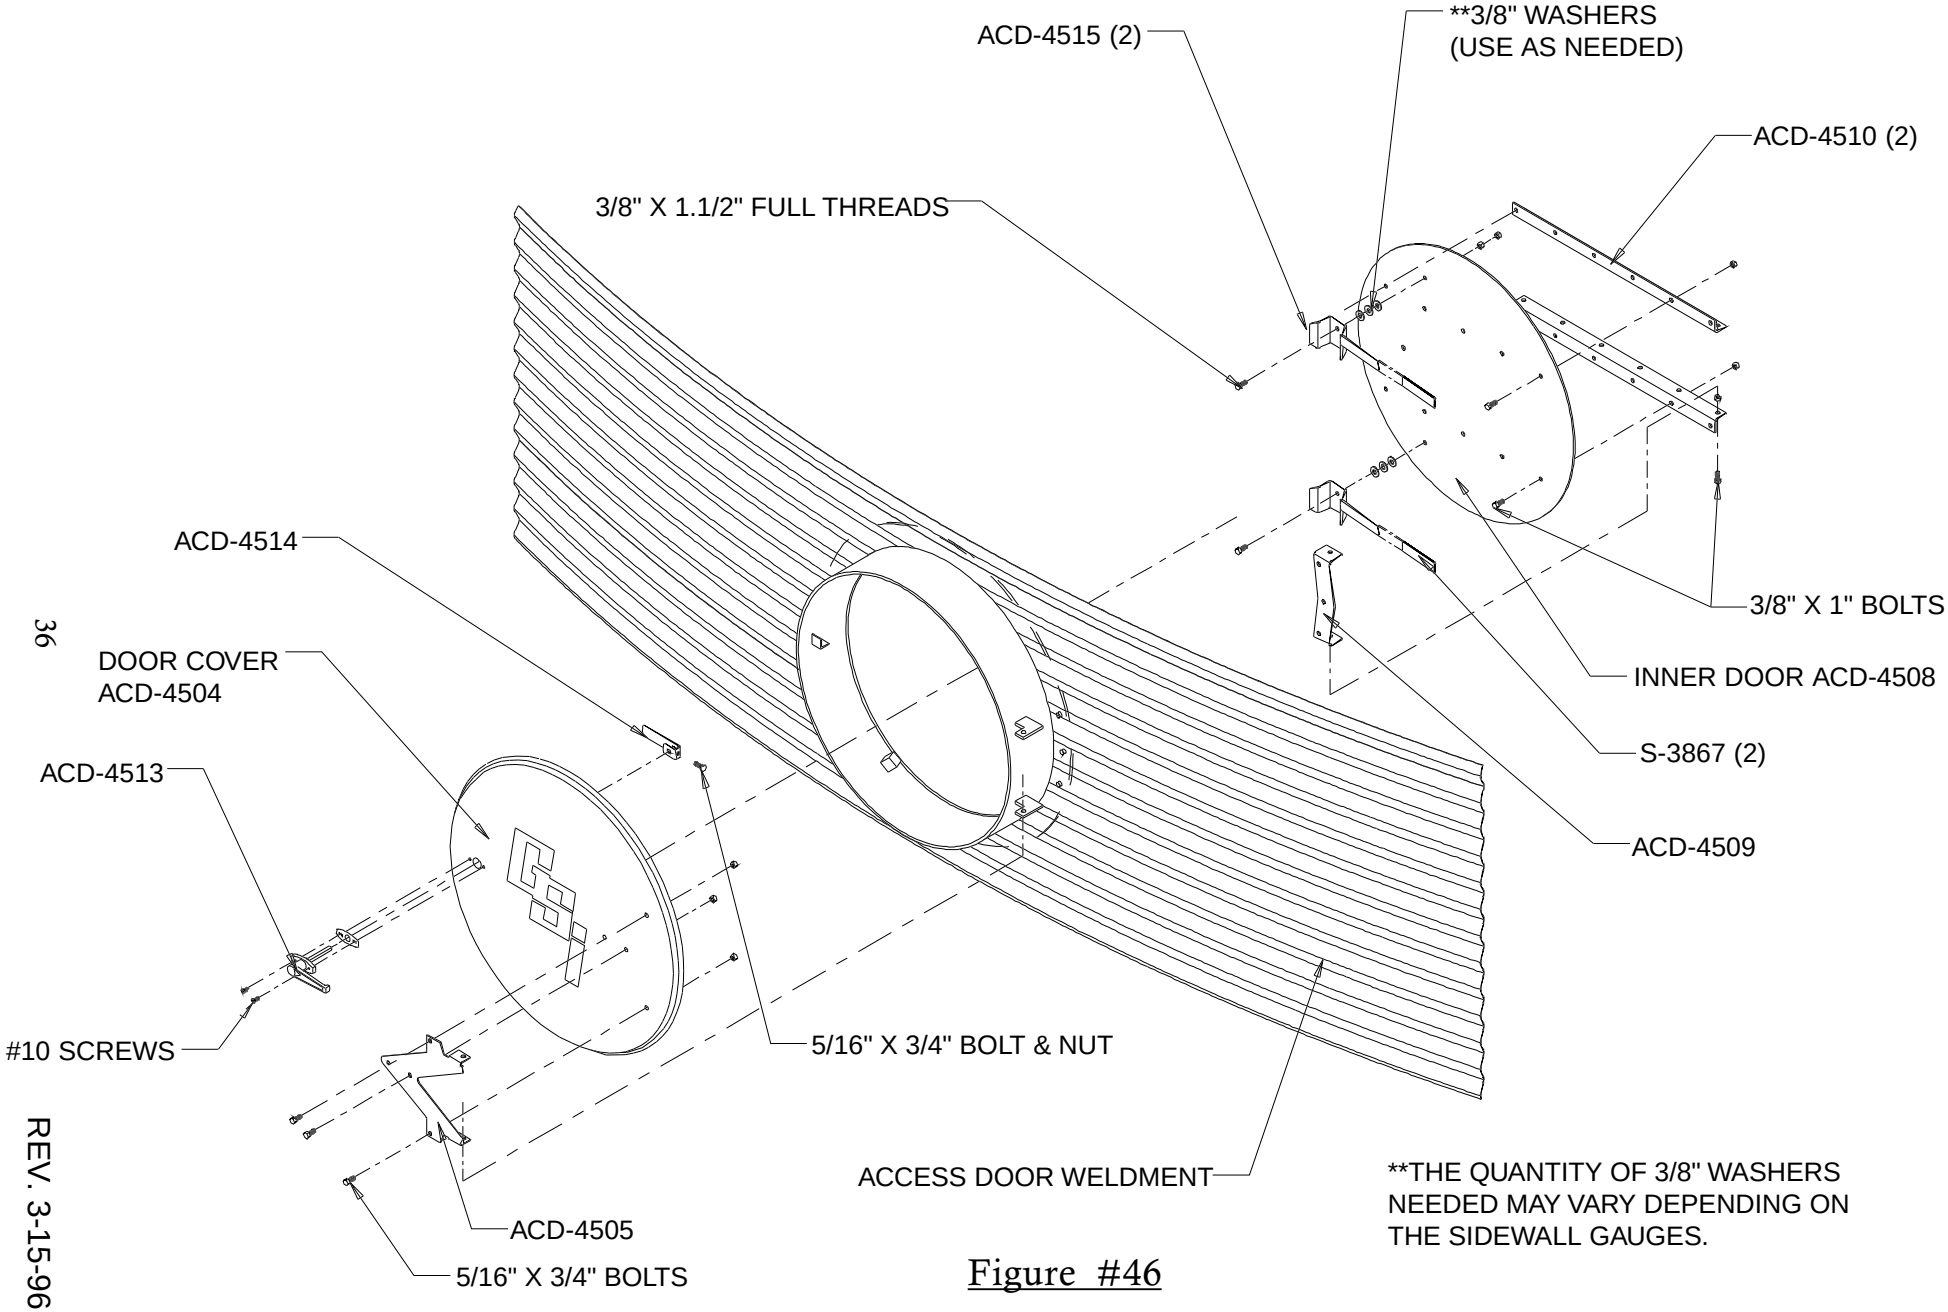

**THE QUANTITY OF 3/8" WASHERS NEEDED MAY VARY DEPENDING ON THE SIDEWALL GAUGES.

Figure #46

LIFTING JACKS & BRACKETS

NOTE: The number of lifting jacks required is best determined by personal experience. Factors such as bin size, soil compaction, wind velocity, jack design, etc., are all to be considered when deciding how many to use. If in doubt, use one jack on every other stiffener. GSI recommends heavy duty jacks rated at 6,000 lbs. or more.

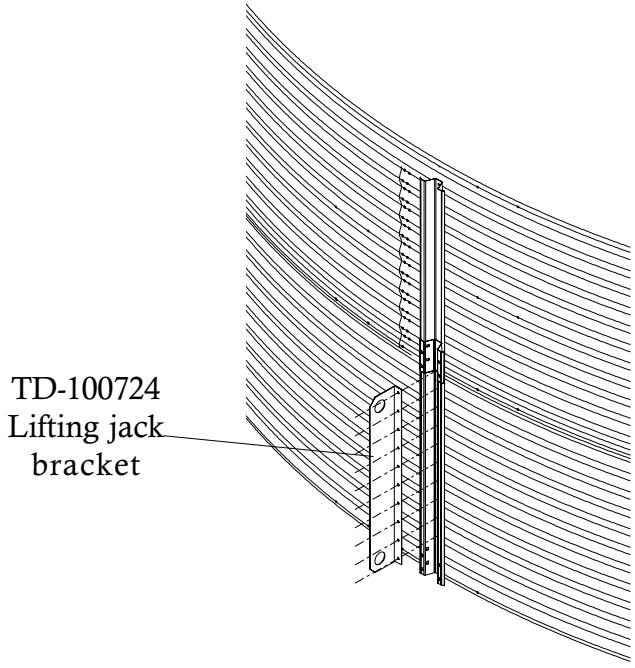

Figure #47

Remember to attach lifting brackets to the stiffeners. A special lifting bracket is available from G.S.I.

Anchor all jacks securely and raise the bin just high enough to assemble the next ring. When lifting your bin, raise all jacks at an equal rate. This will prevent the bowing of previously assembled rings and make for easier hole alignment. Bolt the next ring to the inside of the second ring. Be sure to stagger the sheets and select the proper gauge material. Lower the bin on the foundation after assembling and tightening the bolts on the new ring. Now rebolt the lifting straps, continue ring additions until you are ready for door installation.

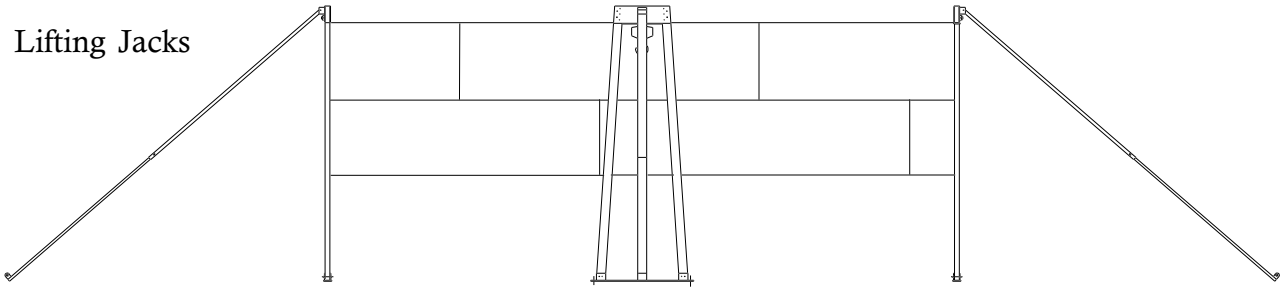

Figure #48

DETAILED LAYOUT FOR PROPER LOCATION OF PLATFORMS

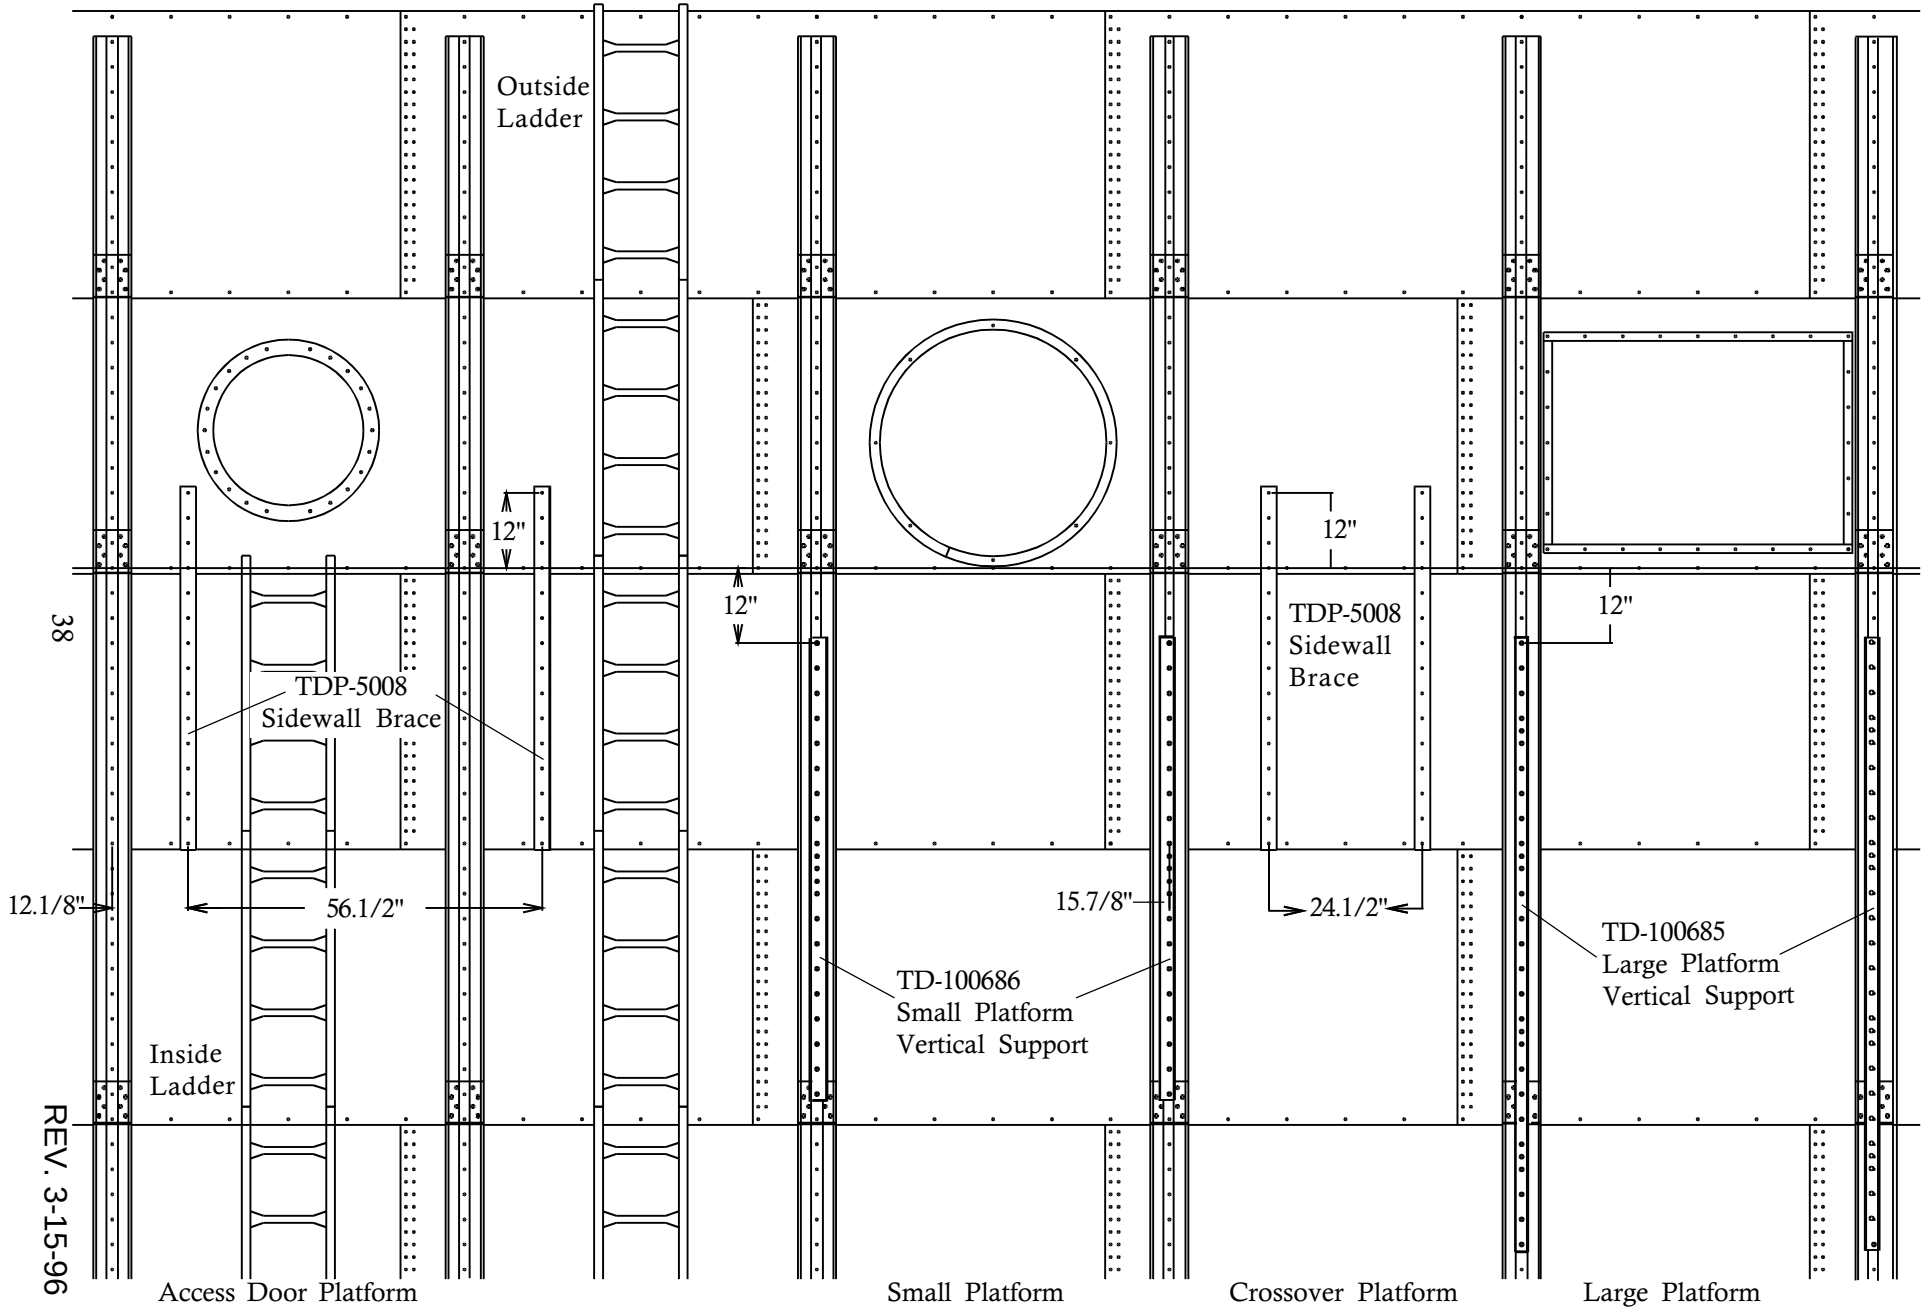

Figure #49

ACCESS DOOR PLATFORM
TDP-5012

Before assembly of any platform, read the entire instructions to assure proper placement and assembly.

Refer to Figure # 49 for proper location of access door platform. Begin by assembling the access door platform support frame using 5/16" x 3/4" truss head bolts and nuts. When attaching platform vertical support to bin sidewall field drill (16) 3/8" diameter holes for each support spaced every 4". Be sure and use 5/16" x 3/4" bin bolt on vertical support to sidewall. Special attention should be taken when assembling the platform support that the support brace is placed correctly.

Now proceed to the platform floor. Align holes on platform floor with holes on platform support and bolt together using 5/16" x 3/4" truss head bolt and nuts. Next, assemble handrail posts, handrails, and handrail braces.

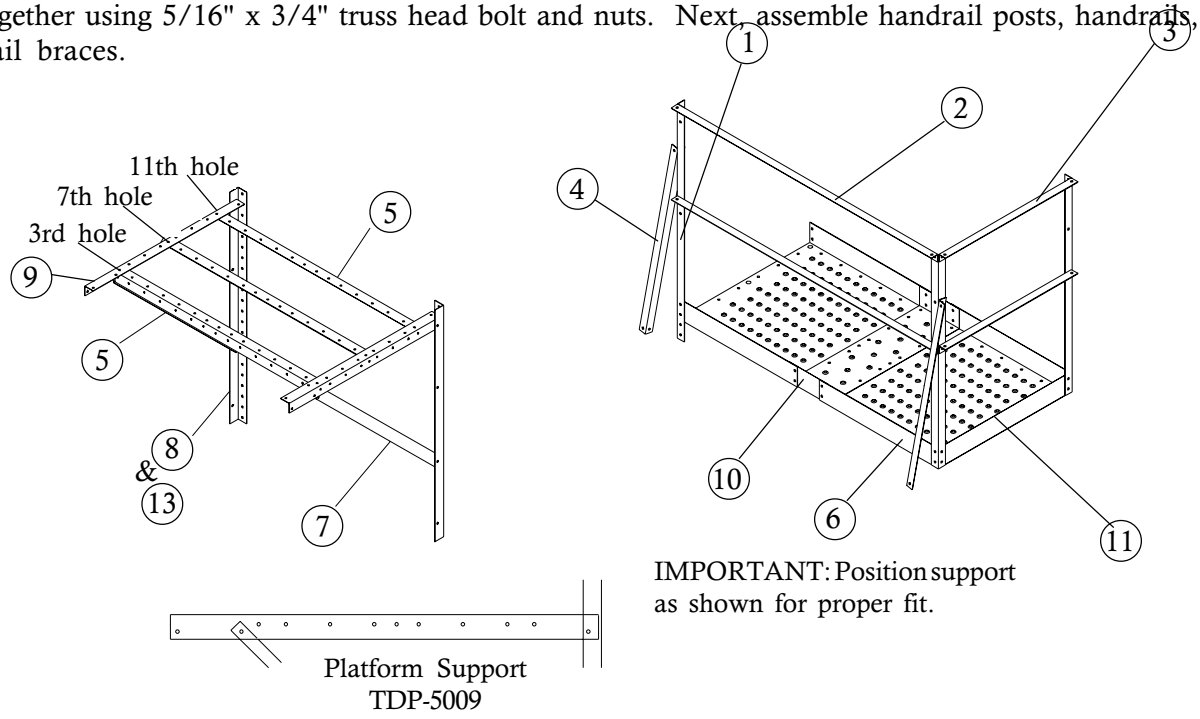

Figure #50

Key	Part No.	Description	Quantity	Weight
1	LS-371	Platform Vertical Angle 42"	3	11.38
2	TDP-5000	Handrail 59"	2	10.15
3	TDP-5002	Handrail 30"	2	10.15
4	TDP-5003	Handrail Brace 36.29/32"	2	6.34
5	TDP-5005	Floor Brace 58.1/2"	3	26.11
6	TDP-5006	Platform Floor 37.7/8"	2	38.23
7	TDP-5007	Support Brace 50.21/32"	2	15.08
8	TDP-5008	Sidewall Brace 58"	2	19.65
9	TDP-5009	Platform Support 43.1/2"	2	12.95
10	TDP-5010	Platform Floor Splice 37.1/2"	1	6.24
11	TDP-5011	Platform Toe Plate 29.3/4"	1	3.29
12	TDP-5014	Access Door Package Hardware	1	5.41
13	TDP-5008N	Sidewall Brace 2.66"	2	16.61

SMALL PLATFORM ASSEMBLY

For 36" Fans and Smaller or
with #1 fan when two 36" or smaller fans are installed

Before assembling any platform, read all of the instructions first to assure proper placement and assembly.

Refer to Figure #49 for proper location of small platform. Begin by assembling the small platform support frame using 3/8" x 1" bolts on all connections. Use 5/16" x 1.1/4" bin bolt to attach platform vertical supports to sidewall stiffeners.

Be sure and locate the 5/16" x 1.1/4" bolts from the inside of the bin to the outside. This will provide maximum weather protection.

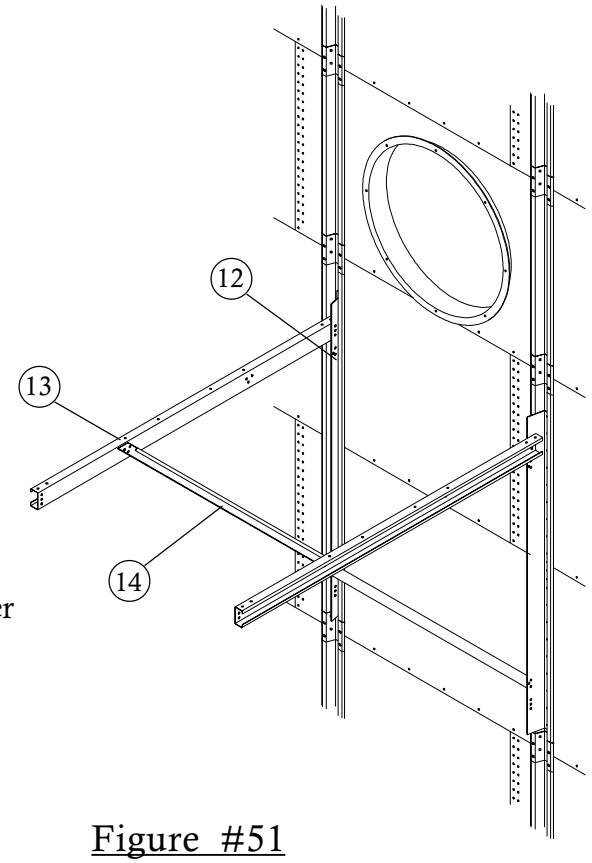

Small Platform
36" Fans and Smaller
TD-100092

Figure #51

Key	Part No.	Description	Quantity	Weight
1	TD-100051	Channel Bracket	8	3.90
2	TD-100052	Handrail Post 49.3/4"	4	31.69
3	TD-100059	Long Toeboard 78.1/2"	2	10.96
4	TD-100060	Short Toeboard 54.1/2"	1	3.80
5	TD-100061	Long Handrail 78.1/2"	4	37.52
6	TD-100062	Short Handrail 54.1/2"	2	13.02
7	TD-100064	Floor Plank 78"	11	112.87
8	TD-100066	"X" Brace Strap 60"	4	7.26
9	TD-100067	Mid Channel Support 74"	2	32.73
10	TD-100070	Side Channel Support 78.1/2"	2	41.26
11	TD-100072	End Channel Support 78.1/2"	2	41.60
12	TD-100686	Vertical Support 70"	2	43.11
13	TD-100083	Support Channel 80.7/8"	2	32.98
14	TD-100084	Knee Brace 83.5/8"	2	23.67
15	TD-100090	Small Platform Hardware Package	1	8.96

SMALL PLATFORM ASSEMBLY

(CONT.)

36" Fans and Smaller

TD-100092

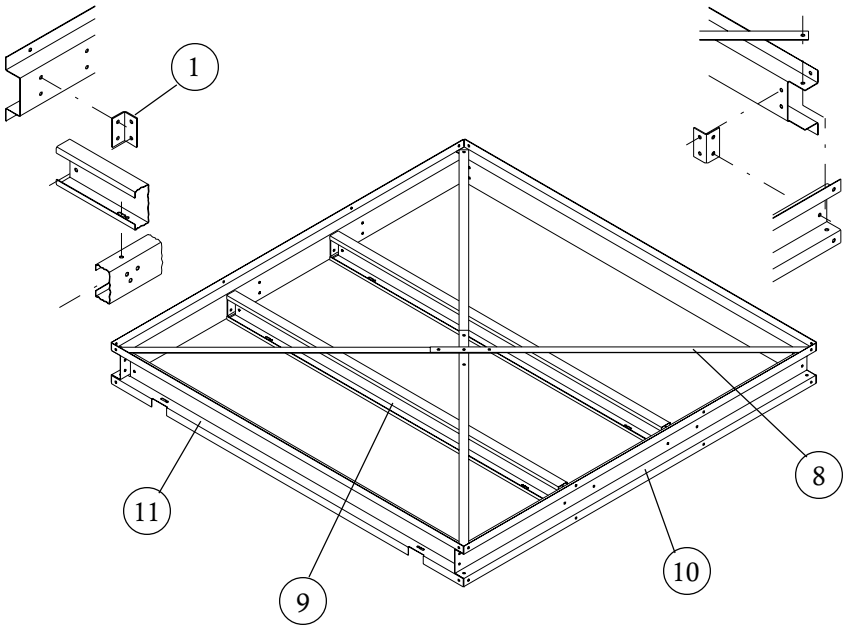

Position the vertical support to the existing sidewall stiffeners as shown in Figure #49 and double nut with 5/16" nuts.

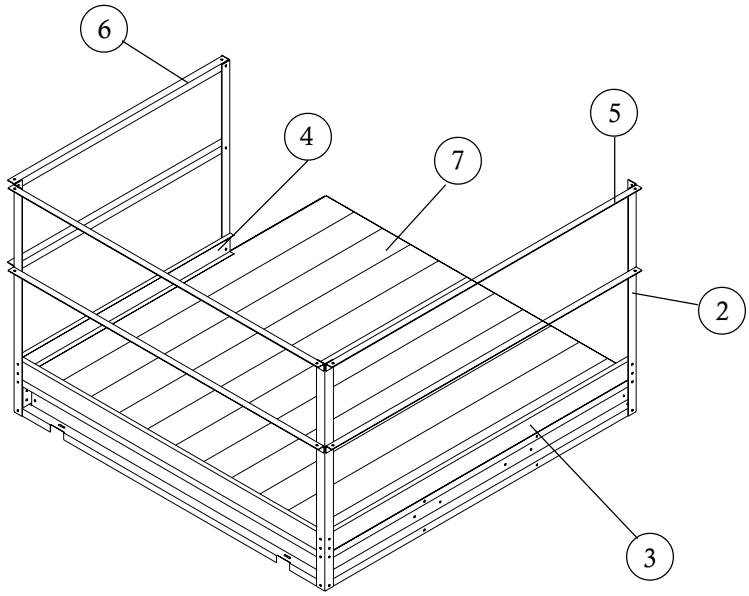

When bolting stiffener to sidewall at locations where platform supports are to be attached, use (25) 5/16" x 1.1/4" bin bolts, heads to inside. Start 12 inches below horizontal seam of second and third rings from top. See Figure #49.

Figure #52

SMALL PLATFORM FOR CROSSOVER ASSEMBLY

For 36" Fans and Smaller or with #2 fan when two 36" or smaller fans are installed

Before assembling any platform, read all of the instructions first to assure proper placement and assembly.

Refer to Figure #49 for proper location of small platform. Begin by assembling the small platform support frame using 3/8" x 1" bolts on all connections. Use 5/16" x 1.1/4" bin bolt to attach platform vertical supports to sidewall stiffeners.

Be sure and locate the 5/16" x 1.1/4" bolts from the inside of the bin to the outside. This will provide maximum weather protection.

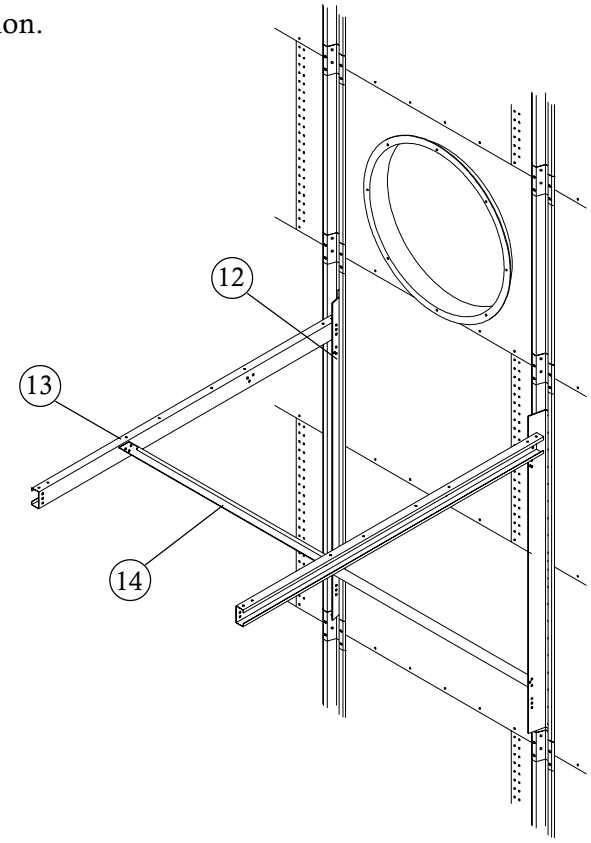

Figure #53

Key	Part No.	Description	Quantity	Weight
1	TD-100051	Channel Bracket	8	3.90
2	TD-100052	Handrail Post 49.3/4"	4	31.69
3	TD-100059	Long Toeboard 78.1/2"	2	10.96
4	TD-100060	Short Toeboard 54.1/2"	1	3.80
5	TD-100061	Long Handrail 78.1/2"	4	37.52
6	TD-100062	Short Handrail 54.1/2"	2	13.02
7	TD-100064	Floor Plank 78"	11	112.87
8	TD-100066	"X" Brace Strap 60"	4	7.26
9	TD-100067	Mid Channel Support 74"	2	32.73
10	TD-100070	Side Channel Support 78.1/2"	2	41.26
11	TD-100072	End Channel Support 78.1/2"	2	41.60
12	TD-100686	Vertical Support 70"	2	43.11
13	TD-100083	Support Channel 80.7/8"	2	32.98
14	TD-100084	Knee Brace 83.5/8"	2	23.67
15	TD-100090	Small Platform Hardware Package	1	8.96

SMALL PLATFORM ASSEMBLY
(CONT.)
(FOR #1 FAN WHEN 2 FANS ARE USED)

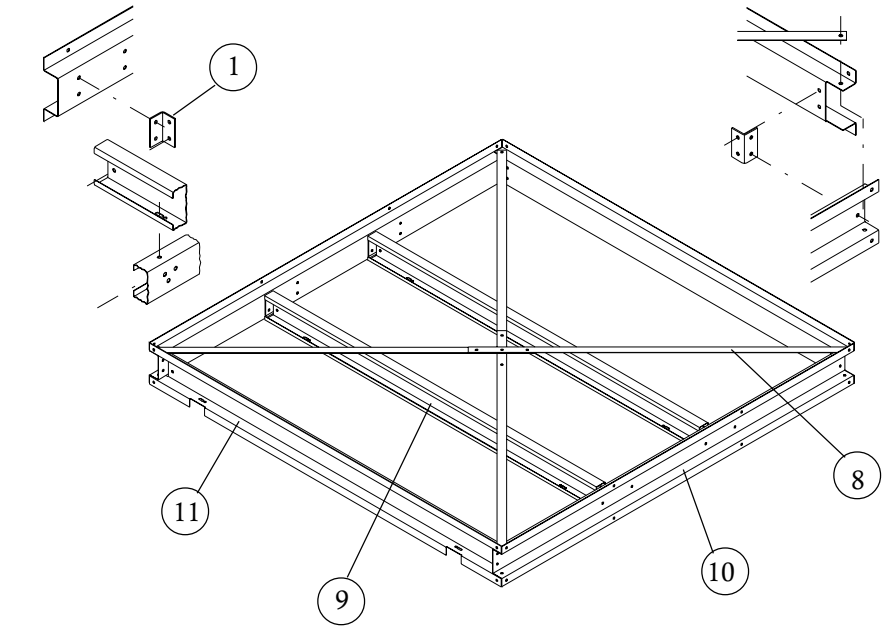

Position the vertical support to the existing sidewall stiffeners as shown in Figure #49 and double nut with 5/16" nuts.

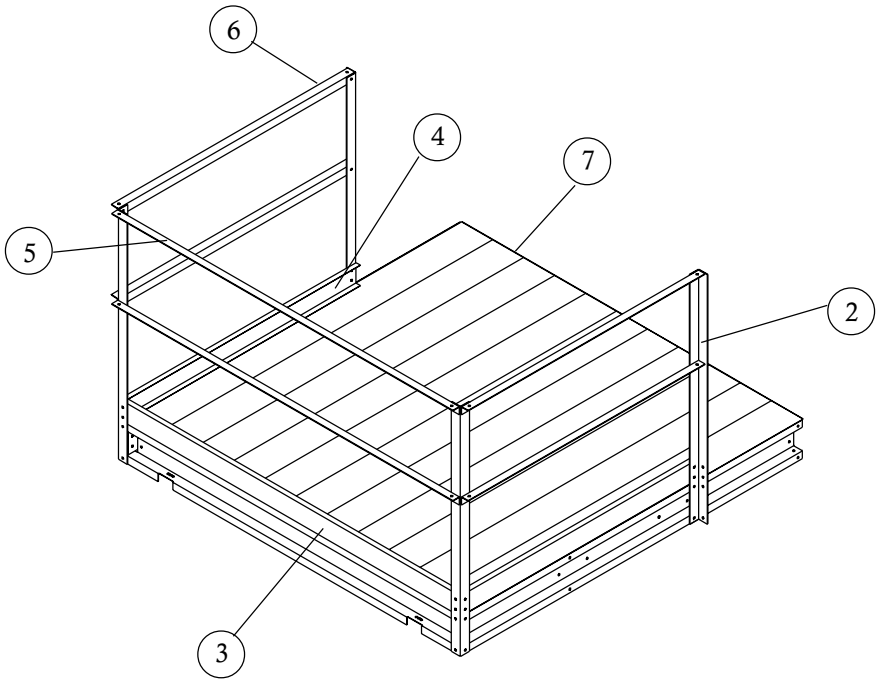

When bolting stiffener to sidewall at locations where platform supports are to be attached, use (25) 5/16" x 1.1/4" bin bolts, heads to inside. Start 12 inches below horizontal seam of second and third rings from top. See Figure #49.

Figure #54

LARGE PLATFORM ASSEMBLY

For 42" Fan

Before assembly of any platform, read the entire instructions to assure proper placement and assembly.

Refer to Figure #45 for proper location of large platform. Begin by assembling the large platform support frame using 7/16" x 1" bolts on all connections. Use 5/16" x 1.1/4" bin bolt to attach the platform vertical supports to the sidewall stiffeners. Be sure and place the 5/16" x 1.1/4" bolts from the inside of the bin to the outside. This will provide maximum weather protection.

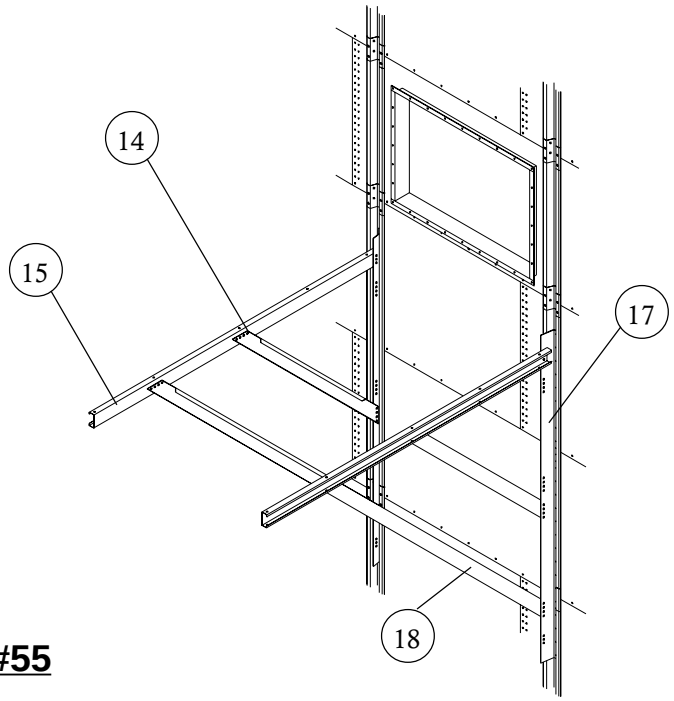

FIGURE #55

Key	Part No.	Description	Quantity	Weight
1	TD-100051	Channel Bracket	10	4.87
2	TD-100052	Handrail Post 49.3/4"	7	55.47
3	TD-100053	Toeboard 71.1/2"	1	4.99
4	TD-100054	Toeboard 92"	1	6.42
5	TD-100055	Toeboard 95.1/2"	1	6.67
6	TD-100056	Handrail 71.1/2"	2	17.07
7	TD-100057	Handrail 92"	2	22.98
8	TD-100058	Handrail 95.1/2"	2	22.81
9	TD-100063	Floor Plank 95.1/2"	13	163.35
10	TD-100065	"X" Brace Strap 94.5/16"	2	8.75
11	TD-100068	Mid Channel Support 88"	3	58.37
12	TD-100069	Side Channel Support 96"	2	50.46
13	TD-100071	End Channel Support 92.1/2"	2	49.15
14	TD-100085	Short Knee Brace 72.9/32"	2	54.51
15	TD-100086	Support Channel 98.3/8"	2	53.08
16	TD-100087	Long Knee Brace 114"	2	85.98
17	TD-100685	Vertical Support 94"	2	63.64
18	TD-100091	Large Platform Hardware Package	1	14.35

LARGE PLATFORM ASSEMBLY
(CONT.)
(FOR 1 FAN SYSTEMS OR #2 FAN ON 2 FAN SYSTEMS)

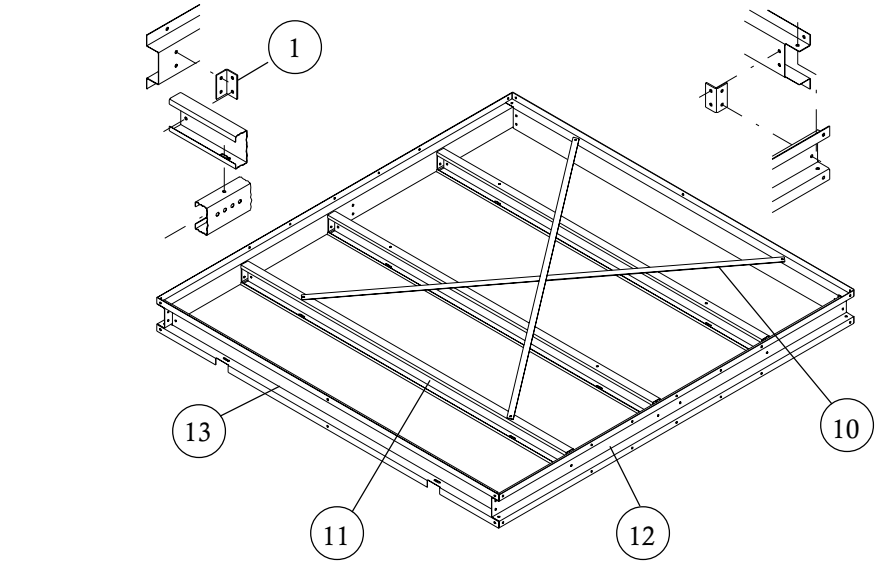

Position the vertical support to the existing sidewall stiffeners as shown in Figure #49 and double nut with 5/16" nuts.

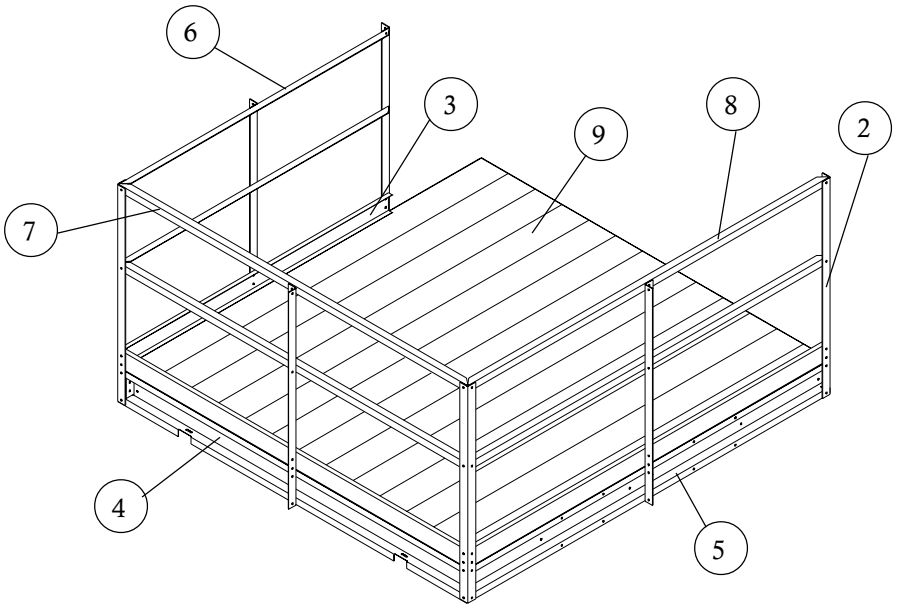

When bolting stiffener to sidewall at locations where platform supports are to be attached, use (25) 5/16" x 1.1/4" bin bolts, heads to inside. Start 12 inches below horizontal seam of second and third rings from top. See Figure #49.

FIGURE #56

LARGE PLATFORM FOR CROSSOVER ASSEMBLY

For 42" Fan or with #2 fan when two 42" fans are installed

Before assembly of any platform, read the entire instructions to assure proper placement and assembly.

Refer to Figure #49 for proper location of large platform. Begin by assembling the large platform support frame using 7/16" x 1" bolts on all connections. Use 5/16" x 1.1/4" bin bolt to attach the platform vertical supports to the sidewall stiffeners. Be sure and place the 5/16" x 1.1/4" bolts from the inside of the bin to the outside. This will provide maximum weather protection.

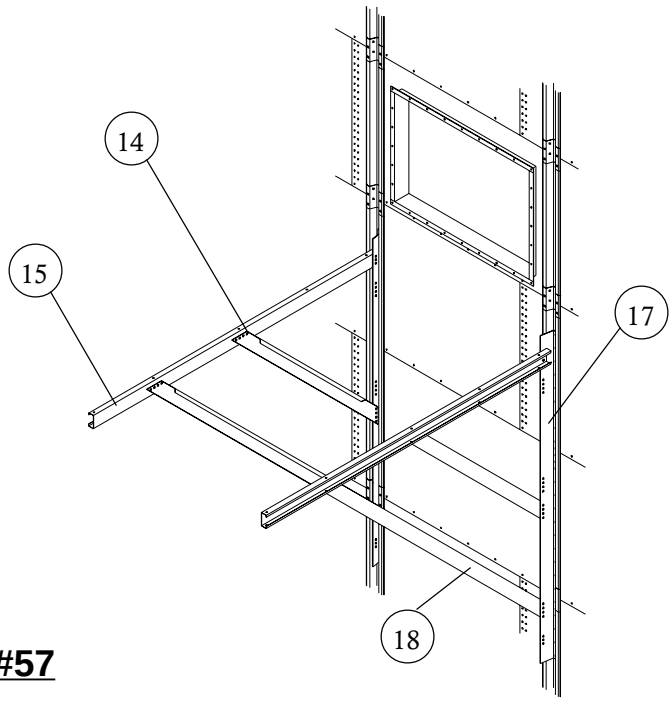

FIGURE #57

Key	Part No.	Description	Quantity	Weight
1	TD-100051	Channel Bracket	10	4.87
2	TD-100052	Handrail Post 49.3/4"	7	55.47
3	TD-100053	Toeboard 71.1/2"	2	4.99
4	TD-100054	Toeboard 92"	1	6.42
5	TD-100056	Handrail 71.1/2"	4	17.07
6	TD-100057	Handrail 92"	2	22.98
7	TD-100063	Floor Plank 95.1/2"	13	163.35
8	TD-100065	"X" Brace Strap 94.5/16"	2	8.75
9	TD-100068	Mid Channel Suppoet 88"	3	58.37
10	TD-100069	Side Channel Support 96"	2	50.46
11	TD-100071	End Channel Support 92.1/2"	2	49.15
12	TD-100085	Short Knee Brace 72.9/32"	2	54.51
13	TD-100086	Support Channel 98.3/8"	2	53.08
14	TD-100087	Long Knee Brace 114"	2	85.98
15	TD-100685	Vertical Support 94"	2	63.64
16	TD-100091	Large Platform Hardware Package	1	14.35

LARGE PLATFORM ASSEMBLY
(CONT.)
(FOR #1 FAN ON 2 FAN SYSTEM)

Position the vertical support to the existing sidewall stiffeners as shown in Figure #49 and double nut with 5/16" nuts.

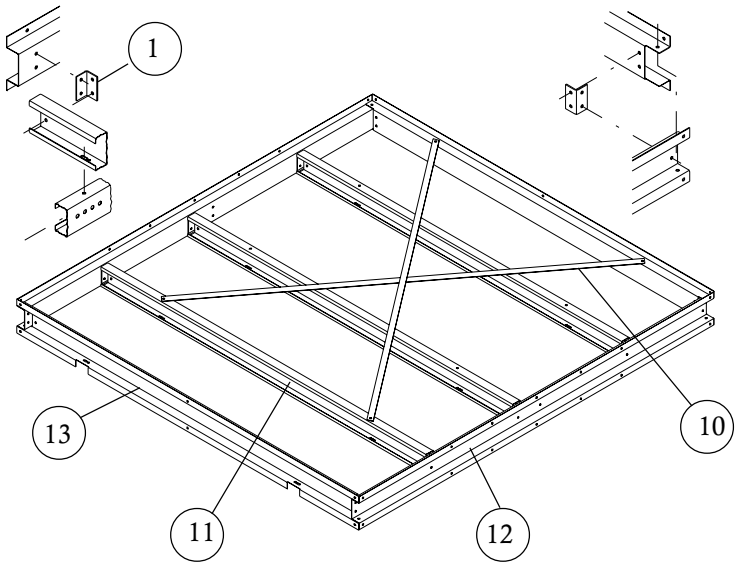

When bolting stiffener to sidewall at locations where platform supports are to be attached, use (25) 5/16" x 1.1/4" bin bolts, heads to inside. Start 12 inches below horizontal seam of second and third rings from top. See Figure #49.

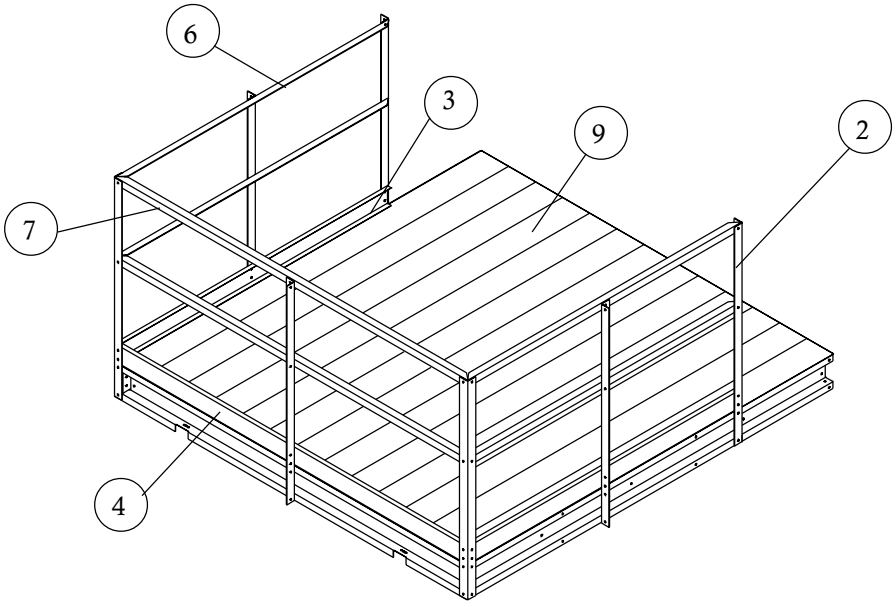

FIGURE #58

CROSS OVER PLATFORM ASSEMBLY
TDP-5013

Before assembly of any platform, read the entire instructions to assure proper placement and assembly.

Refer to Figure #49 for proper location of cross over platform. Begin by assembling the cross over platform support frame using 5/16" x 3/4" truss head bolts and nuts. When attaching platform vertical support to bin sidewall field drill (16) 3/8" diameter holes for each support spaced every 4". Be sure and use 5/16" x 3/4" bin bolt on vertical support to sidewall. Special attention should be taken when assembling the platform support that the support brace is placed correctly.

Now proceed to the platform floor. Align holes on platform floor with holes on platform support and bolt together using 5/16" x 3/4" truss head bolt and nuts. Next, assemble handrail posts, handrails, and handrail braces.

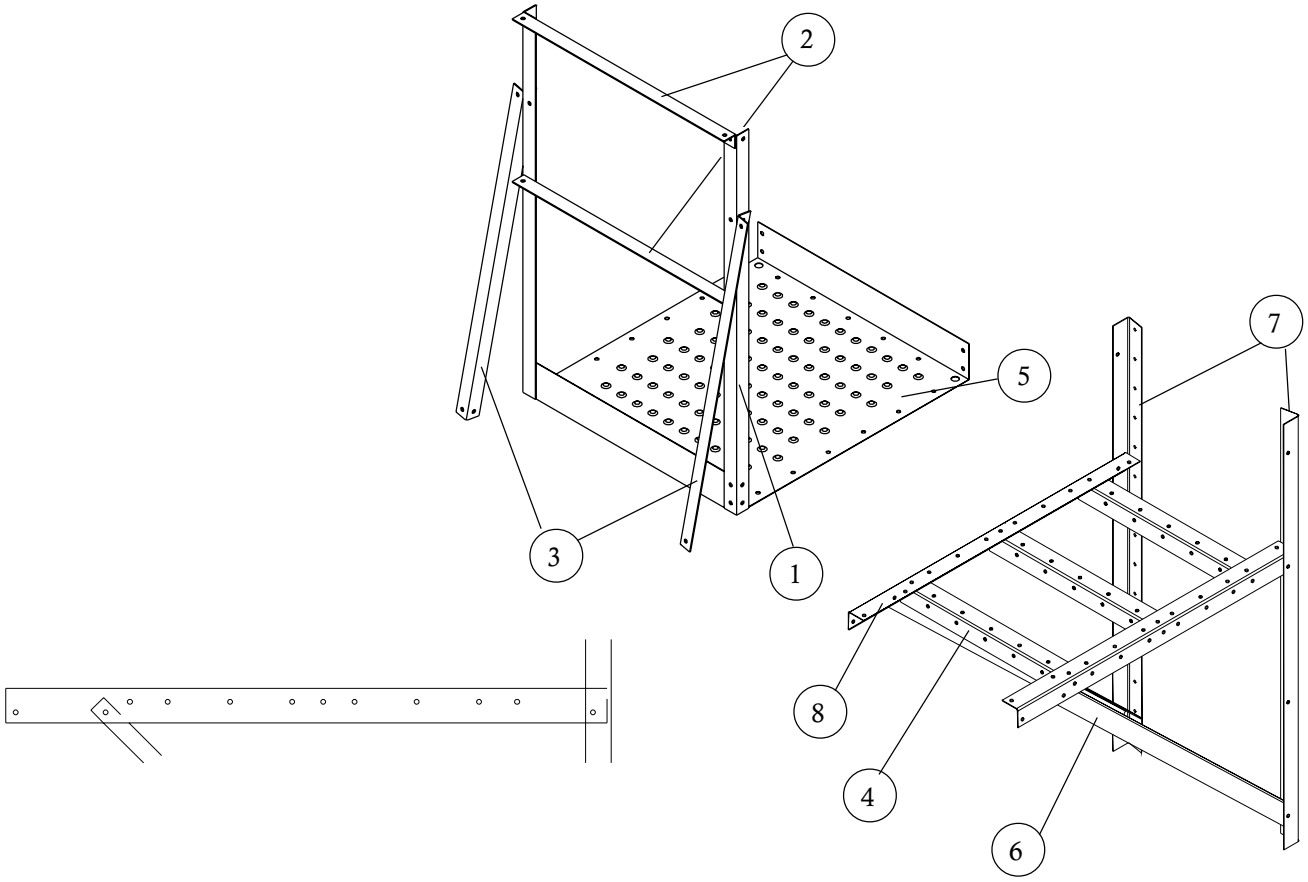

Key	Part No.	Description	Quantity	Weight
1	LS-371	Platform Vertical Angle	2	7.59
2	TDP-5001	Handrail 27"	2	4.63
3	TDP-5003	Handrail Brace 36.29/32"	2	6.34
4	TDP-5004	Short Floor Brace 26.1/2"	3	11.85
5	TDP-5006	Platform Floor 37.7/8"	1	19.11
6	TDP-5007	Support Brace 50.21/32"	2	15.08
7	TDP-5008	Sidewall Brace 58"	2	19.65
8	TDP-5009	Platform Support 43.1/2"	2	12.95
	TDP-5015	Cross Over Plat. Hdw. Pack.	1	3.95

FIGURE #59

ASSEMBLY & INSTALLATION INSTRUCTIONS

The following instructions are for assembling and installing the Auto-Vent. First, check the packing list to ensure all components have been shipped. The unit is easiest assembled in the **upside down position** as shown in the instructions. Roof vent location should be as shown on the reverse page.

ASSEMBLY

1. Take all parts out of the shipping box and check if all parts are present.

2. Turn one (1) roof vent housing (MIS-6778) upside down. (See Detail #1)

3. Insert 5/16" x 1.1/4" bin bolt with neoprene washer through hole in the side of roof vent. Place jamb nut onto the bolt and tighten. (See Detail #1)

4. Slide flap assembly (MIS-6777) onto bolt. The bolt should slide through hole in the flap assembly bracket. Install with curvature cupped upward and the brackets in the position as shown.

5. Insert 5/16" x 1.1/4" bin bolt with neoprene washer through the other side of the roof vent, through jamb nut and other flap assembly bracket. Tighten nut against vent housing side.

6. Place hold-down angle (MIS-4404) on the assembled roof vent. The wide end of the hold-down angle must face vent discharge. Once aligned, screw seven (7) #10 self-drilling (S-280) screws through the roof housing and into the holddown angle. (See Detail #2).

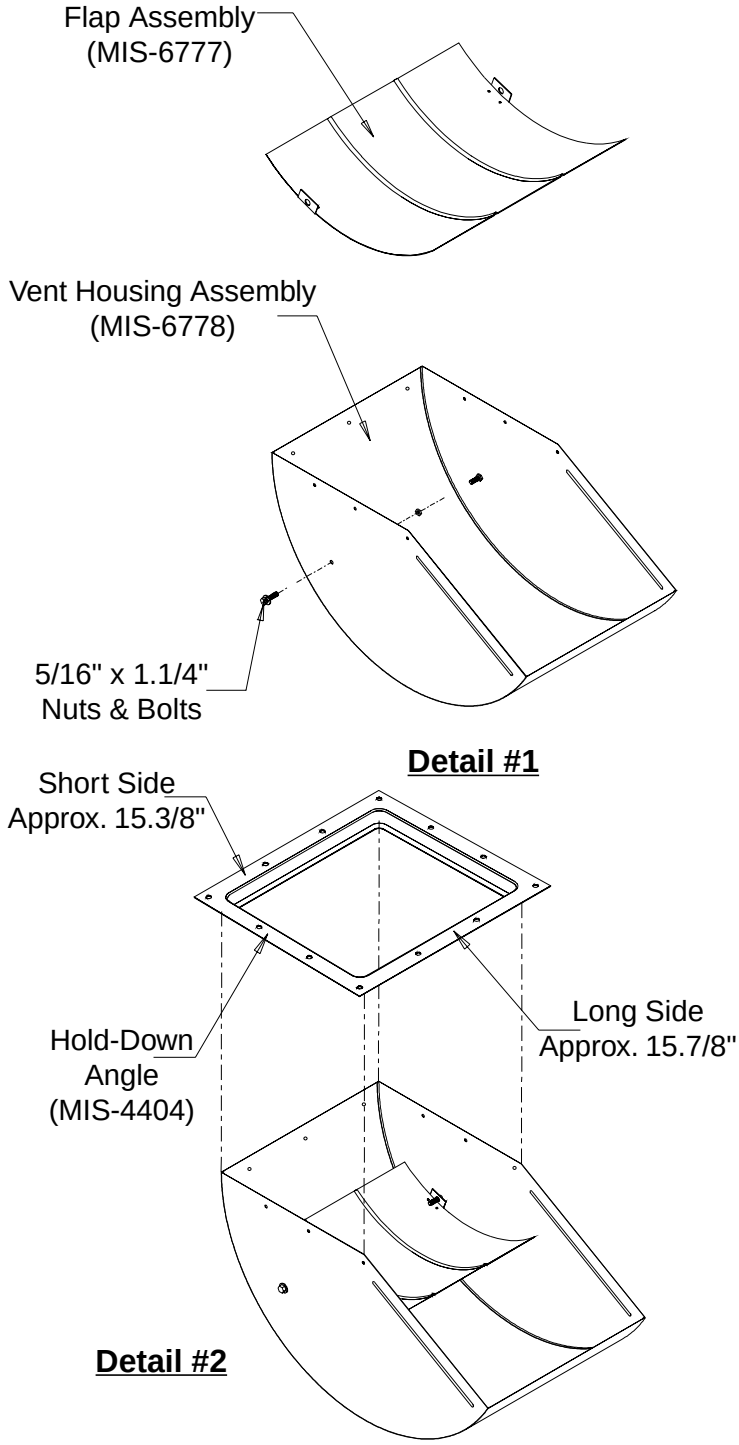

Figure #60

INSTALLATION

7. Screw two (2) #10 self-drilling (S-280) scews through front panel prior to installing in housing as shown in Detail "A". Attach the front panel (MIS-6774) with three (3) #10 self-drilling (S-280) screws to the housing and hold down angle.
(See Detail #3).

8. If the roof sheet does not have a prepunched hole for the roof vent, a hole must be cut. The cut hole should match the roof vent. The hole inside edge should be approximately fifteen (15) inches from the eave. (See Detail #5)

9. Apply a bead of tube caulking around three (3) housing sides of the roof vent where it meets the hold-down angle. The front panel edge under the roof vent opening is left uncaulked to allow
drainage of any condensation.

10. Place the three (3) foam strips on roof sheet, as shown in Detail #4. Position roof vent over foam strips and bolt down using 5/16" x 3/4" bin bolts and nuts. (Note: See instructions below for lower two (2) bolts of vent).

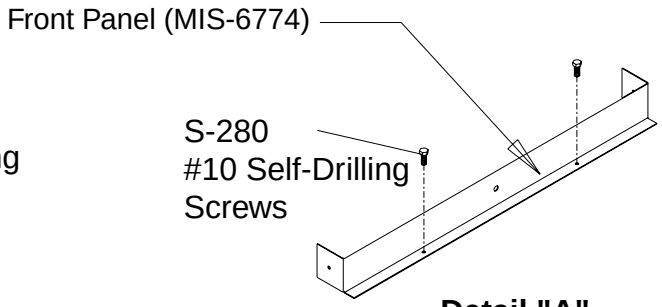

Detail "A"

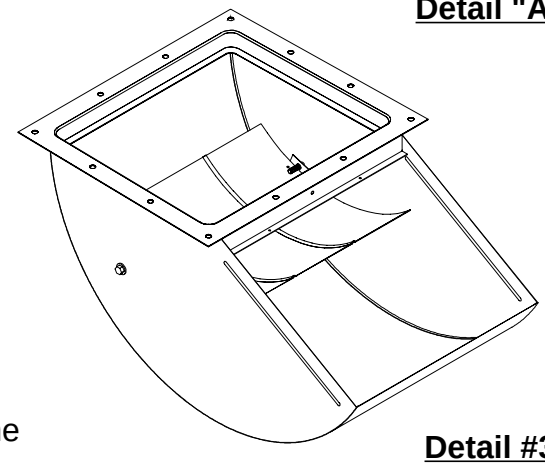

Detail #3

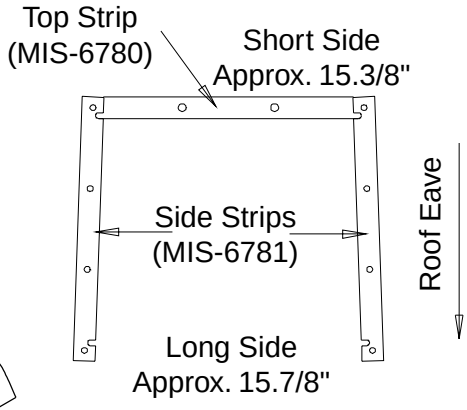

Detail #4

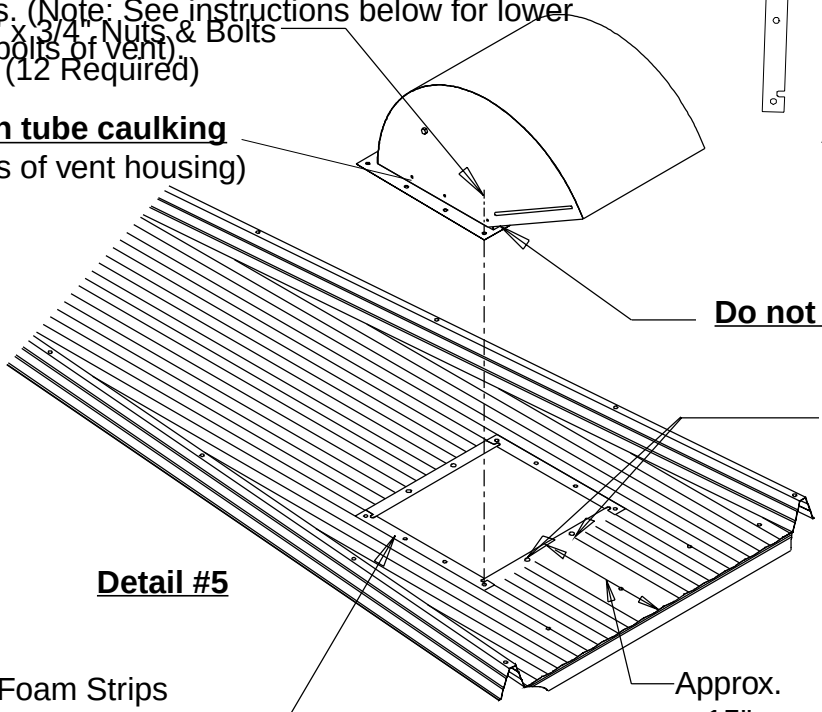

Detail #5

Figure #61

REV. 2-13-96

PERFORATEDCENTERBAND

Drill (6) 3/8" diameter holes equally spaced as shown above for top band clips. Attach clips using 5/16" x 3/4" bin bolts. Add perforated band sections. Note that these do not attach to the leveling bands but hang down on the inside of the top inner leveling band.

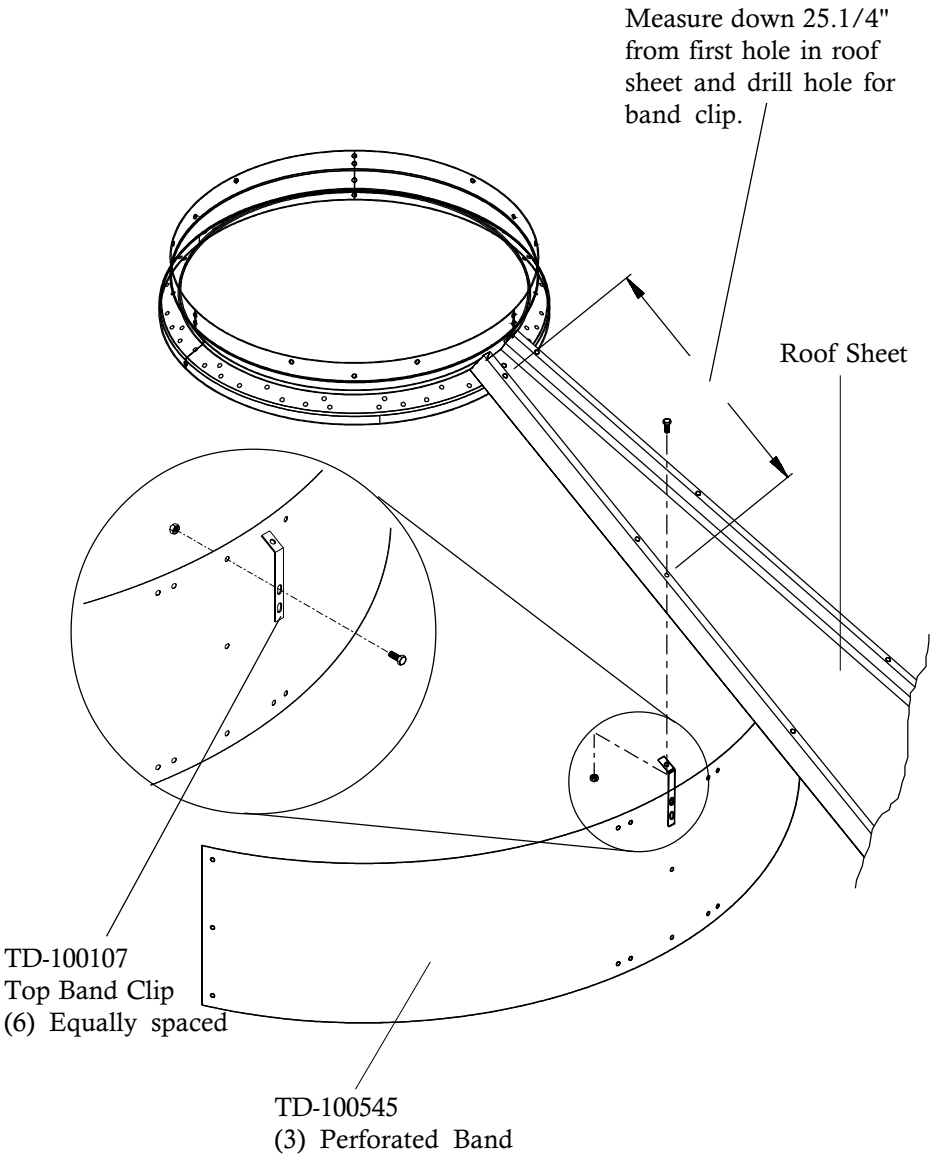

Figure #62

OPTIONAL ROTARY SWITCH ROOF LOCATIONS

Overhead View of optional rotary Switch Locations

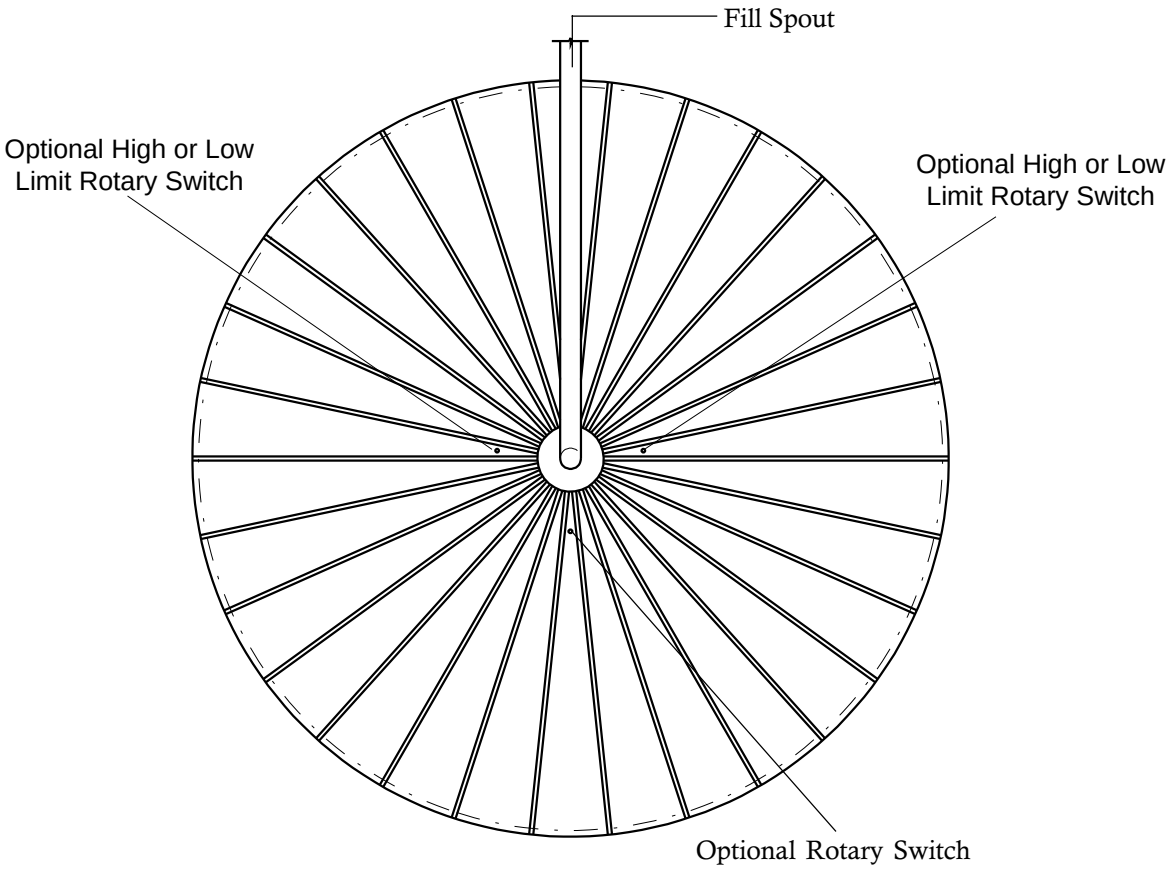

ROTARY SWITCH PANEL LOCATION

Drill 2" diameter holes through roof panels at locations shown on previous page. Use a mounting plate as a pattern and drill (4) 3/8" holes through roof panels at each switch location so the plate can be bolted to the roof.

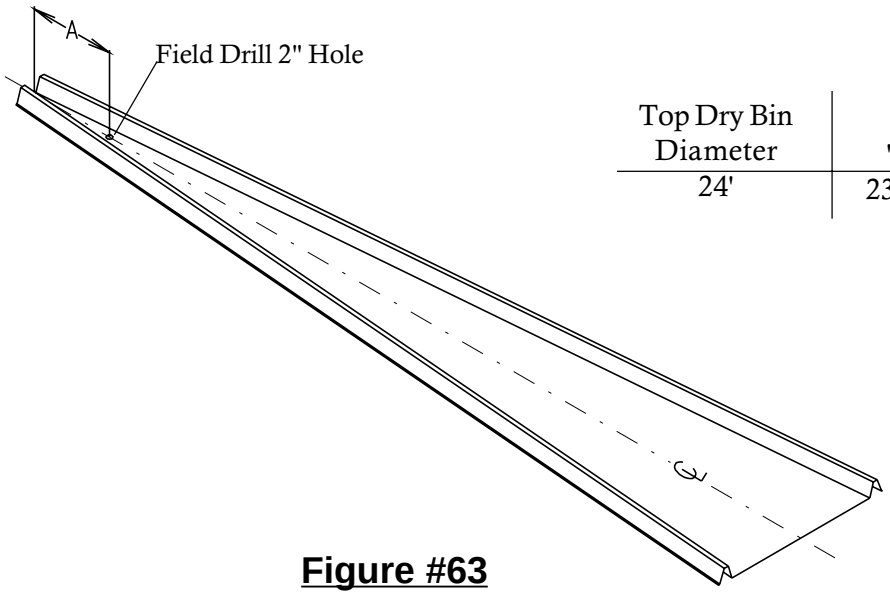

Top Dry Bin Diameter	"A"
24'	23.50"

Figure #63

INSTALLATION OF ROOF-MOUNTED LEVEL SWITCH

Drill 2" diameter holes through roof panels at locations shown on previous page. Use a mounting plate as a pattern and drill (4) 3/8" holes through roof panels at each switch location so the plate can be bolted to the roof.

Attach flex-coupling to the power-pak and install roll pin. Apply teflon tape or pipe sealant (not included) to power-pak pipe threads and thread power-pak into mounting plate coupling. Conduit opening in power-pak should be at right angles to roof rib or face toward eave.

Caulk underside of mounting plate above and both sides of 2" hole. Bolt to roof panel.

OverFlow Level Switch
TAF-6103

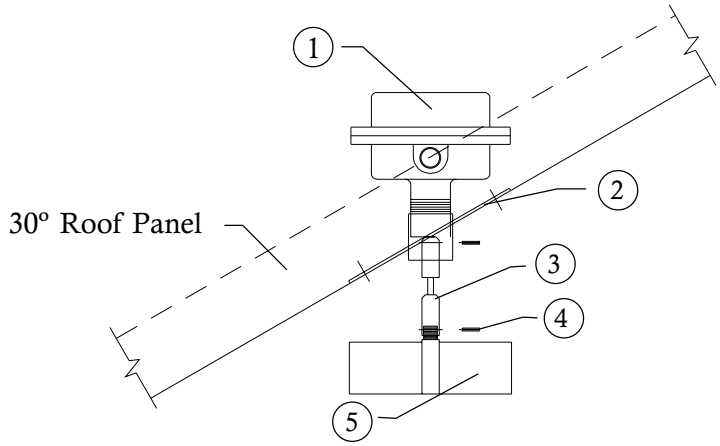

Figure #64

Key	Part No.	Description	Quantity	Weight
1	TD-100076	Rotary Switch Power-Pak	1	3.50
2	TD-100627	Roof Mount Coupling Weldment	1	2.14
3	TD-100075	Flex-Coupling	1	0.50
4	S-7241	1/8" x 1.1/4" Cotter Pin	2	0.02
5	TAF-6086	3-Vane Paddle	1	0.75
*	TAF-6097	Hardware Package	1	0.98
--	PNEG-300	Rotary Switch Instructions	1	0.04
--	S-275	5/16" - 18 x 3/4" Bin Bolt	6	0.16
--	S-3651	Tube Seal	1	0.74
--	S-396	5/16" - 18 Hex Nut	6	0.06
--	S-7241	1/8" x 1.1/4" Cotter Pin	2	0.02

* Hardware Package not shown

\- Included in Hardware Package

INSTALLATION OF WALL-MOUNTED ROTARY SWITCHES

Note: Wall mounted switch must be located at least 3' below the fan opening.

Drill 2" hole through wall 3' below the upper fan and heating unit(s). IF BIN IS 2.66" corrugation, hole should be centered on outside hill (see Figure #54 below) IF BIN IS 4.00" corrugation, hole should be centered on outside valley.

Position mount plate (from inside), mark and drill 3/8" holes. Caulk coupling abundantly where it passes through the wall. Add foam weather strip around top and sides of plate then bolt to bin wall. Caulk coupling to wall from outside. Attach flex coupling to power-pak. Add teflon tape or pipe (sealant not included) to power-pak pipe threads and thread into coupling. Conduit opening should be horizontal or down. Add one-vane paddle.

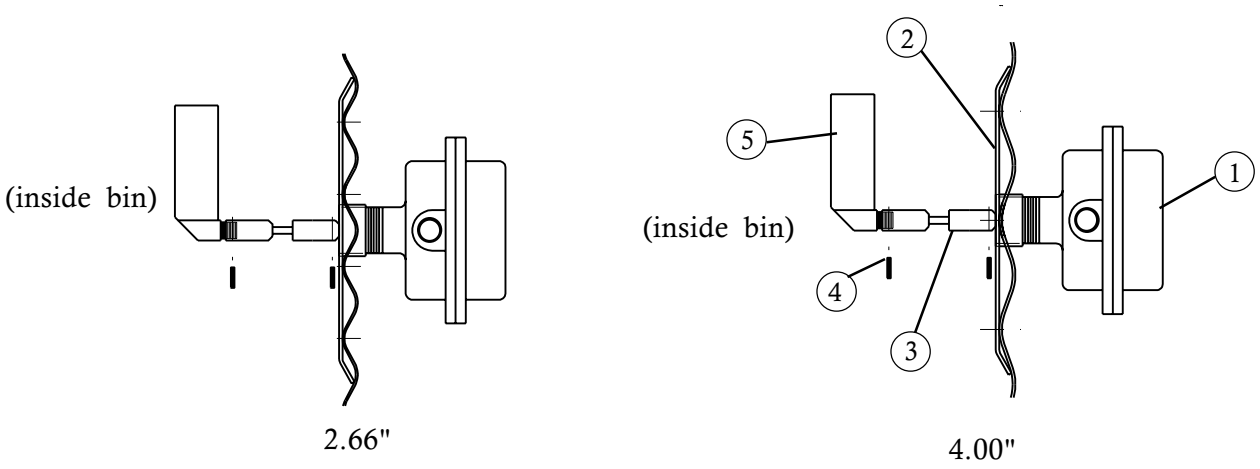

Figure #65

Key	Part No.	Description	Quantity	Weight
1	TD-100076	Rotary Switch Power-Pak	1	3.50
2	TD-100629	Roof Mount Coupling Weldment	1	2.14
3	TD-100075	Flex-Coupling	1	0.50
4	S-7241	1/8" x 1.1/4" Cotter Pin	2	0.02
5	TAF-6085	1-Vane Paddle	1	0.75
*	TAF-6097	Hardware Package	1	0.98
--	PNEG-300	Rotary Switch Instructions	1	0.04
--	S-275	5/16" - 18 x 3/4" Bin Bolt	6	0.16
--	S-3651	Tube Seal	1	0.74
--	S-396	5/16" - 18 Hex Nut	6	0.06
--	S-7241	1/8" x 1.1/4" Cotter Pin	2	0.02

ASSEMBLY OF HIGH/LOW LIMIT ROTARY SWITCHES

Attach flex-coupling to the power-pak. Apply teflon tape or pipe sealant (not included) to power-pak pipe threads and thread power-pak into mounting plate coupling. Conduit opening in power-pak should be at right angles to roof rib or face toward eave. Caulk underside of mounting plate above and both sides of 2" hole. Bolt to roof panel. Attach shaft extension according to diagram at left. Use teflon tape or pipe sealant (not included) on shaft guard and thread to underside of mount plate coupling. Add 1/4" drilled coupling and paddle. (Note: single vane paddle is used on Low level switch. Also, be sure to use roll pins when instructed. If cotter pins are used, bend back fully to educe shaft guard interference to rotation.)

Low Limit Rotary Switch
TAF-6100

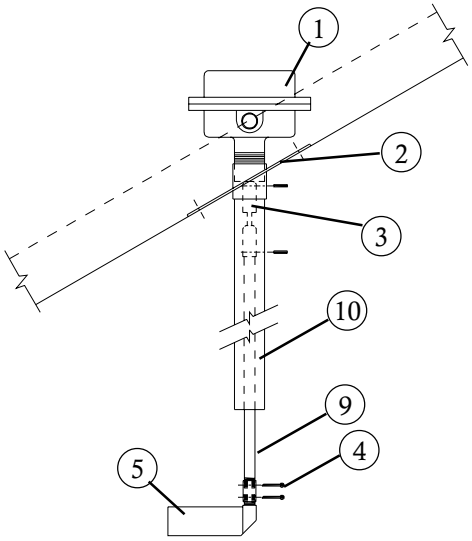

High Limit Rotary Switch
TAF-6103

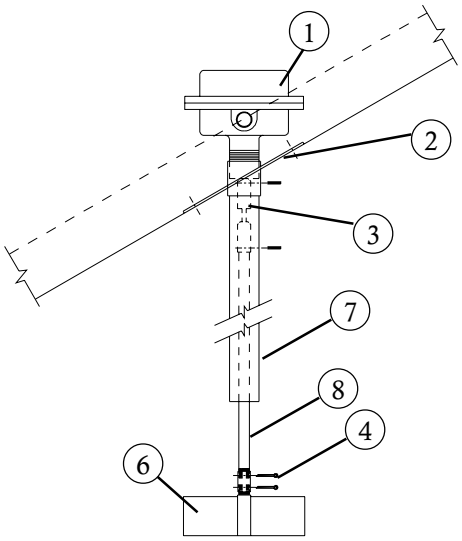

Figure #66

Key	Part No.	Description	Quantity	Weight
1	TD-100076	Rotary Switch Power-Pak	1	3.50
2	TD-100629	Roof Mount Coupling Weldment	1	2.14
3	TD-100075	Flex-Coupling	1	0.50
4	S-7241	1/8" x 1.1/4" Cotter Pin	2	0.02
5	TAF-6085	1-Vane Paddle	1	0.75
6	TAF-6086	3-Vane Paddle	1	0.75
7	TAF-6091	8" Shaft Guard	1	0.81
8	TAF-6092	5" Shaft Extension	1	0.20
9	TAF-6094	34" Shaft Extension	1	1.52
10	TAF-6093	34" Shaft Guard	1	2.04
*	TAF-6096	Hardware Package	1	0.98
--	PNEG-300	Rotary Switch Instructions	1	0.04
--	S-275	5/16" - 18 x 3/4" Bin Bolt	6	0.16
--	S-3651	Tube Seal	1	0.74
--	S-396	5/16" - 18 Hex Nut	6	0.06
--	S-7241	1/8" x 1.1/4" Cotter Pin	2	0.02

TRANSITION INSTALLATION (TR-4734)

BEFORE CUTTING THE OPENING CHECK THAT TR-4734 IS THE TRANSITION THAT WAS ORDERED.

When installing the GSI aeration transition, it will be necessary to field cut a hole into the bottom sidewall ring (usually straight across from the unload auger). Refer to diagram for proper dimensions of cutout. The base angle will also need to be cut at entrance collar cutout. Take note of the diagram showing the 1" dimension from bottom of entrance collar side bracket to concrete. This is important for proper fit of transition.

NOTE: Entrance collar side bracket must be bolted on the inside of the bin sidewall.

AS VIEWED FROM INSIDE BIN

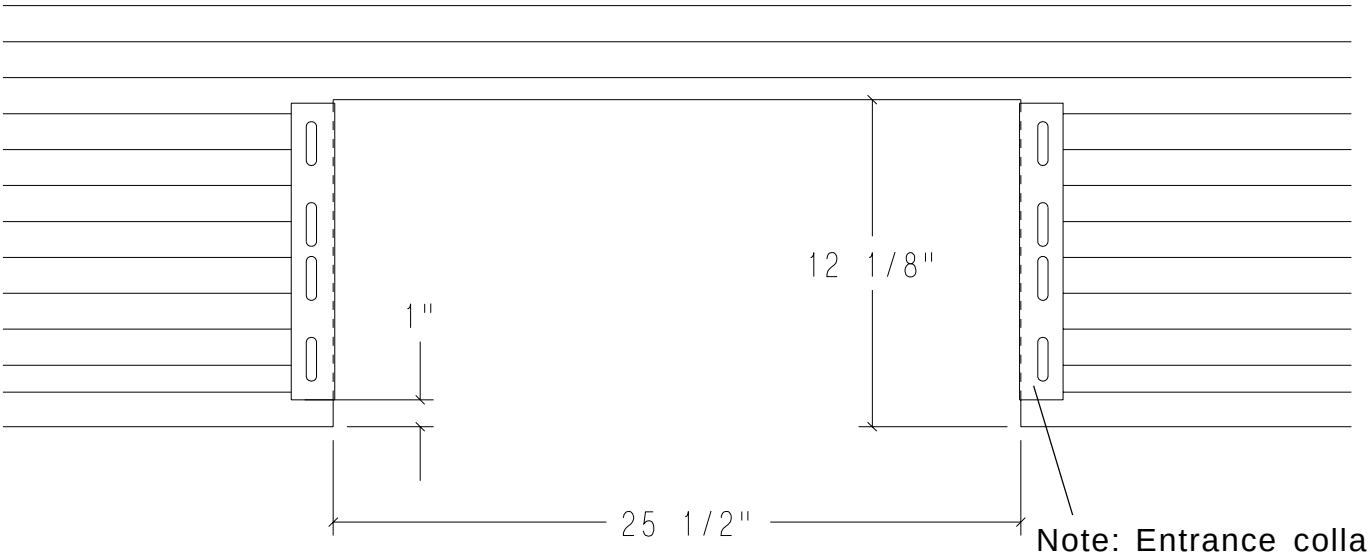

Figure #67

Part No.	Description	Quantity
S-275	5/16" - 18 3/4" Bin Bolt Grade 5	125
S-280	#10 - 16 x 5/8" Self Drill Screw	10
S-3651	Tube Caulk - Gray Butyl #506-15	1
S-396	5/16" - 18 Hex Nut Grade 2	125
S-7264	Spec Neoprene Seal Strip W/ADH	10 Ft

TRANSITION ASSEMBLY
TR-4734

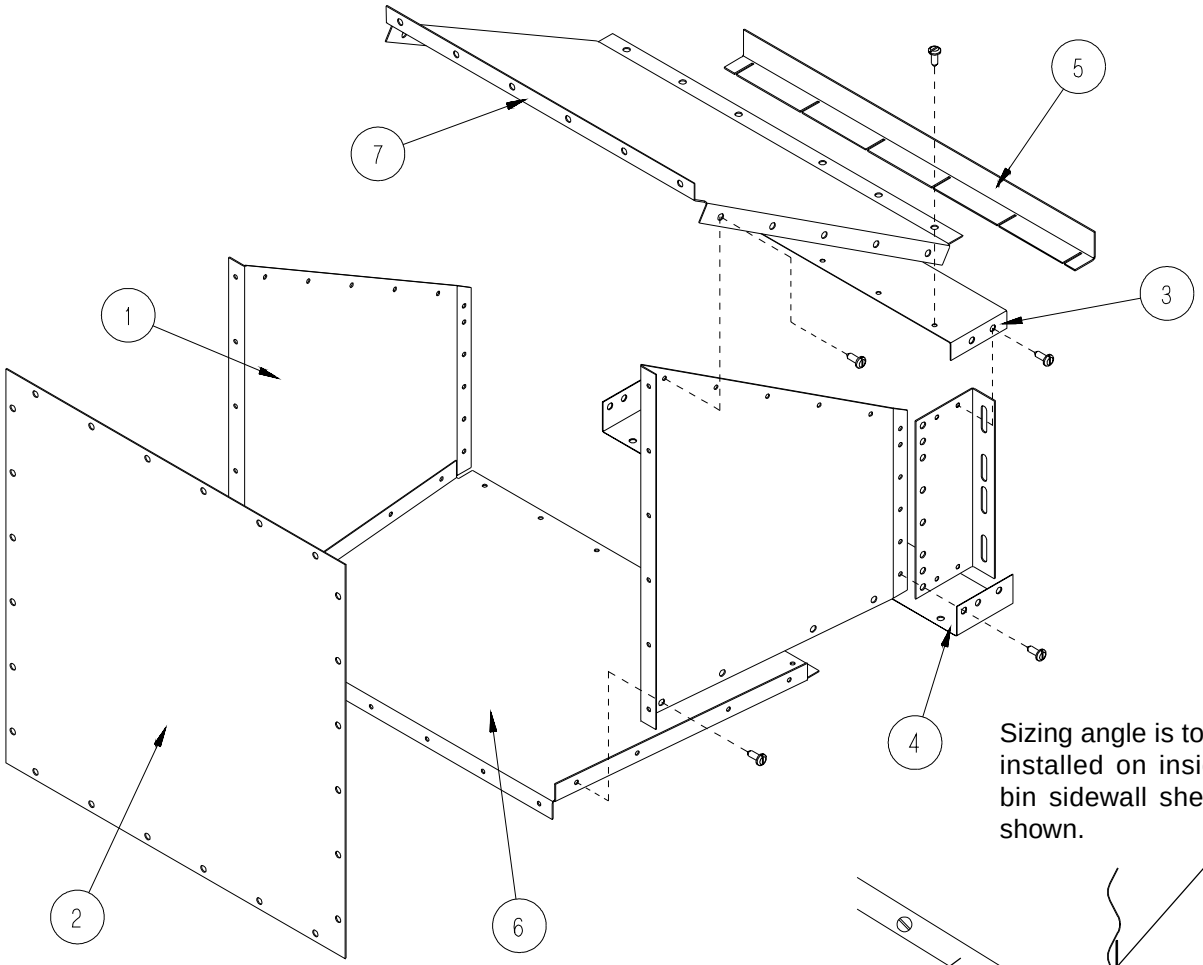

Sizing angle is to be installed on inside of bin sidewall sheet as shown.

The flanges on transition top are to go on the outside of transition sides. The flanges on transition bottom are to go on the inside of transition sides.

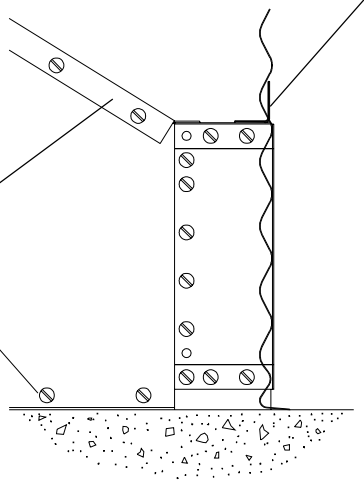

Figure #68

Key	Part Number	Description
1	TR-4724-1	Transition side
1	TR-4724-2	Transition side
2	TR-4767	Transition faceplate
3	TR-4726	Top entrance collar piece
4	TR-4727	Bottom entrance collar
5	TR-4728	Sizing angle
6	TR-4729	Transition bottom
7	TR-4730	Transition top
8	TR-4731	Entrance collar side bracket

* Hardware Package not shown

\- Included in Hardware Package

TWO RING DOOR INSTALLATION & ACCESSORIES

4.00" Bin Corrugation
WD-4230
12 Bearing Pins Per Side

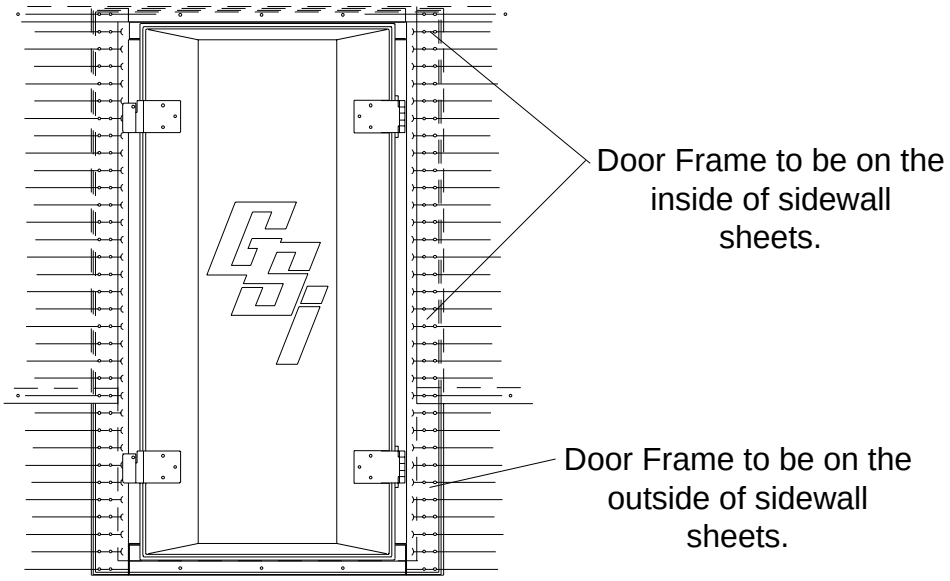

Figure #70

Before starting to install, be sure correct door has been received. The surest check is by counting the number of bearing pins down one side.

1.) Apply double row of rope caulk along door flanges, noting how door and bin sheets lap. Remove inner door hinges, inner door panels, and outer door cover. Set door frame into opening. **Insert all bolts, but do not tighten at this time.**
2.) Reinstall inner door panels at original locations. Close latches to lock panels in place. Be sure that panels are fully seated over all bearing pins. **Now tighten frame bolts starting at center and working toward top and bottom on each side.** Install inner panel hinge bolts and tighten.
3.) Keep inner panels latched and loosen all bearing pin bolts. Re-tighten all bearing pin bolts. This makes loading on pins uniform for easier operation of panels.
4.) If some handles require excessive force to lock, loosen latch bolts and adjusting bar bolts. Check that the panels are fully seated over all bearing pins, tap adjusting bars up or down for easier operation. Re-tighten bolts when operation is satisfactory.
5.) Re-install outer cover. Adjust hinges and latches as required.
6.) Assemble door hold back as shown on next page. Open door cover until it approaches the bin wall. Hook retaining bracket over lower latch mount and position the door hold back against bin wall in a valley. Drill a 3/8" hole through the bin wall and bolt the door hold back to the bin.

2-RING DOOR ASSEMBLY

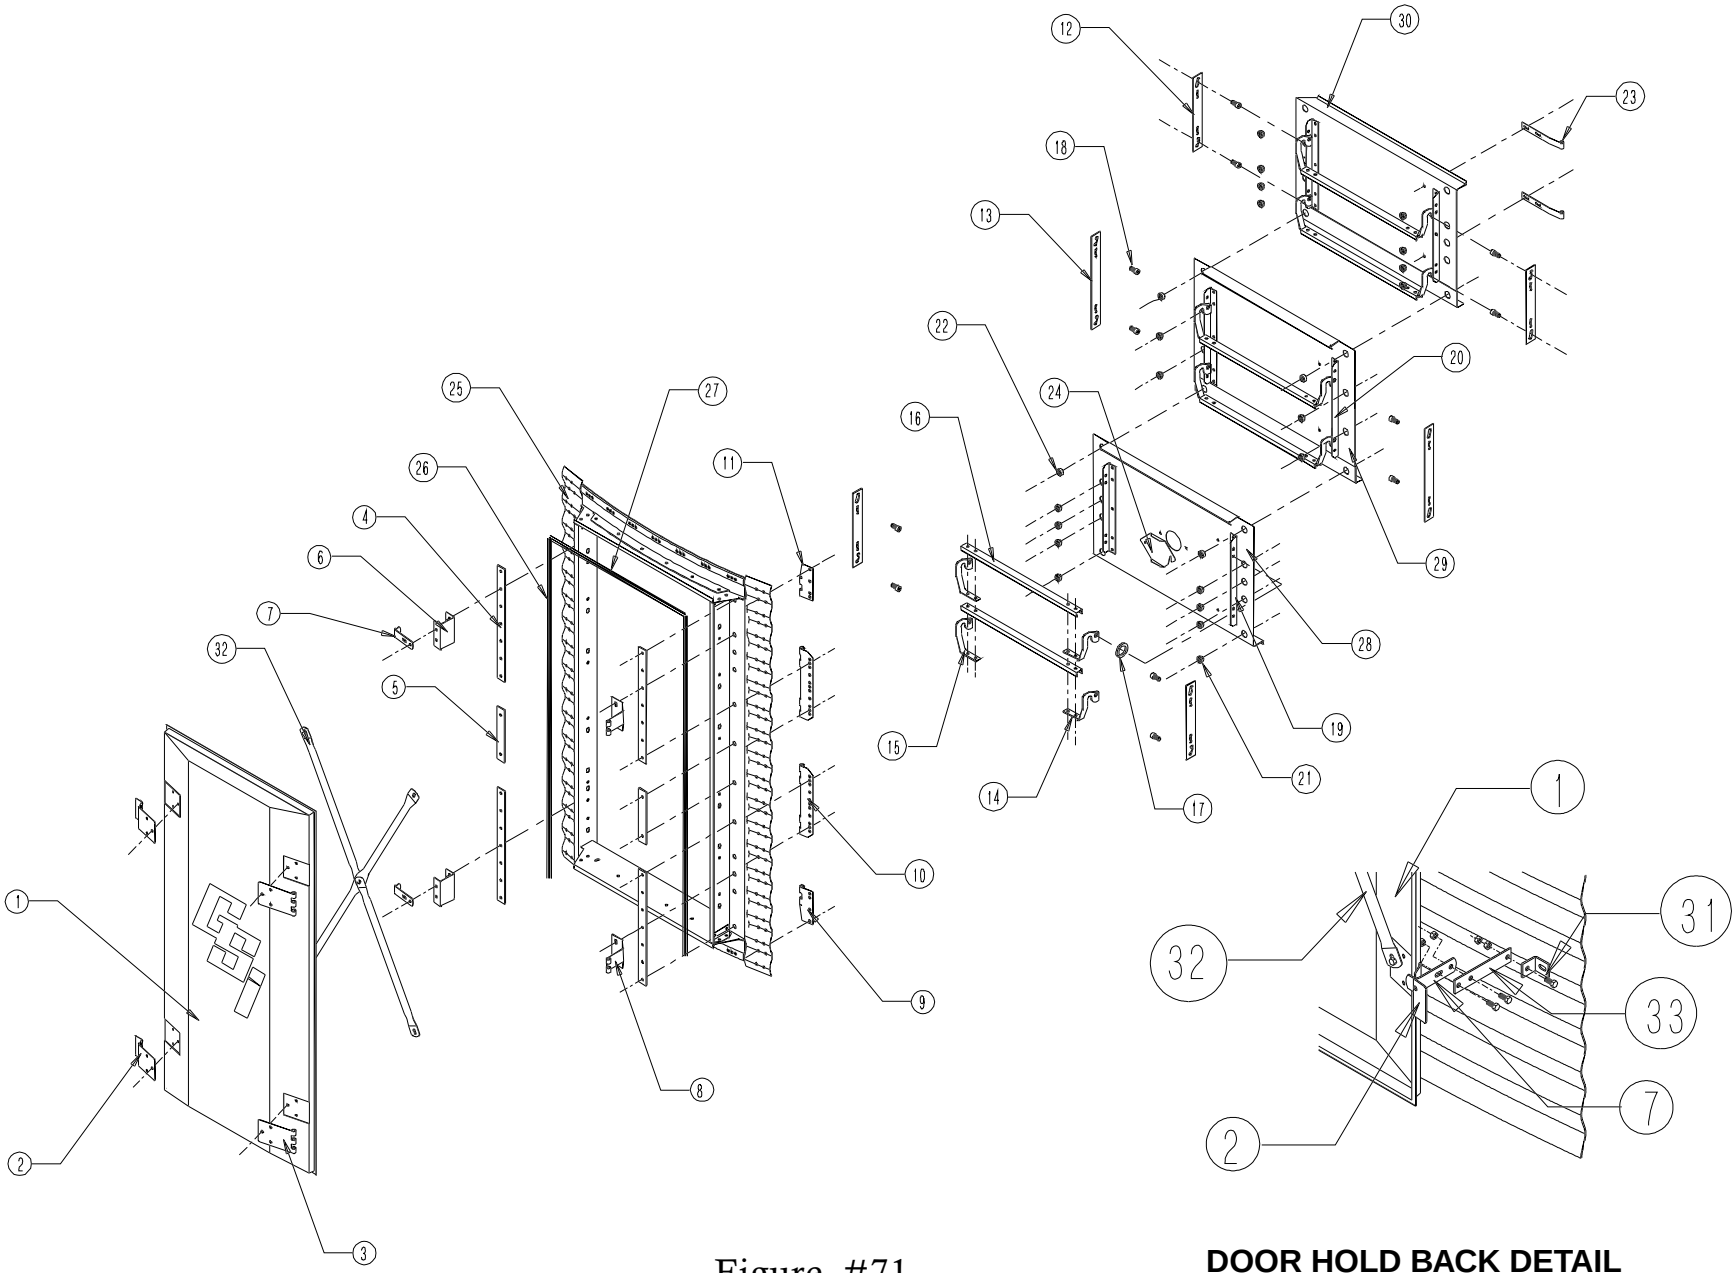

Figure #71

DOOR HOLD BACK DETAIL

PARTS LIST FOR 2-RING DOORS

		PART NUMBER				QUANTITY	QUANTITY
		18'-27' BIN DIAMETER		30' & 36' BIN DIAMETER		18'-27' BIN	30 & 36' BIN
KEY	DESCRIPTION	2.66" CORR.	4.00" CORR.	2.66" CORR.	4.00" CORR.	DIAMETER	DIAMETER
1	DOOR COVER	WD-039	WD-039	WD-039	WD-039	1	1
2	LATCH MOUNT	WD-2854	WD-2854	WD-2854	WD-2854	2	2
3	OUTER DOOR HINGE	WD-225	WD-225	WD-225	WD-225	2	2
4	TOP & BOTTOM CAP BAR	WD-6096	WD-6096	WD-6096	WD-6096	4	4
5	CENTER CAP BAR	WD-6098	WD-6098	WD-6097	WD-6097	2	2
6	OUTSIDE LATCH MOUNT	WD-6102	WD-6102	WD-6102	WD-6102	2	2
7	DOOR RETAINER	WD-033	WD-033	WD-033	WD-033	3	3
8	DOOR HINGE BASE	WD-6066	WD-6066	WD-6066	WD-6066	2	2
9	BOTTOM INNER DOOR HINGE	WD-6055	WD-6055	WD-6055	WD-6055	1	1
10	MIDDLE INNER DOOR HINGE	WD-6056	WD-6056	WD-6056	WD-6056	2	2
11	TOP INNER DOOR HINGE	WD-6054	WD-6054	WD-6054	WD-6054	1	1
12	LATCH ADJUST BAR - TOP & BOTTOM	WD-6093	WD-6093	WD-6093	WD-6093	4	4
13	LATCH ADJUST BAR - MIDDLE	WD-6094	WD-6094	WD-6094	WD-6094	2	2
14	INSIDE PANEL LATCH - RIGHT HAND	WD-6037	WD-6037	WD-6037	WD-6037	6	6
15	INSIDE PANEL LATCH - LEFT HAND	WD-6038	WD-6038	WD-6038	WD-6038	6	6
16	LATCH BAR	WD-6039	WD-6039	WD-6039	WD-6039	6	6
17	LATCH BUSHING	WD-6040	WD-6040	WD-6040	WD-6040	12	12
18	1/2" X 1" HEX SOCKET CAPSCREW	S-7160	S-7160	S-7160	S-7160	12	12
19	TOP & BOTTOM INSIDE PANEL REINF. ANGLE	WD-6041	WD-6041	WD-6041	WD-6041	4	4
20	MIDDLE INSIDE PANEL REINF. ANGLE	WD-6042	WD-6042	WD-6042	WD-6042	2	2
21	SHORT BEARING PIN 2-RING DOOR	WD-6036	WD-6036	WD-6036	WD-6036	20	34
22	LONG BEARING 2-RING DOOR	WD-6079	WD-6079	WD-6079	WD-6079	4	4
23	INNER DOOR HINGE STRAP	WD-6053	WD-6053	WD-6053	WD-6053	6	6
24	INNER DOOR PORT HOLE COVER	WD-6028	WD-6028	WD-6028	WD-6028	1	1
25	DOOR FRAME ASSEMBLY	WD-6063F	WTD-4228PH	WD-6062F	WTD-4229PH	1	1
26	RUBBER TRIM SEAL STRIP	S-4380DR	S-4380DR	S-4380DR	S-4380DR	10 FT.	10 FT.
27	RUBBER TRIM SEAL STRIP	S-4380	S-4380	S-4380	S-4380	2.1/4 FT.	2.1/4 FT.
28	BOTTOM INNER DOOR PANEL	WD-6044	WD-6044	WD-6043	WD-6043	1	1
29	MIDDLE INNER DOOR PANEL	WD-6046	WD-6046	WD-6045	WD-6045	1	1
30	TOP INNER DOOR PANEL	WD-6048	WD-6048	WD-6047	WD-6047	1	1
31	DOOR HOLDER	WD-1302	WD-1302	WD-1302	WD-1302	1	1
32	DOOR COVER BRACE	WD-035	WD-035	WD-035	WD-035	4	4
33	DOOR HOLD BACK EXTENSION	WD-6110	WD-6110	WD-6110	WD-6110	1	1

OPTIONAL BIN STEP ASSEMBLY

WD-042

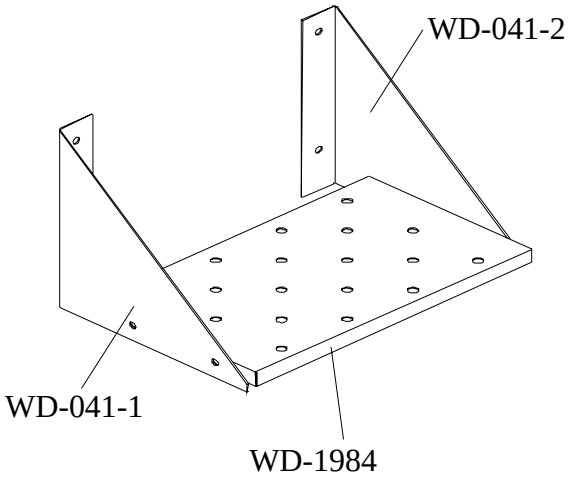

Field drill holes in sidewall
sheet on ridge of corrugation.

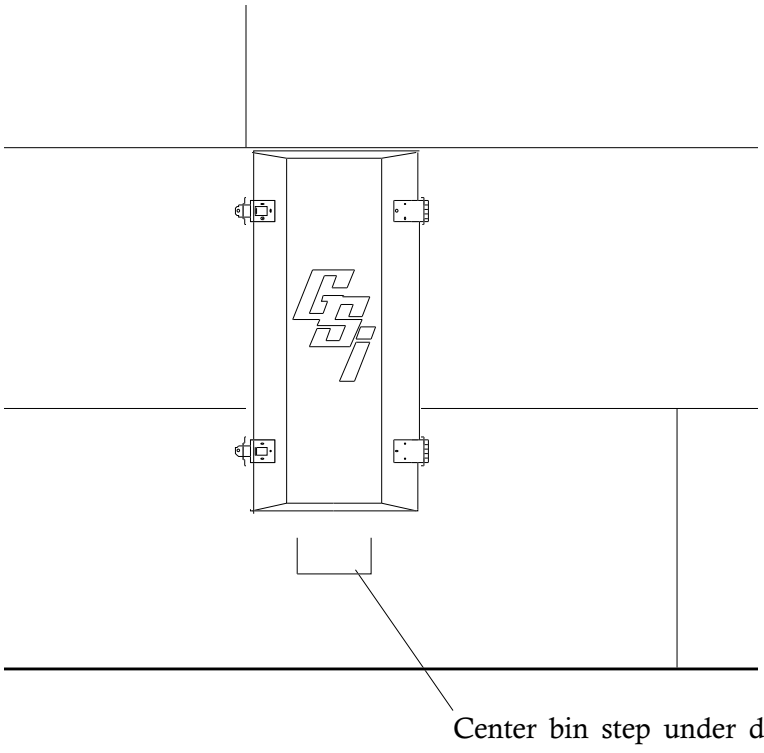

Figure #72

BASE ANGLE

B-6753

Once the door frame has been placed and secured, continue adding necessary sidewall ring(s). To the lower edge of the bottom ring, attach the base angle ring. Before lowering the bin, apply mastic sealer to the entire underneath side of the base angle. (See below.) Next, lower the bin onto the foundation and check for an adequate seal.

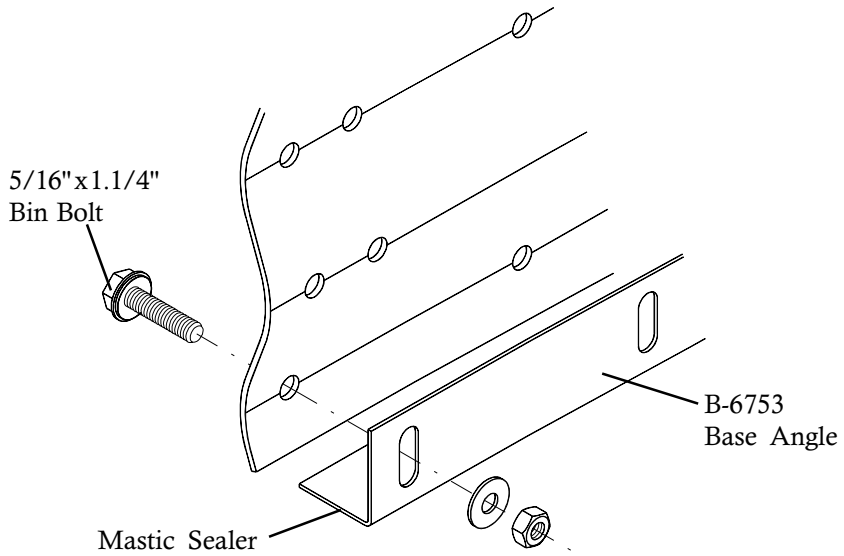

BASE STIFFENER SHIM

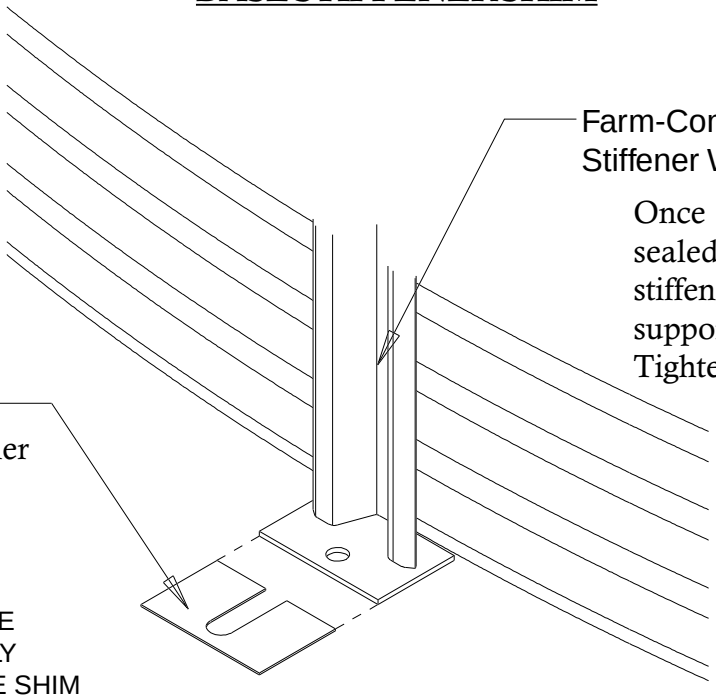

Once the bin is set down and sealed place shims under stiffeners so that they all are supported to the concrete. Tighten anchor bolts.

IT IS IMPORTANT THE STIFFENER BE FULLY SUPPORTED BY THE SHIM PLATE (FC-42077) TO FILL ANY GAP BETWEEN BASE PLATE AND CONCRETE.

Figure #73